

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions when working on the fuel supply system	4
4 Safety precautions when working on vehicles with start/stop system	5
5 Safety precautions when using testers and measuring instruments during a road test	6
6 Safety precautions when working on the cooling system	7
7 Safety precautions when working on the exhaust system	8
8 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	9
9 General repair instructions	10
9.1 Different types of glow plugs	10
9.2 Handling ceramic glow plugs	11
9.3 Nuts, bolts	11
9.4 Identification plates	12
9.5 Use of impact wrenches	12
9.6 Foreign particles in engine	12
9.7 Checking vacuum system	12
9.8 Checking for leaks in the fuel system	13
9.9 Contact corrosion	13
9.10 Installing radiators, condensers and charge air coolers	14
9.11 Routing and attachment of pipes, hoses and wiring	14
10 - Removing and installing engine	15
1 Removing engine	15
2 Securing engine to engine and gearbox support	39
3 Installing engine	40
13 - Crankshaft group	45
1 Dismantling and assembling engine	45
1.1 Moving lock carrier to service position	45
2 Servicing work on pulley end	50
2.1 Exploded view - poly V-belt drive	50
2.2 Removing and installing poly V-belt	52
2.3 Removing and installing tensioner for poly V-belt	54
2.4 Removing and installing vibration damper	57
2.5 Removing and installing bracket for ancillaries	60
2.6 Toothed belt drive	65
2.7 Removing and installing toothed belt	68
2.8 Rotating crankshaft to TDC	78
3 Removing and installing sealing flanges and dual-mass flywheel / flywheel	82
3.1 Exploded view - sealing flanges and dual-mass flywheel / flywheel	82
3.2 Renewing crankshaft oil seal (pulley end)	84
3.3 Removing and installing sealing flange (front)	87
3.4 Removing and installing dual-mass flywheel	93
3.5 Renewing rear sealing flange	94
4 Removing and installing crankshaft	105
4.1 Exploded view - crankshaft	105
4.2 Extracting and driving in needle bearing for crankshaft	107
4.3 Crankshaft dimensions	108
4.4 Converting balance shaft assembly to spur gear drive	108



4.5	Pulling spur gear off crankshaft and shrink-fitting new spur gear	111
5	Dismantling and assembling pistons and conrods	115
5.1	Exploded view - pistons and conrods	115
5.2	Checking piston projection at TDC	119
5.3	Piston and cylinder dimensions	121
5.4	Measuring radial clearance of conrods	121
15	- Cylinder head, valve gear	123
1	Handling glow plugs	123
1.1	Ceramic glow plugs	123
1.2	Handling ceramic glow plugs	124
2	Removing and installing cylinder head	125
2.1	Exploded view - cylinder head	125
2.2	Removing and installing cylinder head cover	129
2.3	Removing and installing cylinder head	130
2.4	Checking compression	150
3	Servicing valve gear	151
3.1	Exploded view - valve gear	151
3.2	Checking axial clearance of camshafts	153
3.3	Renewing camshaft oil seals	154
3.4	Removing and installing camshafts	160
3.5	Removing and installing roller rocker fingers	171
3.6	Renewing valve stem oil seals with cylinder head installed	172
3.7	Renewing valve stem oil seals with cylinder head removed	177
3.8	Checking hydraulic tappets	183
3.9	Valve dimensions	184
3.10	Machining valve seats	185
3.11	Checking valve guides	185
3.12	Checking valves	186
17	- Lubrication	187
1	Removing and installing parts of lubrication system	187
2	Servicing sump, oil pump and balance shaft assembly with chain drive	188
2.1	Exploded view - sump, oil pump, balance shaft assembly with chain drive	188
2.2	Removing and installing sump	191
2.3	Removing and installing balance shaft assembly with chain drive	204
2.4	Removing and installing chain tensioner for balance shaft assembly	210
2.5	Removing and installing oil pump	212
3	Servicing sump, oil pump and balance shaft assembly with spur gear drive	214
3.1	Exploded view - sump, oil pump, balance shaft assembly with spur gear drive	214
3.2	Removing and installing sump	218
3.3	Removing and installing oil pump	230
3.4	Removing balance shaft assembly	231
3.5	Installing a new balance shaft assembly	232
3.6	Re-installing the "old" balance shaft assembly	237
4	Servicing oil filter bracket with oil cooler	240
4.1	Exploded view - oil filter bracket with oil cooler	240
4.2	Removing and installing oil filter bracket with oil cooler	242
4.3	Checking oil pressure and oil pressure switch	246
4.4	Engine oil	248
4.5	Checking oil level	248
19	- Cooling	249
1	Removing and installing parts of cooling system	249
1.1	Parts of cooling system	249

1.2	Draining and filling cooling system	251
1.3	Removing and installing coolant pump	260
1.4	Removing, installing and checking thermostat	261
1.5	Removing and installing coolant pipe (top)	263
1.6	Removing and installing coolant pipe (bottom)	264
1.7	Removing and installing radiator	266
1.8	Removing and installing radiator cowl	271
1.9	Removing and installing radiator fans	273
1.10	Renewing radiator fan motor	273
1.11	Checking cooling system for leaks	274
21	- Turbocharging/supercharging	277
1	Servicing charge air system with turbocharger	277
1.1	Exploded view - turbocharger for engine codes BLB, BNA, BRE, BVF, BVG	277
1.2	Removing and installing turbocharger - engine codes BLB, BNA, BRE, BVF, BVG	279
1.3	Exploded view - turbocharger for engine codes BRD, BVA	286
1.4	Removing and installing turbocharger - engine codes BRD and BVA	288
1.5	Exploded view - charge air cooling	294
1.6	Removing and installing charge air cooler (left-side)	296
1.7	Removing and installing charge air cooler (right-side)	297
1.8	Removing and installing charge pressure sender G31 / intake air temperature sender G42	298
1.9	Checking charge air system for leaks	299
26	- Exhaust system	302
1	Exhaust system without particulate filter	302
1.1	Exploded view - exhaust system	302
1.2	Separating centre and rear silencers	304
1.3	Removing and installing front exhaust pipe	306
1.4	Removing and installing front exhaust pipe with catalytic converter	307
1.5	Stress-free alignment of exhaust system	310
1.6	Checking exhaust system for leaks	312
2	Exhaust system with particulate filter	313
2.1	Exploded view - exhaust system on vehicles with front-wheel drive	313
2.2	Disconnecting centre silencer and rear silencer - vehicles with front-wheel drive	316
2.3	Exploded view - exhaust system on vehicles with four-wheel drive	317
2.4	Separating Y-pipe and rear silencer - vehicles with four-wheel drive	320
2.5	Exploded view - front exhaust pipe with mountings on vehicles with manual gearbox	322
2.6	Removing and installing front exhaust pipe - vehicles with manual gearbox	323
2.7	Exploded view - front exhaust pipe with mountings on vehicles with multitronic gearbox	325
2.8	Removing and installing front exhaust pipe - vehicles with multitronic gearbox	327
2.9	Removing and installing particulate filter - vehicles with manual gearbox	331
2.10	Removing and installing particulate filter - vehicles with multitronic gearbox	334
2.11	Stress-free alignment of exhaust system	338
2.12	Checking exhaust system for leaks	342
3	Exhaust manifold	343
3.1	Exploded view - exhaust manifold	343
3.2	Removing and installing exhaust manifold	344
4	Exhaust gas temperature control	346
4.1	Removing and installing exhaust gas temperature sender 1 G235	346
4.2	Removing and installing temperature sender before particulate filter G506	348
4.3	Removing and installing temperature sender after particulate filter G527 - vehicles with manual gearbox	352
4.4	Removing and installing temperature sender after particulate filter G527 - vehicles with multitronic gearbox	355
5	Exhaust gas recirculation system	357
5.1	Exploded view - exhaust gas recirculation system	357



5.2	Removing and installing exhaust gas recirculation cooler	358
5.3	Removing and installing vacuum unit for exhaust gas recirculation cooler	360