

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
4.2 Checking for leaks in the fuel system	5
4.3 Foreign particles in engine	5
4.4 Contact corrosion!	5
4.5 Routing and attachment of pipes, hoses and wiring	6
4.6 Installing radiators, condensers and charge air coolers	6
4.7 Checking vacuum system	6
10 - Removing and installing engine	7
1 Removing and installing engine - vehicles with manual gearbox	7
1.1 Removing engine	7
1.2 Separating engine from manual gearbox	22
1.3 Installing engine	26
2 Removing and installing engine - vehicles with multitronic gearbox	34
2.1 Removing engine	34
2.2 Separating engine from multitronic gearbox	50
2.3 Installing engine	54
3 Removing and installing engine - vehicles with automatic gearbox	61
3.1 Removing engine	61
3.2 Separating engine and automatic gearbox	77
3.3 Installing engine	83
4 Securing engine to engine and gearbox support	92
13 - Crankshaft group	95
1 Cylinder block (pulley end)	95
1.1 Moving lock carrier into service position	95
1.2 Poly V-belt drive - exploded view	97
1.3 Removing and installing poly V-belt	101
1.4 Removing and installing tensioner for poly V-belt	103
1.5 Removing and installing idler roller for poly V-belt	104
1.6 Removing and installing vibration damper	106
1.7 Renewing crankshaft oil seal (pulley end)	106
1.8 Removing and installing sealing flange (front)	108
2 Cylinder block (gearbox end)	112
2.1 Vacuum pump - exploded view	112
2.2 Removing and installing vacuum pump	112
2.3 Dual-mass flywheel on vehicles with manual gearbox - exploded view	114
2.4 Removing and installing dual-mass flywheel	115
2.5 Extracting and driving in needle bearing for dual-mass flywheel	116
2.6 Flywheel for vehicles with multitronic gearbox - exploded view	117
2.7 Removing and installing damper unit - vehicles with multitronic gearbox	118
2.8 Removing and installing flywheel - vehicles with multitronic gearbox	119
2.9 Drive plate - exploded view	120
2.10 Removing and installing drive plate	121
2.11 Renewing crankshaft oil seal (gearbox end)	122
3 Crankshaft	125



3.1	Crankshaft - exploded view	125
3.2	Crankshaft dimensions	127
3.3	Measuring axial clearance	127
3.4	Measuring radial clearance	128
4	Pistons and conrods	129
4.1	Pistons and conrods - exploded view	129
4.2	Checking piston projection at TDC	132
4.3	Piston and cylinder dimensions	134
4.4	Checking radial clearance of conrod bearings	134
15	Cylinder head, valve gear	135
1	Chain drive	135
1.1	Timing chain covers - exploded view	135
1.2	Removing and installing timing chain covers	136
1.3	Camshaft timing chain - exploded view	141
1.4	Removing and installing camshaft timing chain	144
1.5	Removing camshaft timing chain from camshafts	151
1.6	Drive chain for valve gear - exploded view	160
1.7	Removing and installing drive chain for valve gear	162
1.8	Drive chain for oil pump and balance shaft - exploded view	163
1.9	Removing and installing drive chain for oil pump and balance shaft	165
1.10	Balance shaft - exploded view	169
1.11	Removing and installing balance shaft	170
2	Cylinder head	174
2.1	Cylinder head - exploded view	174
2.2	Cylinder head cover - exploded view	177
2.3	Removing and installing cylinder head cover	180
2.4	Removing cylinder head - vehicles up to 09.2005	185
2.5	Removing cylinder head - vehicles from 09.2005 onwards	188
2.6	Installing cylinder head	192
2.7	Checking compression	196
3	Valve gear	199
3.1	Valve gear - exploded view	199
3.2	Checking axial clearance of camshafts	201
3.3	Renewing camshaft oil seal	202
3.4	Removing and installing camshafts - cylinder head (left-side)	205
3.5	Removing and installing camshafts - cylinder head (right-side)	212
3.6	Renewing valve stem oil seals with cylinder head installed	218
3.7	Renewing valve stem oil seals with cylinder head removed	222
3.8	Checking hydraulic valve compensation elements	225
3.9	Valve dimensions	226
3.10	Machining valve seats	226
3.11	Checking valve guides	226
3.12	Checking valves	227
17	Lubrication	228
1	Lubrication system	228
1.1	Oil pump, sump (bottom section) - exploded view	228
1.2	Removing and installing sump (bottom section)	229
1.3	Removing and installing oil pump	232
1.4	Sump (top section) - exploded view	234
1.5	Removing and installing sump (top section)	235
1.6	Engine oil cooler, pressure control valve and oil filter housing - exploded view	238
1.7	Removing and installing engine oil cooler	240
1.8	Removing and installing oil filter housing	241

1.9	Removing and installing pressure control valve for crankcase breather system	245
1.10	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	246
1.11	Removing and installing oil pressure switch F1	247
1.12	Checking oil pressure	248
1.13	Engine oil	250
1.14	Checking oil level	250
19	- Cooling	251
1	Cooling system	251
1.1	Draining and filling cooling system	251
1.2	Coolant pump and thermostat - exploded view	258
1.3	Removing and installing coolant pump	259
1.4	Removing and installing hose connection with thermostat	261
1.5	Removing and installing coolant temperature sender G62	263
1.6	Removing and installing coolant pipe (front)	263
1.7	Removing and installing coolant pipe (left-side)	265
1.8	Removing and installing coolant pipe (right-side)	269
1.9	Removing and installing coolant pipe (rear)	275
1.10	Removing and installing radiator	278
1.11	Removing and installing radiator fan (left-side)	285
1.12	Removing and installing radiator fan (right-side)	285
1.13	Checking cooling system for leaks	287
21	- Turbocharging/supercharging	290
1	Turbocharger and charge air cooler	290
1.1	Turbocharger for vehicles with 2.7 ltr. engine - exploded view	290
1.2	Removing and installing turbocharger on vehicles with 2.7 ltr. engine	292
1.3	Removing and installing turbocharger 1 control unit J724 - vehicles with 2.7 ltr. engine	297
1.4	Removing and installing intermediate flange on vehicles with 2.7 ltr. engine	308
1.5	Turbocharger for vehicles with 3.0 ltr. engine - exploded view	308
1.6	Removing and installing turbocharger on vehicles with 3.0 ltr. engine	311
1.7	Removing and installing turbocharger 1 control unit J724 - vehicles with 3.0 ltr. engine	316
1.8	Removing and installing intermediate flange on vehicles with 3.0 ltr. engine	325
1.9	Charge air cooler - exploded view	325
1.10	Removing and installing charge air cooler	327
1.11	Removing and installing charge pressure sender G31	328
26	- Exhaust system	329
1	Exhaust system on vehicles without particulate filter	329
1.1	Exhaust system - exploded view	329
1.2	Separating Y-pipe and rear silencers	332
1.3	Renewing tailpipe	333
1.4	Removing and installing starter catalytic converter	333
1.5	Removing and installing front exhaust pipe with catalytic converter	337
1.6	Stress-free alignment of exhaust system	339
1.7	Aligning tailpipes	340
2	Exhaust system on vehicles with particulate filter	341
2.1	Exhaust system - exploded view	341
2.2	Separating Y-pipe and rear silencers	347
2.3	Renewing tailpipe	348
2.4	Removing and installing starter catalytic converter	349
2.5	Removing and installing front exhaust pipe	354
2.6	Removing and installing particulate filter with catalytic converter - vehicles with front-wheel drive	356



2.7	Removing and installing particulate filter with catalytic converter - vehicles with four-wheel drive	357
2.8	Stress-free alignment of exhaust system	358
2.9	Aligning tailpipes	359
3	Exhaust manifolds and intermediate pipes	361
3.1	Exhaust manifold - exploded view	361
3.2	Removing and installing exhaust manifold (left-side)	362
3.3	Removing and installing exhaust manifold (right-side)	364
3.4	Removing and installing intermediate pipe (left-side)	367
3.5	Removing and installing intermediate pipe (right-side)	369
3.6	Checking exhaust system for leaks	369
4	Exhaust gas temperature control	370
4.1	Removing and installing exhaust gas temperature sender 1 G235 - vehicles with 3.0 ltr. engine	370
4.2	Removing and installing exhaust gas temperature sender 2 for bank 1 G448	371
4.3	Removing and installing temperature sender before particulate filter G506	373
5	Exhaust gas recirculation system	374
5.1	Exhaust gas recirculation system - exploded view	374
5.2	Removing and installing mechanical exhaust gas recirculation valve	375
5.3	Removing and installing exhaust gas recirculation cooler	375