

001 - Basic equipment - Lowline, from model year 2001	1-21
1. Basic equipment - Lowline, from model year 2001	1
2. Basic equipment - Lowline, from model year 2001	2
3. Earth connections	3
4. Tail lights	4
5. Earth connections	5
6. Hazard warning lights button, dual tone horn, onboard power supply control unit	6
7. Earth connections	7
8. X contact relief relay, onboard power supply control unit	8
9. Ignition/starter switch, main fuse	9
10. Ashtray illumination, cigarette lighter, fuses, radio connector III	10
11. Steering column electronics control unit, cruise control system	11
12. Glove box light, footwell lights, heated rear window	12
13. Turn signal switch, intermittent wiper switch, steering angle sender, horn plate, steering column electronics control unit	13
14. Fuses, socket, heated washer jets, reversing light switch	14
15. Onboard power supply control unit, steering column electronics control unit, windscreen wiper motor, washer pump, headlight washer system pump	15
16. Control unit with display in dash panel insert	16
17. Lighting switch, headlight range control adjuster, onboard power supply control unit	17
18. Control unit with display in dash panel insert	18
19. Left headlight, left fog light	19
20. Control unit with display in dash panel insert, illumination for dash panel vents, radio controlled clock	20
21. Brake lining/pad wear senders, control unit with display in dash panel insert, diagnostic connector	21
002 - Basic equipment - Highline, from model year 2001	22-42
1. Basic equipment - Highline, from model year 2001	22
2. Basic equipment - Highline, from model year 2001	23
3. Earth connections	24
4. Earth connections	25
5. Ignition/starter switch, main fuse	26
6. Steering column electronics control unit, cruise control system	27
7. Turn signal switch, intermittent wiper switch, steering angle sender, horn plate, steering column electronics control unit	28
8. Onboard power supply control unit, steering column electronics control unit, windscreen wiper motor, washer pump, headlight washer system pump	29
9. Lighting switch, headlight range control adjuster, onboard power supply control unit	30
10. Left headlight, left fog light	31
11. Right headlight, right fog light	32
12. Tail lights	33
13. Hazard warning lights button, dual tone horn, rain sensor, onboard power supply control unit	34
14. Brake light switch, X contact relief relay, onboard power supply control unit	35
15. Ashtray illumination, cigarette lighter, fuses, radio connector III	36
16. Glove box light, footwell lights, heated rear window	37
17. Fuses, socket, heated washer jets	38
18. Control unit with display in dash panel insert	39
19. Control unit with display in dash panel insert	40
20. Control unit with display in dash panel insert, illumination for dash panel vents, radio controlled clock	41
21. Brake lining/pad wear senders, control unit with display in dash panel insert, diagnostic connector	42
003 - 1.6 litre fuel injection engine (75 kW - Simos - 4-cylinder), engine code ALZ, From model year 2001	43-54
1. 1.6 litre fuel injection engine (75 kW - Simos - 4-cylinder), engine code ALZ, From model year 2001	43
2. 1.6 litre fuel injection engine (75 kW - Simos - 4-cylinder), engine code ALZ, From model year 2001	44
3. Battery, starter, alternator, ignition/starter switch, fuses	45
4. Simos control unit, current supply relay for Simos control unit, fuel pump relay, fuses	46
5. Thermostat for mapped-controlled engine cooling, Simos control unit, injectors, fuse for engine electronics	47
6. Air mass meter, coolant temperature sender, brake servo pressure sensor, Simos control unit, by-pass cut-off valve, solenoid valve I, secondary air inlet valve	48
7. Coolant temperature sender, Hall sender, knock sensor I, Simos control unit	49
8. Lambda probes. Simos control unit	50

9. Simos control unit, throttle valve control unit, secondary air pump	51
10. Simos control unit, engine speed sender, accelerator pedal position senders, exhaust gas recirculation potentiometer, exhaust gas recirculation valve	52
11. Simos control unit, ignition coil, spark plugs	53
12. Oil pressure switch, coolant shortage indicator switch, fuel pump, oil level/oil temperature sender, control unit with display in dash panel insert	54
004 - 1.8 litre fuel injection engine (110 kW - Motronic - 4-cylinder), engine code AVJ, From model year 2001	55-67
1. 1.8 litre fuel injection engine (110 kW - Motronic - 4-cylinder), engine code AVJ, From model year 2001	55
2. 1.8 litre fuel injection engine (110 kW - Motronic - 4-cylinder), engine code AVJ, From model year 2001	56
3. Battery, starter, alternator, ignition/starter switch, fuses	57
4. Fuel pump relay, Motronic control unit, Motronic current supply relay, fuses	58
5. Air mass meter, coolant temperature sender - radiator outlet, Motronic control unit, injectors	59
6. Coolant temperature senders, charge air pressure sender, intake air temperature sender, Motronic control unit, by-pass air cut-off valve, charge pressure control solenoid valve	60
7. Engine speed sender, knock sensor I, knock sensor II, Motronic control unit	61
8. Hall sender, Motronic control unit, inlet camshaft timing adjustment valve -1-, secondary air pump, vacuum pump for brakes	62
9. Accelerator pedal position sender, Motronic control unit, throttle valve control part	63
10. Lambda probes, Motronic control unit	64
11. Motronic control unit, ignition coils	65
12. Fuel pump, oil level/oil temperature sender, control unit with display in dash panel insert	66
13. Oil pressure switch, coolant shortage indicator switch, speedometer sender, control unit with display in dash panel insert	67
005 - 2.0 litre fuel injection engine (95 kW - Motronic - 4-cylinder), engine code ALT, From model year 2001	68-79
1. 2.0 litre fuel injection engine (95 kW - Motronic - 4-cylinder), engine code ALT, From model year 2001	68
2. 2.0 litre fuel injection engine (95 kW - Motronic - 4-cylinder), engine code ALT, From model year 2001	69
3. Battery, starter, alternator, fuses	70
4. Fuel pump relay, Motronic control unit, Motronic current supply relay, fuses	71
5. Air mass meter, Motronic control unit, injectors	72
6. Coolant temperature sender, intake air temperature sender, Motronic control unit, activated charcoal filter system solenoid valve I, intake manifold change-over valve	73
7. Engine speed sender, knock sensor, Motronic control unit	74
8. Hall sender, Motronic control unit, secondary air pump, vacuum pump for brakes	75
9. Accelerator pedal position sender, Motronic control unit, throttle valve control part	76
10. Lambda probes, Motronic control unit	77
11. Motronic control unit, ignition coils	78
12. Control unit with display in dash panel insert	79
006 - 3.0 litre fuel injection engine (155 kW - Motronic - 6-cylinder), engine code ASN, From model year 2001	80-96
1. 3.0 litre fuel injection engine (155 kW - Motronic - 6-cylinder), engine code ASN, From model year 2001	80
2. 3.0 litre fuel injection engine (155 kW - Motronic - 6-cylinder), engine code ASN, From model year 2001	81
3. Battery, starter, alternator, voltage regulator, ignition/starter switch	82
4. Fuel pump relay, Motronic control unit, Motronic current supply relay	83
5. Motronic control unit, injectors	84
6. Air mass meter, Motronic control unit, activated charcoal filter system solenoid valve I, secondary air inlet valve, intake manifold change-over valve	85
7. Coolant temperature senders, Motronic control unit, camshaft timing adjustment valves, continued coolant circulation pump	86
8. Engine speed sender, knock sensors, Motronic control unit	87
9. Hall sender, Motronic control unit	88
10. Lambda probes, Motronic control unit	89
11. Lambda probes, Motronic control unit	90
12. Brake servo pressure sensor, Motronic control unit, secondary air pump motor, vacuum pump for brakes	91
13. Accelerator pedal position sender, Motronic control unit, throttle valve control part	92
14. Motronic control unit, ignition coils	93
15. Motronic control unit, ignition coils	94
16. Fuel pump. oil level/oil temperature sender. control unit with display in dash panel insert	95

17. Oil pressure switch, coolant shortage indicator switch, speedometer sender, control unit with display in dash panel insert	96
007 - 1.9 litre unit injector (96 kW - 4-cylinder), engine code AWX	97-110
1. 1.9 litre unit injector (96 kW - 4-cylinder), engine code AWX	97-101
2. Battery, starter, alternator, voltage regulator, ignition/starter switch	102
3. Diesel direct injection system control unit, diesel direct injection system relay, fuel pump relay	103
4. Diesel direct injection system control unit, fuel temperature sender, relay for glow plugs, glow plugs (engine), accelerator pedal position sender	104
5. Diesel direct injection system control unit, intake manifold pressure sender, intake manifold temperature sender, exhaust gas recirculation valve, charge pressure control solenoid valve, electro/hydraulic engine mounting	105
6. Diesel direct injection system control unit, intake manifold flap change-over valve, unit injector solenoid valves, Hall sender	106
7. Diesel direct injection system control unit, coolant temperature senders, engine speed sender, air mass meter	107
8. Diesel direct injection system control unit, additional heating heater element	108
9. Fuel pump, oil level/oil temperature sender, control unit with display in dash panel insert	109
10. Oil pressure switch, coolant shortage indicator switch, speedometer sender, control unit with display in dash panel insert	110
008 - 2.5 litre turbo-diesel engine (132 kW - 6-cylinder), engine code AKE	111-125
1. 2.5 litre turbo-diesel engine (132 kW - 6-cylinder), engine code AKE	111-115
2. Battery, starter, alternator, ignition/starter switch, fuses	116
3. Fuel pump, oil level/oil temperature sender, control unit with display in dash panel insert	117
4. Diesel direct injection system control unit, accelerator pedal position sender, glow plugs - (engine)	118
5. Oil pressure switch, coolant shortage indicator switch, speedometer sender, control unit with display in dash panel insert	119
6. Battery, starter, alternator, ignition/starter switch, fuses	120
7. Diesel direct injection system control unit, terminal 30 voltage supply relay, fuel pump relay	121
8. Diesel direct injection system control unit, accelerator pedal position sender, glow plugs (engine)	122
9. Diesel direct injection system control unit, charge air pressure sender, needle lift sender, injection pump control unit	123
10. Exhaust gas recirculation valve, charge pressure control solenoid valve, electro/hydraulic engine mounting solenoid valves, throttle butterfly valve	124
11. Air mass meter, diesel direct injection system control unit	125
009 - Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	126-133
1. Anti-lock brake system (ABS) with electronic stabilisation program (ESP)	126-128
2. Fuses, ABS with EDL control unit	129
3. Speed sensors, steering angle sender, ABS with EDL control unit	130
4. Steering angle sender, ABS with EDL control unit	131
5. Brake pressure sender, yaw rate sender, ABS with EDL control unit, ABS valves, ABS hydraulic pump	132
6. Traction control system switch, ABS with EDL control unit	133
010 - Airbags for driver and front passenger with belt tensioners and side airbags	134-139
1. Airbags for driver and front passenger with belt tensioners and side airbags	134
2. Airbags on driver s and front passenger s side, belt tensioners, igniters	135
3. Airbag deactivation on front passenger s side, curtain airbags on driver s and front passenger s side, igniters	136
4. Side airbags (driver s and front passenger s side), igniters, side airbag crash sensors (driver s and front passenger s side)	137
5. Rear side airbags (driver s and front passenger s side), igniters, rear side airbag crash sensors (driver s and front passenger s side)	138
6. Side airbags (driver s and front passenger s side), igniters, dash panel insert	139
011 - Diagnostic connector	140-142
1. Diagnostic connector	140-141
2. Diagnostic connector	142
012 - Convenience systems	143-168
1. Convenience systems	143-147
2. Fuses	148
3. Convenience system central control unit, rear lid and tank filler flap release	149
4. Convenience system central control unit, bonnet contact switch, anti-theft alarm ultra-sonic sensor	150
5. Convenience system central control unit, rear lid contact switch for anti-theft alarm, contact switch in lock cylinder for rear lid, footwell lights	151
6. Convenience svstem central control unit. interior liights. readina liights	152

7. Convenience system central control unit, luggage compartment lights, glove box light, illuminated vanity mirrors	153
8. Convenience system central control unit, rear left central locking lock unit (without rear electric windows)	154
9. Convenience system central control unit, rear right central locking lock unit (without rear electric windows)	155
10. Convenience system central control unit, door illumination (without rear electric windows)	156
11. Convenience system central control unit, door control unit (driver s side) with electric windows, electric window switches, vehicle inclination sender	157
12. Door control unit (driver s side) with electric windows, central locking lock unit (driver s side)	158
13. Door control unit (driver s side) with electric windows, door illumination, interior locking switch	159
14. Door control unit (driver s side) with electric windows, electric exterior mirror, alarm system off switch, interior monitor switch, mirror adjustment switch	160
15. Door control unit (driver s side), mirror adjustment with retraction function	161
16. Door control unit (front passenger s side) with electric windows, central locking lock unit (front passenger s side)	162
17. Door control unit (front passenger s side), mirror adjustment with retraction function	163
18. Door control unit (front passenger s side) with electric windows, electric exterior mirror (right), door illumination	164
19. Rear left door control unit, rear left electric window, rear left door illumination	165
20. Rear left door control unit, rear left central locking lock unit	166
21. Rear right door control unit, rear right electric window, rear right door illumination	167
22. Rear right door control unit, rear right central locking lock unit	168
013 - Sliding/tilting sunroof, from model year 2001	169-170
1. Sliding/tilting sunroof, from model year 2001	169
2. Sliding/tilting sunroof	170
014 - Automatic anti-dazzle interior mirror	171-175
1. Automatic anti-dazzle interior mirror	171-173
2. Automatic anti-dazzle interior mirror	174
3. Automatic anti-dazzle interior mirror	175
015 - Air conditioner	176-184
1. Air conditioner	176-178
2. Air conditioning system/Climatronic operating and display unit, fuses	179
3. Air conditioning system/Climatronic operating and display unit, central flap, air flow flap, air recirculation flap	180
4. Air conditioning system/Climatronic operating and display unit, defroster flap, temperature flaps	181
5. Air conditioning system/Climatronic operating and display unit, vent temperature senders, sunlight penetration photosensor	182
6. Air conditioning system/Climatronic operating and display unit, high pressure sender, air quality sensor, windscreen heater, air conditioning system compressor regulating valve	183
7. Air conditioning system/Climatronic operating and display unit, fresh air blower, heated rear window	184
016 - Radiator fan control - 350W and 400W (petrol engines)	185-190
1. Radiator fan control - 350W and 400W (petrol engines)	185-189
2. Radiator fan control	190
017 - Radiator fan control - 350W, 400W or 600W (diesel engines)	191-196
1. Radiator fan control - 350W, 400W or 600W (diesel engines)	191-195
2. Radiator fan control	196
018 - Parking aid	197-203
1. Parking aid	197-199
2. Parking aid control unit, fuses	200
3. Parking aid control unit, front parking aid senders	201
4. Parking aid control unit, rear parking aid senders	202
5. Parking aid control unit, parking aid button	203
019 - Electrically operated rear roller blind	204-206
1. Electrically operated rear roller blind	204-205
2. Electrically operated rear roller blind	206
020 - Radio	207-216
1. Radio	207-208
2. Voltage supply	209
3. Front loudspeakers	210
4. Rear loudspeakers	211
5. Active loudspeakers, rear	212
6. Bose loudspeakers. front	213

7. Bose loudspeakers, rear	214
8. CD changer	215
9. Aerial, diagnostic connector, CAN-bus	216
021 - 5-speed automatic gearbox with Tiptronic	217-223
1. 5-speed automatic gearbox with Tiptronic	217-218
2. Voltage supply	219
3. Automatic gearbox control unit, Tiptronic switch	220
4. Automatic gearbox control unit, solenoid valves	221
5. Automatic gearbox control unit, multi-function switch	222
6. Automatic gearbox control unit, dash panel insert	223
022 - Trailer socket	224-227
1. Trailer socket	224-225
2. Brake light switch, trailer detector control unit, fuse in fuse box	226
3. Trailer detector control unit, terminal 30 fuse - trailer towing, trailer socket	227
023 - Auxiliary heater, From model year 2001	228-230
1. Auxiliary heater, From model year 2001	228
2. Temperature sensor, flame monitor, additional heater control unit, auxiliary heating radio wave receiver, heater overheating fuse (8 Amp.), auxiliary heater fuse	229
3. Control and display unit for air conditioner/Climatronic, additional heater control unit, coolant shut-off valve, glow plug, combustion air blower, metering pump, recirculating pump	230
024 - Provision for mobile telephone	231-236
1. Provision for mobile telephone	231-232
2. Telephone operating electronics control unit, fuses	233
3. Telephone operating electronics control unit, NF (low frequency) outputs	234
4. Telephone operating electronics control unit, telephone microphone	235
5. Telephone operating electronics control unit, aerial amplifier for mobile telephone	236
025 - Servotronic	237-239
1. Servotronic	237-238
2. Servotronic	239
026 - Telematics with voice control, From model year 2001	240-248
1. Telematics with voice control, From model year 2001	240
2. Telephone/telematics control unit, fuses	241
3. Telephone/telematics control unit, aerials	242
4. Telematics operating unit, telephone/telematics control unit, additional loudspeaker for telematics	243
5. Telephone handset, telephone/telematics control unit	244
6. Control unit for voice control, telephone/telematics control unit, fax unit	245
7. Control unit for voice control, telephone/telematics control unit, telephone microphone	246
8. Control unit for voice control, telephone/telematics control unit, CAN bus	247
9. Function selection switch II	248
027 - Telematics without voice control (export versions only), From model year 2001	249-257
1. Telematics without voice control (export versions only), From model year 2001	249
2. Telephone/telematics control unit, fuses	250
3. Telephone/telematics control unit, aerials	251
4. Telematics operating unit, telephone/telematics control unit, additional loudspeaker for telematics	252
5. Telephone handset, telephone/telematics control unit	253
6. Telephone/telematics control unit, fax unit	254
7. Telephone/telematics control unit, telephone microphone	255
8. Telephone/telematics control unit, CAN bus	256
9. Function selection switch II	257
028 - Telephone with voice control, From model year 2001	258-263
1. Telephone with voice control, From model year 2001	258
2. Telephone transmitter and receiver unit, fuses	259
3. Telephone transmitter and receiver unit, aerial	260
4. Control unit for voice control, telephone transmitter and receiver unit, fax unit	261
5. Control unit for voice control, telephone transmitter and receiver unit, telephone microphone	262
6. Control unit for voice control, telephone transmitter and receiver unit, CAN bus	263
029 - Telephone without voice control (export versions only), From model year 2001	264-269
1. Telephone without voice control (export versions only), From model year 2001	264
2. Telephone transmitter and receiver unit, fuses	265
3. Telephone transmitter and receiver unit, aerial	266
4. Telephone transmitter and receiver unit, fax unit	267
5. Telephone transmitter and receiver unit, telephone microphone	268
6. Telephone transmitter and receiver unit, CAN bus	269
030 - Navigation system 'NS LOW'. From model year 2001	270-274

1. Navigation system 'NS LOW', From model year 2001	270
2. Navigation system with CD drive control unit, fuses	271
3. Navigation system with CD drive control unit, internal loudspeaker (centre loudspeaker)	272
4. Control unit with display in dash panel insert, navigation system with CD drive control unit	273
5. Function selection switch II, control unit with display in dash panel insert	274
031 - Radio navigation system (RNS-D)	275-286
1. Radio navigation system (RNS-D)	275-276
2. Voltage supply	277
3. Operating electronics control unit, navigation	278
4. Active loudspeakers, front	279
5. Active loudspeakers, rear	280
6. Bose loudspeakers, front	281
7. Bose loudspeakers, rear	282
8. CD changer	283
9. Operating electronics control unit, navigation, navigation/TV tuner	284
10. Operating electronics control unit, navigation, navigation/TV tuner, aerial, navigation interface	285
11. Control unit with display in dash panel insert, operating electronics control unit, navigation, navigation interface, CAN-bus	286
032 - Headlights with gas discharge lamps and automatic headlight range control	287-293
1. Headlights with gas discharge lamps and automatic headlight range control	287-289
2. Ignition/starter switch, control unit for headlight range control, fuses	290
3. Control unit for headlight range control, vehicle level senders	291
4. Control unit for headlight range control, left gas discharge (xenon) lamp, left headlight range control motor	292
5. Control unit for headlight range control, right gas discharge (xenon) lamp, right headlight range control motor	293
033 - Heated front seats - with and without heated steering wheel	294-298
1. Heated front seats - with and without heated steering wheel	294-296
2. Heated driver's seat, fuse	297
3. Heated front passenger's seat	298
034 - Heated front and rear seats with and without heated steering wheel	299-305
1. Heated front and rear seats with and without heated steering wheel	299-300
2. Fuses	301
3. Heated driver's seat	302
4. Heated front passenger's seat	303
5. Heated rear seat, left	304
6. Heated rear seat, right	305
035 - Electric seat adjustment - without memory function	306-312
1. Electric seat adjustment - without memory function	306-308
2. Seat adjustment for driver s seat, fuse	309
3. Lumbar support adjustment, driver s seat	310
4. Seat adjustment for front passenger s seat, fuse	311
5. Lumbar support adjustment, front passenger s seat	312
036 - Electric adjustment of seats and mirrors - with memory function	313-320
1. Electric adjustment of seats and mirrors - with memory function	313-314
2. Seat adjustment with memory control unit, seat adjustment fuse	315
3. Seat adjustment for driver s seat	316
4. Backrest adjustment and lumbar support adjustment for driver s seat	317
5. Exterior mirror, driver s side	318
6. Memory operating unit, driver s seat	319
7. Exterior mirror, front passenger s side	320
037 - Taxi vehicles, From model year 2001	321-327
1. Taxi vehicles, From model year 2001	321
2. Taxi vehicles, From model year 2001	322
3. Taximeter, fuses, connector for printer/card reader	323
4. Taxi alarm system II switch, alarm system off switch, alarm system control unit, taxi alarm system II control unit, taxi sign light bulb	324
5. Taxi sign switch, alarm system control unit, alarm system relay 2 (main beam), special vehicle control unit	325
6. Alarm system control unit, turn signal bulbs	326
7. Alarm control unit (on and hands-free), two-way radio, socket	327
038 - Special vehicles for police and emergency services (ambulance, special police, fire service)	328-341
1. Special vehicles for police and emergency services (ambulance, special police, fire service)	328-332
2. Wiring harness for second battery	333
3. Fuses. two-wav radio. sockets	334

4. Weapons storage box, fuses	335
5. Flashing blue light relay (rear lid), transformer with socket (12 V to 220 V)	336
6. Flashing yellow lights, in rear lid	337
7. Tachograph	338
8. Main beam headlight activation	339
9. Siren system	340
10. Connection for roof signal system	341
039 - Continuously variable automatic gearbox: multitronic ® 01J	342-347
1. Continuously variable automatic gearbox: multitronic ® 01J	342-344
2. Voltage supply, starter inhibitor and reversing light relay	345
3. Automatic gearbox control unit, Tiptronic switch	346
4. Automatic gearbox control unit, dash panel insert	347
040 - Multi-function steering wheel	348-351
1. Multi-function steering wheel	348
2. Ignition/starter switch, control unit with display in dash panel insert, steering column electronics control unit, fuse	349
3. Operating unit in steering wheel, steering column electronics control unit	350
4. Operating unit in steering wheel, steering column electronics control unit	351
041 - Basic equipment - Lowline	352-377
1. Basic equipment - Lowline	352-356
2. Earth connections	357
3. Earth connections	358
4. Ignition/starter switch, main fuse	359
5. Steering column electronics control unit, cruise control system	360
6. Turn signal switch, intermittent wiper switch, steering angle sender, horn plate, steering column electronics control unit	361
7. Onboard power supply control unit, steering column electronics control unit, windscreen wiper motor, washer pump, rear window wiper motor	362
8. Light switch, headlight range control adjuster, onboard power supply control unit	363
9. Left headlight, left fog light	364
10. Right headlight, right fog light	365
11. Tail lights	366
12. Hazard warning lights button, dual tone horn, onboard power supply control unit	367
13. X contact relief relay, onboard power supply control unit, headlight washer system pump	368
14. Fuses, radio connector III	369
15. Fuses, glove box light, footwell lights	370
16. Fuses, ashtray illumination, cigarette lighter, heated rear window	371
17. Fuses, socket, heated washer jets, reversing light switch	372
18. Fuel gauge sender, ambient temperature switch, oil level/oil temperature sender, coolant temperature sender, coolant shortage indicator switch	373
19. Control unit with display in dash panel insert, brake fluid level warning contact, oil pressure switch	374
20. Control unit with display in dash panel insert, illumination for dash panel vents, radio controlled clock	375
21. Control unit with display in dash panel insert, diagnostic connector, speedometer sender	376
22. Control unit with display in dash panel insert, brake lining/pad wear senders, bonnet contact switch	377
042 - Basic equipment - Highline	378-403
1. Basic equipment - Highline	378-382
2. Earth connections	383
3. Earth connections	384
4. Ignition/starter switch, main fuse	385
5. Steering column electronics control unit, cruise control system	386
6. Turn signal switch, intermittent wiper switch, steering angle sender, horn plate, steering column electronics control unit	387
7. Onboard power supply control unit, steering column electronics control unit, windscreen wiper motor, washer pump, rear window wiper motor	388
8. Light switch, headlight range control adjuster, onboard power supply control unit	389
9. Left headlight, left fog light	390
10. Right headlight, right fog light	391
11. Tail lights	392
12. Hazard warning lights button, dual tone horn, onboard power supply control unit	393
13. Brake light switch, X contact relief relay, headlight washer system pump, onboard power supply control unit	394
14. Fuses, radio connector III	395
15. Fuses. glove box light. footwell lights	396

16. Fuses, ashtray illumination, cigarette lighter, heated rear window	397
17. Fuses, reversing light switch, socket, heated washer jets	398
18. Fuel gauge sender, ambient temperature switch, oil level/oil temperature sender, coolant temperature sender, coolant shortage indicator switch	399
19. Control unit with display in dash panel insert, brake fluid level warning contact, oil pressure switch	400
20. Control unit with display in dash panel insert, illumination for dash panel vents, radio controlled clock	401
21. Control unit with display in dash panel insert, diagnostic connector, speedometer sender	402
22. Control unit with display in dash panel insert, brake lining/pad wear senders, bonnet contact switch	403
043 - 1.6 litre fuel injection engine (75 kW - Simos - 4-cylinder), engine code ALZ	404-418
1. 1.6 litre fuel injection engine (75 kW - Simos - 4-cylinder), engine code ALZ	404-408
2. Battery, starter, alternator, ignition/starter switch, fuses	409
3. Simos control unit, ignition coil, spark plugs, data bus wire	410
4. Simos control unit, map-controlled engine cooling thermostat, injectors, engine electronics fuse	411
5. Dash panel insert, fuel pump, oil pressure switch, coolant shortage indicator switch, oil level/oil temperature sender, speedometer sender	412
6. Battery, starter, alternator, ignition/starter switch, fuses	413
7. Simos control unit, fuel pump relay, current supply relay for Simos control unit, fuses	414
8. Simos control unit, map-controlled engine cooling thermostat, injectors, engine electronics fuse	415
9. Simos control unit, air mass meter, temperature sensor 2 engine compartment, activated charcoal filter system solenoid valve 1, variable intake manifold change-over valve	416
10. Simos control unit, coolant temperature senders, Hall sender, knock sensor I	417
11. Simos control unit, lambda probes	418
044 - 1.8 l - Fuel injection engine (110 kW - Motronic - 4 cylinder), engine code AVJ	419-435
1. 1.8 l - Fuel injection engine (110 kW - Motronic - 4 cylinder), engine code AVJ	419-423
2. Battery, starter, alternator, ignition/starter switch, fuses	424
3. Fuel pump relay, Motronic control unit, Motronic current supply relay, fuses	425
4. Air mass meter, radiator outlet coolant temperature sender, Motronic control unit, injectors	426
5. Coolant temperature sender, charge air pressure sender, intake air temperature sender, Motronic control unit, by-pass air cut-off valve, charge pressure control solenoid valve	427
6. Engine speed sender, knock sensor 1, knock sensor 2, Motronic control unit	428
7. Hall sender, Motronic control unit, exhaust camshaft control valve 1, secondary air pump, vacuum pump for brakes	429
8. Accelerator position sender, Motronic control unit, throttle valve module	430
9. Lambda probes, Motronic control unit	431
10. Motronic control unit, ignition coils	432
11. Motronic control unit, automatic gearbox control unit, data bus wire	433
12. Control unit with display in dash panel insert, fuel pump, oil level and oil temperature sender	434
13. Control unit with display in dash panel insert, oil pressure switch, coolant shortage indicator switch, speedometer sender	435
045 - 2.0 litre fuel injection engine (96 kW - Motronic - 4-cylinder), engine code ALT	436-451
1. 2.0 litre fuel injection engine (96 kW - Motronic - 4-cylinder), engine code ALT	436-440
2. Battery, starter, alternator, fuses	441
3. Fuel pump relay, Motronic control unit, Motronic current supply relay, fuses	442
4. Air mass meter, Motronic control unit, injectors	443
5. Coolant temperature senders, intake air temperature sender, Motronic control unit, activated charcoal filter system solenoid valve 1, intake manifold change-over valve	444
6. Engine speed sender, knock sensor, Motronic control unit	445
7. Motronic control unit, vacuum pump for brakes, Hall sender	446
8. Accelerator pedal position senders, Motronic control unit, throttle valve control unit	447
9. Lambda probes, Motronic control unit	448
10. Motronic control unit, ignition coils	449
11. Motronic control unit, automatic gearbox control unit, data bus wire	450
12. Control unit with display in dash panel insert	451
046 - 3.0 litre fuel injection engine (160 kW - Motronic - 6-cylinder), engine code BBJ	452-472
1. 3.0 litre fuel injection engine (160 kW - Motronic - 6-cylinder), engine code BBJ	452-456
2. Battery, starter, alternator, voltage regulator, ignition/starter switch	457
3. Fuel pump relay, Motronic control unit, Motronic current supply relay	458
4. Motronic control unit, injectors	459
5. Air mass meter, Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, intake manifold change-over valve	460
6. Coolant temperature senders, Motronic control unit, camshaft timing adjustment valves, continued coolant circulation pump	461
7. Engine speed sender, knock sensors, Motronic control unit	462

8. Hall senders, Motronic control unit	463
9. Lambda probes, Motronic control unit	464
10. Lambda probes, Motronic control unit	465
11. Brake servo pressure sensor, Motronic control unit, secondary air pump motor, vacuum pump for brakes	466
12. Accelerator pedal position senders, Motronic control unit, throttle valve control unit	467
13. Motronic control unit, ignition coils	468
14. Motronic control unit, ignition coils	469
15. Motronic control unit, automatic gearbox control unit, data bus wire	470
16. Control unit with display in dash panel insert, fuel pump, oil level/oil temperature sender	471
17. Control unit with display in dash panel insert, oil pressure switch, coolant shortage indicator switch, speedometer sender	472
047 - 1.9 litre unit injector (74 kW - 4-cylinder), engine code AVB	473-488
1. 1.9 litre unit injector (74 kW - 4-cylinder), engine code AVB	473-478
2. Battery, starter, alternator, voltage regulator, ignition/starter switch	479
3. Fuel pump relay, diesel direct injection system control unit, terminal 30 voltage supply relay	480
4. Accelerator pedal position sender, fuel temperature sender, diesel direct injection system control unit, glow plugs (engine)	481
5. Charge air pressure sender, intake manifold temperature sender, diesel direct injection system control unit, exhaust gas recirculation valve, charge pressure control solenoid valve, electro/hydraulic engine mounting	482
6. Hall sender, diesel direct injection system control unit, intake manifold flap change-over valve, unit injector solenoid valves	483
7. Coolant temperature senders, engine speed sender, air mass meter, diesel direct injection system control unit	484
8. Diesel direct injection system control unit, additional heating heater element	485
9. Diesel direct injection system control unit, automatic gearbox control unit, control unit with display in dash panel insert	486
10. Control unit with display in dash panel insert, fuel gauge senders, oil level/oil temperature sender	487
11. Control unit with display in dash panel insert, oil pressure switch, speedometer sender (Hall sender, on gearbox)	488
048 - 2.5 l - Turbo-diesel engine (114kW - 6 cylinder) engine code AYM	489-505
1. 2.5 l - Turbo-diesel engine (114kW - 6 cylinder) engine code AYM	489-494
2. Battery, starter, alternator, ignition/starter switch, fuses	495
3. Diesel direct injection system control unit, terminal 30 voltage supply relay, fuel pump relay	496
4. Diesel direct injection system control unit, accelerator position sender, glow plug - (engine)	497
5. Diesel direct injection system control unit, charge air pressure sender, needle lift sender, injection pump control unit	498
6. Exhaust gas recirculation valve, charge pressure control solenoid valve, electrohydraulic engine mounting solenoid valve, throttle butterfly valve	499
7. Diesel direct injection system control unit, air mass meter	500
8. Diesel direct injection system control unit, coolant temperature display sender, engine speed sender	501
9. Diesel direct injection system control unit, low fuel level sender, auxiliary air heater element	502
10. Diesel direct injection system control unit, automatic gearbox control unit, data bus wire	503
11. Control unit with display in dash panel insert, fuel pump, oil level and oil temperature sender	504
12. Control unit with display in dash panel insert, oil pressure switch, coolant shortage indicator switch, speedometer sender	505
049 - Continuously variable automatic gearbox: multitronic 01J	506-513
1. Continuously variable automatic gearbox: multitronic 01J	506-509
2. Voltage supply, starter inhibitor and reversing light relay	510
3. Automatic gearbox control unit, Tiptronic switch	511
4. Automatic gearbox control unit, automatic gearbox fuse (for ATF pump run-on)	512
5. Automatic gearbox control unit, dash panel insert	513
050 - 5-speed automatic gearbox with Tiptronic	514-522
1. 5-speed automatic gearbox with Tiptronic	514-517
2. Voltage supply	518
3. Automatic gearbox control unit, Tiptronic switch	519
4. Automatic gearbox control unit, solenoid valves	520
5. Automatic gearbox control unit, multi-function switch	521
6. Automatic gearbox control unit, dash panel insert	522
051 - Air conditioner	523-533
1. Air conditioner	523-526
2. Air conditioning system/Climatronic operating and display unit, fuses	527
3. Air conditioning system/Climatronic operating and display unit. central flap. air flow flap. air	528

recirculation flap	
4. Air conditioning system/Climatronic operating and display unit, defroster flap, temperature flaps	529
5. Air conditioning system/Climatronic operating and display unit, vent temperature senders, sunlight penetration photosensor	530
6. Air conditioning system/Climatronic operating and display unit, high pressure sender, sensors, compressor regulating valve, heated rear window	531
7. Air conditioning system/Climatronic operating and display unit, fresh air blower	532
8. Air conditioning system/Climatronic operating and display unit, control unit with display in dash panel insert	533
052 - Radio	534-544
1. Radio	534-535
2. Voltage supply	536
3. Front loudspeakers	537
4. Rear loudspeakers	538
5. Active loudspeakers, rear	539
6. Bose loudspeakers, front	540
7. Bose loudspeakers, rear	541
8. CD changer	542
9. Aerial (Avant models)	543
10. Aerial (saloon models), diagnostic connector, CAN bus	544
053 - Radio navigation system (RNS-D)	545-556
1. Radio navigation system (RNS-D)	545-546
2. Voltage supply	547
3. Operating electronics control unit, navigation	548
4. Active loudspeakers, front	549
5. Active loudspeakers, rear	550
6. Bose loudspeakers, front	551
7. Bose loudspeakers, rear	552
8. CD changer	553
9. Navigation operating electronics control unit, navigation/TV tuner	554
10. Navigation operating electronics control unit, navigation/TV tuner, aerial, navigation interface	555
11. Control unit with display in dash panel insert, navigation operating electronics control unit, navigation interface, CAN bus	556
054 - 2.4 litre fuel injection engine (120 kW - Motronic - 6-cylinder), engine code AMM	557-576
1. 2.4 litre fuel injection engine (120 kW - Motronic - 6-cylinder), engine code AMM	557-561
2. Battery, starter, alternator, voltage regulator, ignition/starter switch	562
3. Fuel pump relay, Motronic control unit	563
4. Motronic control unit, injectors	564
5. Air mass meter, Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, variable intake manifold change-over valve	565
6. Coolant temperature senders, Motronic control unit, camshaft timing adjustment valves, continued coolant circulation pump	566
7. Engine speed sender, knock sensors, Motronic control unit	567
8. Hall senders, Motronic control unit	568
9. Lambda probes, Motronic control unit	569
10. Lambda probes, Motronic control unit	570
11. Brake servo pressure sensor, Motronic control unit, secondary air pump motor, vacuum pump for brakes	571
12. Accelerator pedal position senders, Motronic control unit, throttle valve module	572
13. Motronic control unit, ignition coils	573
14. Motronic control unit, automatic gearbox control unit, data bus wire	574
15. Control unit with display in dash panel insert, fuel pump, oil level/oil temperature sender	575
16. Control unit with display in dash panel insert, oil pressure switch, coolant shortage indicator switch, speedometer sender	576
055 - Anti-lock brake system (ABS) with electronic stability program (ESP)	577-584
1. Anti-lock brake system (ABS) with electronic stability program (ESP)	577-579
2. Fuses, ABS with EDL control unit	580
3. Speed sensors, ABS with EDL control unit	581
4. Steering angle sender, ABS with EDL control unit	582
5. Brake pressure sender, yaw rate sender, ABS with EDL control unit, ABS valves, ABS hydraulic pump	583
6. Traction control system switch, ABS with EDL control unit	584
056 - Avant models, rear	585-597
1. Avant models, rear	585-587
2. Tail lights, left (Lowline)	588
3. Tail lights, right (Lowline)	589
4. Tail lights (Highline)	590

5. Rear window wiper motor, washer pump, number plate light	591
6. Glass breakage sensors, heated rear window	592
7. Luggage compartment light, rear lid light	593
8. Rear lid contact switch for anti-theft alarm, rear lid release	594
9. Aerials for radio	595
10. Aerials for radio navigation system	596
11. Aerials for radio navigation system with TV receiver	597
057 - Convenience electrics	598-625
1. Convenience electrics	598-602
2. Fuses	603
3. Convenience system central control unit, rear lid release	604
4. Convenience system central control unit, bonnet contact switch, interior monitor sender/receiver module 1	605
5. Convenience system central control unit, tank filler flap locking motor, footwell lights	606
6. Convenience system central control unit, rear lid contact switch for anti-theft alarm, contact switch in lock cylinder for rear lid, aerial	607
7. Convenience system central control unit, interior lights, reading lights	608
8. Convenience system central control unit, luggage compartment lights, glove box light, illuminated vanity mirrors	609
9. Convenience system central control unit, rear left central locking lock unit (without rear electric windows)	610
10. Convenience system central control unit, rear right central locking lock unit (without rear electric windows)	611
11. Convenience system central control unit, door illumination (without rear electric windows)	612
12. Convenience system central control unit, door control unit (driver s side) with electric windows, electric window switches, vehicle inclination sender	613
13. Door control unit (driver s side) with electric windows, central locking lock unit (driver s side), entry light, door warning lamp (driver s side)	614
14. Door control unit (driver s side) with electric windows, interior locking switch, memory operating unit (driver s seat), door opening illumination	615
15. Door control unit (driver s side) with electric windows, electric exterior mirror, interior monitor switch, alarm system off switch, mirror adjustment switch	616
16. Door control unit (driver s side), mirror adjustment with retraction function	617
17. Door control unit (driver s side), garage door operating unit, seat adjustment with memory control unit	618
18. Door control unit (front passenger s side) with electric windows, central locking lock unit (front passenger s side)	619
19. Door control unit (front passenger s side), mirror adjustment with retraction function, automatic anti-dazzle interior mirror	620
20. Door control unit (front passenger s side) with electric windows, electric exterior mirror (right), door opening illumination	621
21. Rear left door control unit, rear left electric window, rear left door illumination	622
22. Rear left door control unit, rear left central locking lock unit	623
23. Rear right door control unit, rear right electric window, rear right door illumination	624
24. Rear right door control unit, rear right central locking lock unit	625
058 - Radiator fan control - 400W or 600W (2.4 litre Motronic)	626-630
1. Radiator fan control - 400W or 600W (2.4 litre Motronic)	626-629
2. Radiator fan control	630
059 - Special vehicles for police and emergency services (ambulance, special police, fire service)	631-644
1. Special vehicles for police and emergency services (ambulance, special police, fire service)	631-635
2. Wiring harness for second battery	636
3. Connection for roof signal system	637
4. Weapons storage box, fuses	638
5. Wiring harness for second battery	639
6. Fuses, two-way radio, sockets	640
7. Weapons storage box, fuses	641
8. Flashing blue light relay (rear lid), transformer with socket (12 V to 220 V)	642
9. Flashing yellow lights, in rear lid	643
10. Tachograph	644
060 - Taxi vehicles	645-653
1. Taxi vehicles	645-648
2. Taximeter, fuses, connector for printer/card reader	649
3. Taxi alarm system II switch, alarm system off switch, alarm system control unit, taxi alarm system II control unit, taxi roof sign light bulb	650
4. Taxi sign switch, alarm system control unit, alarm system relay 2 (main beam), special vehicle control unit	651

5. Alarm system control unit, turn signal bulbs	652
6. Alarm control unit (on and hands-free), two-way radio, 12 V socket	653
061 - CAN bus wires	654-660
1. CAN bus wires	654
2. CAN bus wires (drive train)	655
3. CAN bus wires, control unit with display in dash panel insert	656
4. CAN bus wires (convenience features)	657
5. CAN bus wires (navigation and infotainment)	658
6. CAN bus wires (infotainment)	659
7. CAN bus wires (infotainment)	660
062 - Electronic logbook (chip card reader unit)	661-663
1. Electronic logbook (chip card reader unit)	661-662
2. Chip card reader unit	663
063 - Driving school vehicles	664-669
1. Driving school vehicles	664-666
2. X contact relief relay, fuses, socket	667
3. Special vehicle control unit, footwell light switch, warning buzzer switch, left footwell light, buzzer	668
4. Engine power reduction relay -1-, engine power reduction relay -2-, idling switch, accelerator pedal position sender, accelerator pedal position sender -2-, brake pedal switch for engine off	669
064 - Electric lumbar support adjustment	670-674
1. Electric lumbar support adjustment	670-672
2. Lumbar support adjustment, driver's seat	673
3. Lumbar support adjustment, front passenger's seat	674
065 - 1.8 litre fuel injection engine (125 kW - Motronic - 4-cylinder), engine code AMB, with diagnostic pump for leakage in fuel system, from model year 2002	675-688
1. 1.8 litre fuel injection engine (125 kW - Motronic - 4-cylinder), engine code AMB, with diagnostic pump for leakage in fuel system, from model year 2002	675
2. 1.8 litre fuel injection engine (125 kW - Motronic - 4-cylinder), engine code AMB, with diagnostic pump for leakage in fuel system, from model year 2002	676
3. Battery, starter, alternator, starter inhibitor relay, clutch pedal switch	677
4. Ignition/starter switch, fuel pump relay, fuses	678
5. Motronic control unit, Motronic current supply relay	679
6. Motronic control unit, air mass meter, coolant temperature sender - radiator outlet, injectors, fuel system diagnostic pump	680
7. Motronic control unit, coolant temperature senders, charge air pressure sender, by-pass air cut-off valve, intake air temperature sender, charge pressure control solenoid valve	681
8. Motronic control unit, engine speed sender, knock sensor I, knock sensor II	682
9. Motronic control unit, inlet camshaft timing adjustment valve -1-, secondary air pump, Hall sender, vacuum pump for brakes	683
10. Motronic control unit, accelerator pedal position senders, throttle valve module	684
11. Motronic control unit, lambda probes	685
12. Motronic control unit, ignition coils	686
13. Control unit with display in dash panel insert, oil pressure switch, oil level/oil temperature sender, fuel pump	687
14. Control unit with display in dash panel insert, speedometer sender, fuel gauge sender -2-	688
066 - 3.0 litre fuel injection engine (162 kW - Motronic - 6-cylinder), engine code AVK	689-709
1. 3.0 litre fuel injection engine (162 kW - Motronic - 6-cylinder), engine code AVK	689-693
2. Battery, starter, alternator	694
3. Fuel pump relay, ignition/starter switch, fuses	695
4. Motronic control unit, Motronic current supply relay, fuses	696
5. Motronic control unit, injectors, fuel system diagnostic pump	697
6. Air mass meter, Motronic control unit, activated charcoal filter system solenoid valve 1, secondary air inlet valve, intake manifold change-over valve	698
7. Motronic control unit, coolant temperature senders, camshaft timing adjustment valves, continued coolant circulation pump, coolant shortage indicator switch	699
8. Engine speed sender, knock sensors, Motronic control unit	700
9. Hall senders, Motronic control unit	701
10. Lambda probes, Motronic control unit	702
11. Lambda probes, Motronic control unit	703
12. Brake servo pressure sensor, Motronic control unit, secondary air pump motor, vacuum pump for brakes	704
13. Accelerator pedal position senders, Motronic control unit, throttle valve control unit	705
14. Motronic control unit, ignition coils	706
15. Motronic control unit, ignition coils	707
16. Control unit with displav in dash panel insert. oil pressure switch. fuel pump. oil level/oil	708

temperature sender	
17. Control unit with display in dash panel insert, speedometer sender	709
067 - 2.0 litre FSI engine (110 kW - Motronic - 4-cylinder), engine code AWA	710-726
1. 2.0 litre FSI engine (110 kW - Motronic - 4-cylinder), engine code AWA	710-713
2. Battery, starter, alternator, voltage regulator, ignition/starter switch	714
3. Fuel pump relay, Motronic control unit, Motronic current supply relay	715
4. Motronic control unit, injectors	716
5. Air mass meter, Motronic control unit, activated charcoal filter system solenoid valve 1, intake manifold change-over valve, fuel pressure regulating valve	717
6. Lambda probes, Motronic control unit	718
7. Engine speed sender, knock sensors, Motronic control unit	719
8. Coolant temperature senders, Hall sender, intake manifold pressure sender, fuel pressure sender, Motronic control unit	720
9. Motronic control unit, exhaust gas recirculation valve, intake manifold flap change-over valve	721
10. NOx sender, Motronic control unit, inlet camshaft timing adjustment valve -1-	722
11. Accelerator pedal position senders, Motronic control unit, throttle valve control unit	723
12. Motronic control unit, ignition coils	724
13. Motronic control unit, automatic gearbox control unit, data bus wire	725
14. Control unit with display in dash panel insert	726
068 - Airbags for driver and front passenger with belt tensioners and side airbags	727-736
1. Airbags for driver and front passenger with belt tensioners and side airbags	727-729
2. Airbags on driver s and front passenger s side, belt tensioners, igniters	730
3. Curtain airbags (driver s and front passenger s side), igniters	731
4. Airbag deactivation on front passenger s side	732
5. Side airbags (driver s and front passenger s side), igniters	733
6. Rear side airbags (driver s and front passenger s side), igniters, side airbag crash sensors	734
7. Belt switches, rear belt tensioners	735
8. Front airbag crash sensors for driver s and front passenger s side, control unit with display in dash panel insert	736
069 - Garage door operation (Homelink)	737-739
1. Garage door operation (Homelink)	737
2. Garage door operating unit, garage door operation control unit	738
3. Garage door operating unit, garage door operation control unit	739
070 - Radiator fan control - 350W, 400W or 600W (petrol engines)	740-745
1. Radiator fan control - 350W, 400W or 600W (petrol engines)	740-744
2. Radiator fan control	745
801 - -Fitting locations: Earth points - 3	746-765
1. Earth points	746-765
1.1 Overview of earth points in engine compartment	746
1.2 Overview of earth points in vehicle interior	747-748
1.3 Overview of earth points in luggage compartment - saloon models	749
1.4 Overview of earth points in luggage compartment - Avant models	750
1.5 Earth point, in engine compartment	751-756
1.6 Earth points, in interior	757-760
1.7 Earth point, in luggage compartment - saloon models	761-762
1.8 Earth point, in luggage compartment - Avant models	763-765
802 - -Fitting locations: Fuses - 3	766-804
1. Fuses	766-804
1.1 Overview of fuses	766-769
1.2 Main fuse	770
1.3 Position of fuses, coupling station of A-pillar	771
1.3.2 Fuses:	771
1.4 Position of fuses, relay carrier (3-pin)	772
1.4.2 Fuses:	772
1.5 Position of fuses, relay carrier (9-pin) with onboard supply control unit	773
1.5.2 Fuses:	773
1.6 Position of fuses, relay carrier (4-pin) with screw connection, up to July 2004	774
1.6.2 Fuses:	774
1.7 Position of fuses, relay carrier (4-pin) with screw connection, from August 2004	775
1.7.2 Fuses:	775
1.8 Position of fuses, relay carrier (4-pin), petrol engines, up to July 2004	776
1.8.2 Fuses:	776
1.9 Position of fuses, relay carrier (4-pin), diesel engines, up to July 2004	777
1.9.2 Fuses:	777
1.10 Position of fuses, relay carrier (4-pin), engine codes BKE, BRB, BNA, BLB, BRC, BPW, BVG, BVF, BRF, BRE, BVA, BRD. from August 2004	778

1.10.2 Fuses:	778
1.11 Position of fuses, relay carrier (4-pin), engine codes BSG, BPP, BTP, BKN, ASB, from August 2004	779
1.11.2 Fuses:	779
1.12 Position of fuses, relay carrier (4-pin), engine codes BGB, BPG, BWE, BWT, BUL, BPJ, BYK, from August 2004	780
1.12.2 Fuses:	780
1.13 Position of fuses, relay carrier (4-pin), engine code ALZ, from August 2004	781
1.13.2 Fuses:	781
1.14 Position of fuses, relay carrier (4-pin), engine code ALT, from August 2004	782
1.14.2 Fuses:	782
1.15 Position of fuses, relay carrier (4-pin), engine code BDG, from August 2004	783
1.15.2 Fuses:	783
1.16 Position of fuses, relay carrier (4-pin), engine codes BFB, BBK, BHF, from August 2004	784
1.16.2 Fuses:	784
1.17 Position of fuses, relay carrier (4-pin), engine code AWA, from August 2004	785
1.17.2 Fuses:	785
1.18 Position of fuses, relay carrier (4-pin), engine codes AUK, BKH, from August 2004	786
1.18.2 Fuses:	786
1.19 Position of fuses, relay carrier (4-pin), engine code BNS, from August 2004	787
1.19.2 Fuses:	787
1.20 Position of fuses, relay carrier (4-pin), engine codes BBJ (with manual gearbox or multitronic®), from August 2004	788
1.20.2 Fuses:	788
1.21 Position of fuses, relay carrier (4-pin), engine codes BBJ (with AG5), from August 2004	789
1.21.2 Fuses:	789
1.22 Position of fuses, fuse holder, up to July 2004	790-796
1.22.2 Fuse colours	790
1.22.3 Position of fuses, up to July 2004:	791-796
1.23 Position of fuses, fuse holder, from August 2004	797-802
1.23.2 Fuse colours	797
1.23.3 Fuse location from August 2004:	798-802
1.24 Position of fuses, fuse holder for special vehicle - taxi	803
1.24.2 Fuse location taxi	803
1.25 Position of fuses, fuse holder for special vehicle - police	804
1.25.2 Fuse location police	804
803 - -Fitting locations: Relay - 3	805-826
1. Relay	805-826
1.1 Overview of relay	805-807
1.2 Position of relays, relay carrier (3-pin)	808
1.2.2 Position of relays:	808
1.3 Position of relays, relay carrier (9-pin) with onboard supply control unit, up to July 2004	809
1.3.2 Position of relays:	809
1.4 Position of relays, relay carrier (9-pin) with onboard supply control unit, from August 2004	810
1.4.2 Position of relays:	810
1.5 Position of relays, relay carrier (4-pin) with screw connection	811
1.5.2 Position of relays:	811
1.6 Position of relays, relay carrier (4-pin), petrol engines, up to July 2004	812
1.6.2 Position of relays:	812
1.7 Position of relays, relay carrier (4-pin), diesel engines, up to July 2004	813
1.7.2 Position of relays:	813
1.8 Position of relays, relay carrier (4-pin), engine codes BKE, BRB, BNA, BLB, BRC, BPW, BVG, BVF, BRF, BRE, BVA, BRD, from August 2004	814
1.8.2 Position of relays:	814
1.9 Position of relays, relay carrier (4-pin), engine codes BSG, BPP, BTP, BKN, ASB, from August 2004	815
1.9.2 Position of relays:	815
1.10 Position of relays, relay carrier (4-pin), engine codes BGB, BPG, BWE, BWT, BUL, BPJ, BYK, from August 2004	816
1.10.2 Position of relays:	816
1.11 Position of relays, relay carrier (4-pin), engine code ALZ, from August 2004	817
1.11.2 Position of relays:	817
1.12 Position of relays, relay carrier (4-pin), engine code ALT, from August 2004	818
1.12.2 Position of relays:	818
1.13 Position of relays, relay carrier (4-pin), engine code BDG, from August 2004	819
1.13.2 Position of relays:	819

1.14 Position of relays, relay carrier (4-pin), engine codes BFB, BBK, BHF, from August 2004	820
1.14.2 Position of relays:	820
1.15 Position of relays, relay carrier (4-pin), engine code AWA, from August 2004	821
1.15.2 Position of relays:	821
1.16 Position of relays, relay carrier (4-pin), engine codes AUK, BKH, from August 2004	822
1.16.2 Position of relays:	822
1.17 Position of relays, relay carrier (4-pin), engine code BNS, from August 2004	823
1.17.2 Position of relays:	823
1.18 Position of relays, relay carrier (4-pin), engine code BBJ, from August 2004	824
1.18.2 Position of relays:	824
1.19 Position of relays, relay carrier (4-pin), engine code BBJ, from August 2004	825
1.19.2 Position of relays:	825
1.20 Position of relays, relay carrier for special vehicles	826
1.20.2 Position of relays, taxi	826
1.20.3 Position of relays, police	826
804 - -Fitting locations: Control units in front part of vehicle - 3	827-842
1. Control units in front part of vehicle	827-842
1.1 Control units overview	827-829
1.2 Heated windscreen control unit -J505-	830
1.3 Motronic control unit -J220-, diesel direct injection system control unit -J248-, Simos control unit -J361-	830
1.4 Automatic gearbox control unit -J217-	831
1.4.1 Location:	831
1.4.2 Location:	831
1.5 ABS control unit -J104-	832
1.6 Radiator fan control unit -J293-	832
1.7 Fresh air blower control unit -J126-	833
1.8 Headlight range control, control unit -J431-	833
1.9 Steering column electronics control unit -J527-	834
1.10 Display control unit in dash panel insert -J285-	834
1.11 Airbag control unit -J234-	835
1.12 Onboard power supply control unit -J519-	835
1.13 Trailer detector control unit -J345-	836
1.14 Parking aid control unit -J446-	836
1.15 Navigation operating electronics control unit -J402-	837
1.15.1 Location:	837
1.16 Radio -R-	837
1.16.1 Location:	837
1.17 Navigation system with CD drive control unit -J401-	838
1.17.1 Location:	838
1.17.2 Location:	838
1.18 Control unit with display for radio and navigation system -J503-	839
1.18.1 Location:	839
1.19 CD changer -R41-	839
1.20 Telephone and telematics control unit, telematics -J526-	840
1.20.1 Location:	840
1.21 Language input control unit -J507-	840
1.21.1 Location:	840
1.22 Convenience system central control unit -J393-	841
1.23 Driver door control unit -J386-	842
1.24 Front passenger side door control unit -J387-	842
805 - -Fitting locations: Control units in rear part of vehicle - 3	843-845
1. Control units in rear part of vehicle	843-845
1.1 Control units overview	843
1.2 Trailer detector control unit -J345-	844
1.3 Parking aid control unit -J446-	844
1.4 Rear left door control unit -J388-	845
1.5 Rear right door control unit -J389-	845
806 - -Fitting locations: Coupling stations and connectors from wiring harness set - 3	846-854
1. Coupling stations and connectors from wiring harness set	846-854
1.1 Overview of coupling stations and connectors from wiring harness set	846-847
1.2 Coupling station on right of A-pillar, up to July 2004	848
1.2.2 Pin connectors:	848
1.3 Coupling station on right of A-pillar, from August 2004	849
1.3.2 Pin connectors:	849
1.4 Coupling station seat wiring driver side	850

1.4.2 Pin connectors:	850
1.5 Coupling station seat wiring front passenger side	850-851
1.5.2 Pin connectors:	850-851
1.6 Coupling station on left of A-pillar	852
1.6.2 Pin connectors:	852
1.7 Coupling station with screw connection, up to July 2004	853
1.7.2 Pin connectors:	853
1.8 Coupling station with screw connection, from August 2004	854
1.8.2 Pin connectors:	854