

Contents

00 - Technical data	1
1 Rear final drive identification	1
1.1 Code letters, allocation, transmission ratios, capacities: Audi A4 2001 ▶ , Cabriolet 2003 ▶	2
1.2 Code letters, allocation, transmission ratios, capacities: Audi A6 2005 ▶	2
2 Transmission layout	3
3 General repair instructions	5
3.1 Jacking mode (vehicles with pneumatic suspension)	5
3.2 Special tools	5
3.3 Components	5
39 - Final drive - rear differential	7
1 Servicing propshaft - exploded view	7
1.1 Removing and installing propshaft	8
1.2 Detaching and attaching propshaft at rear final drive	15
2 Measuring and marking radial run-out at flange for propshaft	19
3 Checking gear oil in rear final drive	20
4 Exploded view – rear final drive	21
4.1 Removing and installing rear final drive	21
5 Renewing flange shaft oil seals	25
5.1 Renewing flange shaft oil seal (right-side)	26
5.2 Renewing flange shaft oil seal (left-side)	27
5.3 Renewing protective ring on flange shaft	29
6 Renewing oil seal for propshaft flange on rear final drive (rear final drive installed)	31
6.1 Renewing flange for propshaft and oil seal	36