

Contents

00	Technical data	1
1	Safety precautions	1
1.1	Safety precautions when working on vehicles with start/stop system	1
1.2	Safety precautions when using testers and measuring instruments during a road test	1
1.3	Safety precautions when handling gas discharge bulbs	2
2	Repair notes	4
2.1	Contact corrosion	4
3	Battery	5
3.1	Battery - general notes	5
3.2	Battery types	5
27	Starter, current supply, CCS	6
1	Battery	6
1.1	Exploded view - battery	6
1.2	Removing and installing battery	9
1.3	Disconnecting and connecting battery	14
1.4	Checking battery	16
1.5	Charging battery	16
1.6	Removing and installing earth cable with battery monitor control unit J367	18
1.7	Removing and installing battery cut-off relay/battery isolation igniter	20
2	Alternator	21
2.1	Exploded view - alternator	21
2.2	Removing and installing alternator	24
2.3	Checking alternator	49
3	Starter	50
3.1	Exploded view - starter	50
3.2	Removing and installing starter	52
4	Start/stop system	63
4.1	General description - start/stop system	63
4.2	Removing and installing voltage stabiliser	63
90	Gauges, instruments	65
1	Dash panel insert	65
1.1	Exploded view - dash panel insert	65
1.2	Removing and installing dash panel insert KX2	67
1.3	Removing and installing ambient temperature sensor	68
2	Clock	69
2.1	Removing and installing radio-controlled clock receiver	69
3	Horn	70
3.1	Exploded view - horn	70
3.2	Removing and installing treble horn H2 / bass horn H7	71
92	Windscreen wash/wipe system	72
1	Windscreen wiper system	72
1.1	Exploded view - windscreen wiper system	72
1.2	Moving windscreen wipers to service position	76
1.3	Removing and installing wiper blade	76
1.4	Removing and installing wiper arms	77
1.5	Adjusting wiper arms	78
1.6	Removing and installing windscreen wiper motor V	79
1.7	Renewing windscreen wiper motor	81
1.8	Removing and installing rain and light sensor	82

2	Windscreen washer system	90
2.1	Exploded view - windscreen washer system	90
2.2	Removing and installing washer fluid reservoir	92
2.3	Removing and installing windscreen washer fluid level sender	94
2.4	Removing and installing washer pump	95
2.5	Removing and installing washer jets	96
2.6	Adjusting washer jets	96
3	Rear window wiper system	98
3.1	Exploded view - rear window wiper system	98
3.2	Removing and installing wiper blade	99
3.3	Removing and installing wiper arm	99
3.4	Adjusting wiper arm	101
3.5	Removing and installing rear window wiper motor V12	101
4	Rear window washer system	103
4.1	Exploded view - rear window washer system	103
4.2	Removing and installing washer fluid reservoir	104
4.3	Removing and installing rear window washer pump	104
4.4	Removing and installing washer jet	105
4.5	Adjusting washer jet	105
5	Headlight washer system	106
5.1	Exploded view - headlight washer system	106
5.2	Removing and installing washer fluid reservoir	107
5.3	Removing and installing headlight washer system pump V11	107
5.4	Removing and installing washer jets	108
5.5	Adjusting washer jets	110
6	Washer fluid hoses	111
6.1	Repairing washer fluid hoses	111
94	Lights, bulbs, switches - exterior	112
1	Headlights	113
1.1	Exploded view - headlights	113
1.2	Removing and installing headlights	129
1.3	Removing and installing sealing frame	136
1.4	Removing and installing inner bracket for headlight housing	137
1.5	Removing and installing bracket (top) for headlight housing	138
1.6	Removing and installing mounting for headlight housing	139
1.7	Adjusting headlights	140
1.8	Removing and installing front turn signal bulb M5 / M7	158
1.9	Adapting headlights for driving on the left side of the road	162
1.10	Adapting headlights for driving on the right side of the road	165
1.11	Removing and installing headlight range control motor V48 / V49	168
1.12	Removing and installing headlight dipped beam bulb	175
1.13	Removing and installing headlight main beam bulb M30 / M32	177
1.14	Removing and installing gas discharge bulb L13 / L14	178
1.15	Removing and installing side light bulb M1 / M3	180
1.16	Removing and installing daytime running light bulb L174 / L175	184
1.17	Removing and installing daytime running lights	187
1.18	Removing and installing dynamic cornering light control motor V318 / V319	188
1.19	Removing and installing static cornering light L148 / L149	189
1.20	Removing and installing gas discharge bulb control unit J343 / J344	190
1.21	Removing and installing output module for headlight J667 / J668	191
1.22	Removing and installing dip beam screen motor V294 / V295	193
2	Fog lights	194
2.1	Exploded view - fog light	194
2.2	Removing and installing fog lights	196

2.3	Removing and installing fog light bulb L22 / L23	197
2.4	Adjusting fog lights	198
3	Side marker lights	200
3.1	Removing and installing front side marker bulb	200
3.2	Removing and installing output module for side marker light J986 / J987 , halogen headlights - vehicles from model year 2013 onwards	201
3.3	Removing and installing rear side marker bulb	202
4	Lights in exterior mirror	203
4.1	Exploded view - lights in exterior mirror	203
4.2	Removing and installing exterior mirror turn signal bulb L131 / L132	205
5	Tail light cluster	207
5.1	Exploded view - tail light cluster on body	207
5.2	Exploded view - tail light cluster on rear lid	214
5.3	Removing and installing bulb carrier	220
5.4	Removing and installing tail light cluster on rear lid	223
5.5	Removing and installing tail light cluster	231
5.6	Removing and installing rear fog light bulb L46 / L47	235
5.7	Removing and installing reversing light bulb	237
6	High-level brake light	240
6.1	Exploded view - high-level brake light	240
6.2	Removing and installing high-level brake light bulb	242
7	Number plate light	245
7.1	Removing and installing number plate light X4 / X5	245
8	Entry and start authorisation	246
8.1	Overview of fitting locations - entry and start authorisation system	246
8.2	Overview of fitting locations - keyless entry system	247
8.3	Exploded view - exterior door handle for keyless entry system	249
8.4	Removing and installing interior aerial 1 for entry and start authorisation R138	250
8.5	Removing and installing left aerial for entry and start authorisation R200	250
8.6	Removing and installing luggage compartment aerial for entry and start system R137	251
9	Steering column switch module	252
9.1	Exploded view - steering column switch module	252
9.2	Removing and installing steering column switch module	254
9.3	Removing and installing steering column electronics control unit J527	254
9.4	Removing and installing turn signal switch E2	256
9.5	Removing and installing cruise control system switch E45	256
9.6	Removing and installing intermittent wiper switch E22	257
9.7	Removing and installing entry and start authorisation switch E415	257
10	Parking aid	260
10.1	Overview - parking aid	260
10.2	Removing and installing parking aid control unit J446	262
10.3	Removing and installing front parking aid warning buzzer H22	263
10.4	Removing and installing rear parking aid warning buzzer H15	263
10.5	Removing and installing front parking aid senders	264
10.6	Removing and installing rear parking aid senders	267
11	Automatic headlight range control	268
11.1	Overview - automatic headlight range control	268
11.2	Removing and installing headlight range control unit	268
96	Lights, bulbs, switches - interior	270
1	Lights	271
1.1	Overview of fitting locations - lights in dash panel	271
1.2	Overview of fitting locations - lights in front doors	273
1.3	Overview of fitting locations - lights in rear doors	274

1.4	Overview of fitting locations - lights in centre console	275
1.5	Overview of fitting locations - lights in luggage compartment	276
1.6	Overview of fitting locations - lights in roof trim	276
1.7	Removing and installing glove compartment light W6	277
1.8	Removing and installing footwell illumination bulb (front) L151 / L152	278
1.9	Removing and installing central locking SAFELOCK function warning lamp K133	279
1.10	Removing and installing door opener illumination bulb L108 / L109	279
1.11	Removing and installing front entry light W31 / W32	280
1.12	Removing and installing door warning lamp W30 / W36	281
1.13	Removing and installing door opener illumination bulb L110 / L111	282
1.14	Removing and installing rear entry light W33 / W34	283
1.15	Removing and installing rear door warning lamp W37 / W38	284
1.16	Removing and installing selector lever position display Y26	285
1.17	Removing and installing footwell light (rear) W45 / W46	286
1.18	Removing and installing luggage compartment light W3	286
1.19	Renewing bulb for front interior light W1 / W13 / W19	288
1.20	Renewing bulb for rear interior light W47 / W48	290
1.21	Removing and installing LED for background lighting	291
1.22	Removing and installing dash panel vent illumination bulb (left and right) L67 / L69	292
1.23	Removing and installing vanity mirror light bulb L31	292
2	Controls	294
2.1	Overview of fitting locations - controls in dash panel	295
2.2	Overview of fitting locations - controls in front doors	297
2.3	Overview of fitting locations - controls in rear doors	298
2.4	Overview of fitting locations - controls in centre console	299
2.5	Overview of fitting locations - controls in luggage compartment	300
2.6	Overview of fitting locations - controls in roof trim	300
2.7	Removing and installing rotary light switch EX1	302
2.8	Removing and installing switch and instrument illumination regulator E20	303
2.9	Removing and installing headlight range control regulator E102	304
2.10	Removing and installing rear fog light button E314 , fog light button E315 , button for night vision system E680	304
2.11	Removing and installing start/stop operation button E693	305
2.12	Removing and installing front passenger side airbag deactivated warning lamp K145	305
2.13	Removing and installing switches in dash panel	306
2.14	Removing and installing hazard warning lights button E229	306
2.15	Removing and installing valet parking button E536	307
2.16	Removing and installing glove compartment light switch E26	308
2.17	Removing and installing mirror adjustment switch E43 / E168	308
2.18	Removing and installing operating unit for window regulator in driver door E512	309
2.19	Removing and installing window regulator switch in front passenger door E107	310
2.20	Removing and installing driver seat/front passenger seat memory operating unit E97 / E277	311
2.21	Removing and installing door contact switch F2 / F3	311
2.22	Removing and installing rear interior locking switch E273 / E274	312
2.23	Removing and installing door contact switch (rear) F10 / F11	312
2.24	Removing and installing electromechanical parking brake button E538 / auto-hold button E540	313
2.25	Removing and installing entry and start authorisation button E408	313
2.26	Removing and installing heated rear seat switch with regulator E128 / E129	315
2.27	Removing and installing buttons for rear seat heating E737 / E738	316
2.28	Removing and installing button to close rear lid in luggage compartment E406	316
2.29	Removing and installing rear lid contact switch	317
2.30	Removing and installing release button for rear lid lock cylinder F248	317
2.31	Removing and installing contact switch for vanity mirror F147 / F148	319
2.32	Removing and installing interior light/reading light (front)	319

2.33	Removing and installing interior light/reading light (rear)	320
2.34	Removing and installing garage door operating unit E284	321
2.35	Removing and installing rear lid remote release switch E188	321
2.36	Removing and installing driver side interior locking switch E150 / front passenger side interior locking switch E198	322
2.37	Removing and installing window regulator switches E52 / E54	322
2.38	Removing and installing sliding sunroof adjustment regulator E139	323
2.39	Removing and installing interior monitoring switch E183 / alarm system off switch E217	323
3	Anti-theft alarm system	324
3.1	Overview - interior monitoring	324
3.2	Removing and installing alarm horn H12	325
3.3	Removing and installing anti-theft alarm sensor G578	326
4	Lane change assist	327
4.1	Overview - lane change assist	327
4.2	Removing and installing button for lane change assist E530	329
4.3	Removing and installing lane change assist warning lamp in exterior mirror K233 / K234	329
4.4	Removing and installing lane change assist control unit J769 / J770	330
4.5	Calibrating lane change assist	331
5	Front camera for driver assist systems	340
5.1	Exploded view - main beam assist system, humidity sender and lane departure warning system	340
6	Towing bracket	342
6.1	Trailer socket	342
6.2	Removing and installing trailer detector control unit J345	342
7	Cigarette lighter, socket	343
7.1	Exploded view - cigarette lighter, 12 V socket	343
7.2	Removing and installing cigarette lighter U1	344
7.3	Removing and installing socket illumination bulb L42	346
7.4	Removing and installing cigarette lighter illumination bulb L28	349
7.5	Removing and installing 12 V socket 2 U18	349
7.6	Removing and installing AC/DC converter with socket, 12 V - 230 V U13	351
7.7	Removing and installing 12 V socket 3 U19	352
7.8	Renewing 12 V socket 3 U19	352
97 - Wiring		355
1	Relay carriers, fuse carriers, electronics boxes	355
1.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	355
1.2	Removing and installing electronics box	362
1.3	Removing and installing relay and fuse holder in electronics box	364
1.4	Removing and installing terminal 30 wiring junction 2 TV22	367
1.5	Removing and installing fuse holder at dash panel (right-side)	368
1.6	Removing and installing relay and fuse carrier behind dash panel (driver's side)	370
1.7	Removing and installing relay and fuse holder in luggage compartment (right-side)	373
1.8	Removing and installing fuse holder in dash panel (left-side)	376
2	Control units	380
2.1	Exploded view - data bus diagnostic interface	380
2.2	Removing and installing onboard supply control unit J519	380
2.3	Removing and installing garage door operation control unit	382
2.4	Removing and installing data bus diagnostic interface J533	383
2.5	Removing and installing special vehicle control unit J608	384
3	Connectors	386
3.1	Removing and installing CAN separating connector (right-side)	386
3.2	Removing and installing CAN separating connector (left-side)	388



3.3	Unplugging door disconnecter	389
3.4	Removing and installing connector point at A-pillar (left-side)	389
3.5	Removing and installing connector point at A-pillar (right-side)	390
3.6	Repairing electrical wiring harnesses and electrical connectors	391
4	Releasing and dismantling connector housings	392
5	Cleaning contact surfaces	393
6	Repairing aerial wires	394
7	Fibre optic cables	395
8	Vehicle diagnostic, testing and information systems	396