

Contents

91 - Radio, telephone, navigation	1
1 Infotainment system	1
1.1 Layout - infotainment system	1
1.2 Overview of fitting locations - infotainment system	26
1.3 Removing and installing infotainment system display	36
1.4 Removing and installing control unit for front display and information control panel	36
1.5 Removing and installing control unit 1 for information electronics J794	40
1.6 Removing and installing multimedia system operating unit E380	42
1.7 Pin assignment	44
2 Sound system	63
2.1 Layout - sound system	63
2.2 Overview of fitting locations - sound system	70
2.3 Removing and installing digital sound package control unit/amplifier	78
2.4 Removing and installing rear treble loudspeakers R14/R16	82
2.5 Removing and installing front treble loudspeakers R20/R22	83
2.6 Removing and installing rear mid-range loudspeakers	86
2.7 Removing and installing front mid-range loudspeakers	88
2.8 Removing and installing rear mid-range and bass loudspeakers	89
2.9 Removing and installing front bass loudspeakers R21/R23	90
2.10 Removing and installing subwoofer R211	91
2.11 Removing and installing centre loudspeaker	93
2.12 Pin assignment	95
3 Aerial systems	104
3.1 Layout - aerial systems	104
3.2 Overview of fitting locations - aerial systems	105
3.3 Removing and installing aerial amplifier	108
3.4 Removing and installing roof aerial	111
3.5 Removing and installing traffic data aerial	115
3.6 Removing and installing internet access aerial R266	116
3.7 Pin assignment for aerial amplifier	117
4 Radio	126
4.1 Layout - radio	126
4.2 Overview of fitting locations - radio	129
4.3 Removing and installing radio	131
4.4 Pin assignment	139
5 DVD/CD changer	154
5.1 Pin assignment	154
5.2 Removing and installing CD changer	155
6 Telephone system	159
6.1 Layout - telephone	159
6.2 Overview of fitting locations - telephone system	176
6.3 Assembly overview - microphone unit	182
6.4 Removing and installing microphone unit in front roof module R164	185
6.5 Removing and installing aerial amplifier for mobile telephone R86	186
6.6 Removing and installing telephone bracket R126	188
6.7 Removing and installing telephone transmitter and receiver unit	190
6.8 Pin assignment	193
7 Navigation system	216
7.1 Layout - navigation system	216
7.2 Overview of fitting locations - navigation system	222
7.3 Pin assignment	226
7.4 Removing and installing control unit for navigation system	241

7.5	Removing and installing chip card reader control unit	245
8	TV system	247
8.1	Layout - TV system	247
8.2	Overview of fitting locations - TV system	251
8.3	Pin assignment	255
8.4	Removing and installing TV tuner	263
8.5	Removing and installing TV card reader	269
9	Reversing camera system	272
9.1	Layout - reversing camera system	272
9.2	Overview of fitting locations - reversing camera system	274
9.3	Removing and installing reversing camera R189	275
9.4	Calibrating reversing camera system	278
9.5	Removing and installing reversing camera system control unit J772	283
9.6	Connectors on reversing camera system control unit J772	285
10	Multifunction steering wheel	287
10.1	Layout - multifunction steering wheel	287
10.2	Assembly overview - multi-function steering wheel	287
10.3	Removing and installing multifunction buttons in steering wheel E441/E440	290
10.4	Removing and installing tiptronic switches in steering wheel E439/E438	298
11	Voice control system	301
11.1	Layout - voice control system	301
11.2	Connector on speech input control unit	303
11.3	Removing and installing voice control system	304
12	Connection for external multimedia devices	307
12.1	Layout - connection for external multimedia devices	307
12.2	Connectors on connection for external multimedia devices	308
12.3	Removing and installing connection for external audio sources R199	311
13	Internet access	316
13.1	Layout - internet access	316
13.2	Removing and installing internet access control unit J666	316
13.3	Removing and installing internal battery for internet access control unit J666	317
13.4	Pin assignment	318