

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions when working on pyrotechnic components	2
1.2 Safety precautions when working on vehicles with start/stop system	4
1.3 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	4
1.4 Additional safety regulations for side airbags	5
1.5 Additional safety regulations for curtain airbags	5
1.6 Safety regulations for crash sensors (pressure sensors) for side airbag (front)	6
1.7 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	6
1.8 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	7
1.9 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	7
1.10 Checking airbag mounting components following an accident	9
1.11 Accident in which no airbag was triggered	10
1.12 Checking seat belts	10
1.13 Checking belt	10
1.14 Checking automatic belt retractor (locking action)	11
1.15 Visual inspection of belt buckle	12
1.16 Functional check of belt buckle	12
1.17 Checking guide fittings and latch plate	12
1.18 Checking securing components and anchorage points following an accident	12
1.19 Checking child seat restraint function of seat belt for additional child seats (not for driver's seat belt; country-specific version)	13
1.20 Checking child seat anchors following an accident	13
1.21 Safety regulations for interior mirror	14
2 Repair notes	15
2.1 Routing and attaching lines and wiring	15
2.2 Contact corrosion	15
68 - Interior equipment	16
1 Storage compartments/covers/trim panels	16
1.1 Overview of fitting locations - storage compartments/covers/trim panels	16
1.2 Exploded view - dash panel cover (driver side)	18
1.3 Exploded view - steering column trim	19
1.4 Exploded view - glove box	20
1.5 Removing and installing dash panel cover (driver side)	21
1.6 Removing and installing trim cover for dash panel insert	22
1.7 Removing and installing dash panel cover (passenger side)	23
1.8 Removing and installing steering column trim (top)	23
1.9 Removing and installing steering column trim (bottom)	24
1.10 Removing and installing glove box opening mechanism	24
1.11 Removing and installing glove box	25
1.12 Removing and installing glove box lid	27
1.13 Removing and installing cushioning element for glove box lid	27
2 Equipment	28
2.1 Exploded view - load guard	28
2.2 Exploded view - sun visors	29
2.3 Exploded view - sun blind	30
2.4 Removing and installing load guard	31
2.5 Removing and installing mounting for load guard	31
2.6 Removing and installing bracket for load guard	31



2.7	Removing and installing sun visor	32
2.8	Removing and installing centre bracket for sun visor	32
2.9	Removing and installing sun blind	33
2.10	Removing and installing grab handle	36
3	Centre console	38
3.1	Exploded view - centre console	38
3.2	Removing and installing centre console trim (rear)	42
3.3	Removing and installing centre console cover	43
3.4	Removing and installing ashtray (rear)	43
3.5	Removing and installing ashtray (front)	43
3.6	Removing and installing ashtray trim (front)	44
3.7	Removing and installing centre console insert	44
3.8	Removing and installing centre console storage compartment (front)	45
3.9	Removing and installing air vent in centre console (rear)	45
3.10	Removing and installing centre console	46
3.11	Removing and installing trim panel for centre console	47
3.12	Removing and installing cup holder	48
3.13	Removing and installing centre console storage compartment (rear)	48
3.14	Removing and installing bracket for centre console	50
4	Centre armrest (front)	51
4.1	Exploded view - centre armrest (front)	51
4.2	Removing and installing centre armrest (front)	52
4.3	Removing and installing centre armrest (top section)	52
4.4	Removing and installing trim for hinge arm	53
5	Interior mirror	54
5.1	Exploded view - interior mirror	54
5.2	Removing and installing interior mirror	55
5.3	Switching automatic anti-dazzle function on and off	56
5.4	Switching compass display on and off	57
5.5	Setting magnetic deflection zone	57
5.6	Calibrating digital compass	57
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	58
5.8	Selecting the applicable deflection zone from the map	58
5.9	Checking operation of automatic anti-dazzle interior mirror	64
69	Passenger protection	66
1	Seat belts	66
1.1	Overview of fitting locations - seat belts and anchorage points	66
1.2	Exploded view - three-point seat belt (front)	68
1.3	Exploded view - outer three-point seat belt (rear)	69
1.4	Exploded view - centre three-point seat belt (rear)	70
1.5	Exploded view - belt buckle (front)	71
1.6	Exploded view - belt buckle (rear)	72
1.7	Removing and installing three-point seat belt (front)	72
1.8	Removing and installing three-point seat belt (rear)	74
1.9	Removing and installing belt guide (rear)	83
1.10	Removing and installing belt guide (front)	86
1.11	Removing and installing belt end fitting (front)	86
1.12	Removing and installing outer belt end fitting (rear)	87
1.13	Removing and installing belt height adjuster	88
1.14	Removing and installing belt buckle (front)	90
1.15	Removing and installing belt buckle (rear)	92
2	Child seat anchors	94
2.1	Exploded view - child seat anchors (front)	94

2.2	Exploded view - child seat anchors (rear)	95
2.3	Removing and installing child seat anchor (front)	96
2.4	Removing and installing child seat anchor (rear)	96
3	Airbag system	97
3.1	Overview of fitting locations - airbag system	97
4	Airbag control unit	99
4.1	Exploded view - airbag control unit	99
4.2	Removing and installing airbag control unit J234	99
5	Battery isolation igniter	103
5.1	Exploded view - battery isolation igniter	103
5.2	Removing and installing battery isolation igniter	103
6	Airbag (driver side)	107
6.1	Exploded view - airbag (driver side)	107
6.2	Removing and installing airbag unit with igniters	109
6.3	Renewing connector at airbag	116
7	Airbag (front passenger side)	119
7.1	Exploded view - airbag (front passenger side)	119
7.2	Removing and installing airbag unit (front passenger side) with igniters	120
7.3	Removing and installing key operated switch to deactivate airbag on front passenger side	122
8	Side airbags	124
8.1	Exploded view - side airbag (front)	124
8.2	Exploded view - side airbag (rear)	125
8.3	Removing and installing side airbag (front) with airbag igniter	125
8.4	Removing and installing side airbag (rear) with airbag igniter	127
8.5	Deactivating side airbag (rear)	129
8.6	Activating side airbag (rear)	131
8.7	Sticker for deactivated side airbag (rear)	133
9	Curtain airbags	134
9.1	Exploded view - curtain airbag	134
9.2	Removing and installing curtain airbag with airbag igniter	136
10	Crash sensors for airbags	143
10.1	Overview of fitting locations - crash sensors for airbags	143
10.2	Removing and installing front airbag crash sensor for driver side G283	144
10.3	Removing and installing front side airbag crash sensor G179 / G180	146
10.4	Removing and installing crash sensor for side airbag (rear) G256 / G257	148
11	Seat position sensor	150
11.1	Exploded view - seat position sensor	150
11.2	Removing and installing seat position sensor	151
12	Belt-fastened recognition system	157
12.1	Removing and installing seat occupied sensor (front passenger side) G128	157
13	Seat occupied recognition system	162
13.1	Overview of fitting locations - seat occupied recognition system	162
13.2	Removing and installing seat occupied sensor	164
70	Trim, insulation	168
1	Door trim (front)	168
1.1	Exploded view - door trim (front)	168
1.2	Removing and installing mid-range loudspeaker trim	171
1.3	Removing and installing treble loudspeaker trim	172
1.4	Removing and installing trim for armrest (front)	172
1.5	Removing and installing trim panel	173
1.6	Removing and installing door trim (front)	174
1.7	Removing and installing armrest (front)	176

1.8	Removing and installing door puller (front)	176
1.9	Removing and installing switch trim	177
1.10	Removing and installing interior door handle	177
1.11	Removing and installing window frame trim	178
1.12	Removing and installing trim for switch	179
2	Door trim (rear)	180
2.1	Exploded view - door trim (rear)	180
2.2	Exploded view - sun blind for door window	183
2.3	Removing and installing treble loudspeaker trim	183
2.4	Removing and installing trim for armrest (rear)	184
2.5	Removing and installing door trim (rear)	184
2.6	Removing and installing armrest (rear)	186
2.7	Removing and installing door puller (rear)	187
2.8	Removing and installing window frame trim	187
2.9	Removing and installing sun blind for door window	188
2.10	Removing and installing retainer for sun blind	189
3	Dash panel	190
3.1	Overview of fitting locations - dash panel	190
3.2	Exploded view - dash panel	192
3.3	Removing and installing dash panel cover (side)	195
3.4	Removing and installing trim panel for dash panel	196
3.5	Removing and installing cover for MMI screen	196
3.6	Removing and installing loudspeaker trim	199
3.7	Removing and installing trim for light switch	201
3.8	Removing and installing mounting frame for radio/navigation system	201
3.9	Removing and installing trim for entry and start authorisation switch	201
3.10	Removing and installing retaining frame for dash panel insert	203
3.11	Removing and installing dash panel	203
3.12	Removing and installing loudspeaker mounting	208
3.13	Removing and installing dash panel vents	208
3.14	Removing and installing defroster vent (front centre)	210
4	Central tube for dash panel	211
4.1	Exploded view - central tube for dash panel	211
4.2	Exploded view - impact dampers and glove box brackets	213
4.3	Removing and installing central tube for dash panel	214
4.4	Removing and installing mounting bracket	217
4.5	Removing and installing impact dampers	217
4.6	Removing and installing glove box brackets	218
5	Passenger compartment trim panels	219
5.1	Overview of fitting locations - passenger compartment trim panels	219
5.2	Exploded view - sill panel trim	222
5.3	Exploded view - A-pillar trim	224
5.4	Exploded view - B-pillar trim	225
5.5	Exploded view - C-pillar trim	226
5.6	Exploded view - D-pillar trim	228
5.7	Exploded view - foot rest and floor covering	230
5.8	Exploded view - rear shelf	231
5.9	Removing and installing sill panel trim	232
5.10	Removing and installing A-pillar trim	235
5.11	Removing and installing trim cover for A-pillar trim	237
5.12	Removing and installing operating lever for bonnet lock	237
5.13	Removing and installing B-pillar trim	238
5.14	Removing and installing C-pillar trim	240
5.15	Removing and installing D-pillar trim	243
5.16	Removing and installing retainers for D-pillar trim	246

5.17	Removing and installing foot rest	247
5.18	Removing and installing floor covering	248
5.19	Removing and installing rear shelf	248
5.20	Removing and installing loudspeaker trim	250
5.21	Removing and installing cap	251
6	Luggage compartment trim panels	252
6.1	Overview of fitting locations - luggage compartment trim panels	252
6.2	Overview of fitting locations - rear lid trim	255
6.3	Exploded view - luggage compartment side trim	256
6.4	Exploded view - luggage compartment floor	258
6.5	Exploded view - rear lid trim (bottom)	262
6.6	Exploded view - rear lid trim (top)	264
6.7	Exploded view - lock carrier trim	265
6.8	Removing and installing rear lid trim (bottom)	266
6.9	Removing and installing rear lid trim (top)	269
6.10	Removing and installing luggage compartment side trim	270
6.11	Removing and installing luggage compartment floor	274
6.12	Removing and installing lock carrier trim	274
6.13	Removing and installing bracket for warning triangle	277
6.14	Removing and installing fastening ring	277
6.15	Removing and installing retainer(s) for luggage compartment floor covering	277
6.16	Removing and installing frame for loading aid	280
6.17	Removing and installing bag hook	280
6.18	Removing and installing grip for luggage compartment floor (rear)	281
6.19	Removing and installing trim cover	281
6.20	Removing and installing retaining rail	282
6.21	Removing and installing lining for spare wheel well	282
6.22	Removing and installing cover for warning triangle	283
6.23	Removing and installing tail light cover	283
6.24	Removing and installing trim for rear lid lock	284
7	Roof trim panels	286
7.1	Overview of fitting locations - roof trim	286
7.2	Exploded view - roof end trim	288
7.3	Exploded view - moulded headliner	289
7.4	Removing and installing roof end trim	290
7.5	Removing and installing moulded headliner	292
7.6	Attaching roof reinforcement to body	297
72	Seat frames	300
1	Overview - seat versions	300
1.1	Overview of fitting locations - seat versions	300
1.2	Moving front seat to service position	303
1.3	Attaching front seat to seat repair stand	303
2	Front seats	306
2.1	Overview of fitting locations - electrical and electronic components	308
2.2	Exploded view - front seat	312
2.3	Exploded view - modular wire routing	322
2.4	Exploded view - trim (sill side and tunnel side)	323
2.5	Exploded view - retaining bracket for trim (sill side)	325
2.6	Exploded view - seat height adjustment unit and seat height adjuster	327
2.7	Exploded view - actuators for seat, backrest and head restraint adjustment	328
2.8	Exploded view - torsion bar	329
2.9	Exploded view - backrest cover panel	330
2.10	Exploded view - front seat backrest	334
2.11	Exploded view - head restraint	337



2.12	Exploded view - seat pan	340
2.13	Exploded view - spring mat	341
2.14	Exploded view - seat longitudinal adjuster	342
2.15	Exploded view - seat rake adjuster	343
2.16	Exploded view - seat depth adjuster	344
2.17	Exploded view - storage compartment	345
2.18	Exploded view - lumbar support	346
2.19	Exploded view - lumbar support adjustment switch	348
2.20	Exploded view - seat and steering column adjustment control unit with memory function	349
2.21	Exploded view - control unit for seat ventilation (seat heating integrated)	350
2.22	Exploded view - seat longitudinal adjustment motor	351
2.23	Exploded view - backrest adjustment motor	352
2.24	Exploded view - seat height adjustment motor	353
2.25	Exploded view - seat rake adjustment motor	354
2.26	Exploded view - seat adjustment operating unit	355
2.27	Overview - seat cushion and backrest fans	356
2.28	Exploded view - pneumatic block	357
2.29	Removing and installing front seat	358
2.30	Unplugging and plugging in connectors	368
2.31	Connecting and disconnecting airbag adapter	371
2.32	Connector point connectors	374
2.33	Modular wire routing with corrugated tube on front seat	374
2.34	Removing and installing backrest adjustment unit	376
2.35	Removing and installing front seat backrest	378
2.36	Removing and installing outer section of seat belt guide	383
2.37	Removing and installing head restraint	384
2.38	Removing and installing head restraint guide	386
2.39	Dismantling and assembling seat pan	390
2.40	Removing and installing actuator for backrest and head restraint adjustment	393
2.41	Removing and installing backrest cover panel	395
2.42	Removing and installing trim for outer backrest frame	400
2.43	Removing and installing spring mat	401
2.44	Removing and installing seat height adjuster	403
2.45	Removing and installing seat height adjustment unit	405
2.46	Removing and installing seat longitudinal adjustment handle	408
2.47	Removing and installing Bowden cable for seat longitudinal adjustment	409
2.48	Removing and installing lever for engaging Bowden cable and spring for seat longitudinal adjustment	413
2.49	Repairing seat longitudinal adjuster, renewing connecting rod	414
2.50	Removing and installing seat adjustment actuator	418
2.51	Removing and installing seat rake adjustment handle	419
2.52	Removing and installing seat rake adjuster	420
2.53	Removing and installing seat depth adjuster	421
2.54	Removing and installing trim for seat depth adjuster	425
2.55	Removing and installing seat rail cover	428
2.56	Removing and installing spindle cover (seat rail)	430
2.57	Removing and installing trim (sill side)	431
2.58	Removing and installing trim (tunnel side)	434
2.59	Removing and installing side trim panels	435
2.60	Removing and installing outer side trim	438
2.61	Removing and installing retaining bracket for trim (sill side)	438
2.62	Removing and installing torsion bar	439
2.63	Removing and installing bearing for torsion bar	443
2.64	Removing and installing retaining plate for DVD player	446
2.65	Removing and installing storage compartment	446

2.66	Removing and installing seat and steering column adjustment control unit with memory function	448
2.67	Removing and installing retainer for seat and steering column adjustment control unit with memory function	451
2.68	Removing and installing control unit for seat ventilation J799 / J800 (seat heating integrated)	452
2.69	Removing and installing seat longitudinal adjustment motor	454
2.70	Removing and installing backrest adjustment motor	456
2.71	Removing and installing seat height adjustment motor	459
2.72	Removing and installing seat rake adjustment motor	464
2.73	Removing and installing seat adjustment operating unit	466
2.74	Removing and installing lumbar support	466
2.75	Removing and installing lumbar support longitudinal and height adjustment motors	473
2.76	Removing and installing lumbar support adjustment switch	474
2.77	Removing and installing seat cushion fan	476
2.78	Removing and installing backrest fan (top)	476
2.79	Removing and installing backrest fan (bottom)	477
2.80	Removing and installing button for backrest bolster adjustment and button for seat bolster adjustment	478
2.81	Removing and installing control unit	478
3	Rear seats	480
3.1	Exploded view - seat bench/individual seats	481
3.2	Exploded view - locking mechanism	482
3.3	Exploded view - head restraint and head restraint guide	483
3.4	Exploded view - rear seat backrest	484
3.5	Exploded view - centre armrest	487
3.6	Removing and installing seat bench/individual seats	492
3.7	Removing and installing centre storage compartment	494
3.8	Removing and installing lock cylinder	496
3.9	Removing and installing head restraint	499
3.10	Removing and installing head restraint guide	499
3.11	Removing and installing rear seat backrest	500
3.12	Removing and installing trim for locking mechanism	503
3.13	Removing and installing locking mechanism for rear seat backrest	504
3.14	Removing and installing flap for load-through hatch	505
3.15	Removing and installing centre armrest	506
3.16	Checking floor panel for retainers and wire frame of seat bench and correcting any deformations	508
3.17	Removing and installing cover for centre bracket	509
3.18	Removing and installing retaining clip	510
3.19	Removing and installing centre bracket	510
3.20	Removing and installing outer bearing	510
3.21	Removing and installing inner bearing	511
3.22	Removing and installing side padding	512
3.23	Removing and installing trim frame	512
3.24	Removing and installing trim for cup holder	513
3.25	Removing and installing cup holder	513
3.26	Removing and installing storage compartment (cover for backrest bracket with lid)	514
3.27	Removing and installing cover	515
3.28	Removing and installing bracket with hinges	515
3.29	Removing and installing lid	516
3.30	Removing and installing bracket with hinges	516
3.31	Removing and installing trim for rear seat backrest bracket	518
3.32	Removing and installing cover for rear seat backrest bracket	521
3.33	Removing and installing back panel trim	522

74 - Seat - padding, covers	524
------------------------------------	------------



1	Covers and padding on front seats	524
1.1	Exploded view - seat pan cover and padding	524
1.2	Exploded view - backrest cover and padding	528
1.3	Exploded view - head restraint cover and padding	530
1.4	Overview - seat heating elements	531
1.5	Overview - backrest heating element	535
1.6	Removing and installing seat pan cover and padding	536
1.7	Removing and installing backrest cover and padding	543
1.8	Separating seat pan cover and padding	554
1.9	Separating backrest cover and padding	559
1.10	Removing and installing head restraint cover and padding	562
1.11	Removing and installing seat heating element Z6 / Z8	566
1.12	Removing and installing backrest heating element Z7 / Z9	572
2	Covers and padding on rear seats	576
2.1	Exploded view - covers and padding	576
2.2	Exploded view - head restraint cover and padding	585
2.3	Overview - seat heating elements	586
2.4	Overview - backrest heating element	587
2.5	Removing and installing cover and padding	588
2.6	Removing and installing intermediate padding - backrest with load-through hatch	594
2.7	Removing and installing upper and lower padding (backrest with cover for backrest bracket / storage compartment)	594
2.8	Detaching cover from padding	595
2.9	Removing and installing head restraint cover and padding	602
2.10	Removing and installing head restraint trim	605
2.11	Removing and installing long-arm spring for head restraint	605
2.12	Removing and installing seat heating elements	605
2.13	Removing and installing backrest heating element	606