

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 Routing and attachment of lines and wiring	1
1.2 Contact corrosion	1
1.3 Bonding surfaces for self-adhesive components	1
1.4 Secure threaded connections	2
50 - Body - front	3
1 Lock carrier	3
1.1 Assembly overview - lock carrier	3
1.2 Assembly overview - bracket for mounting for headlight housing	5
1.3 Setting service position and returning to normal position	7
1.4 Removing and installing lock carrier brace	10
1.5 Removing and installing lock carrier cover	11
1.6 Removing and installing bracket for mounting for headlight housing	12
1.7 Adjusting bracket for mounting for headlight housing	14
2 Wing	16
2.1 Removing and installing wing	16
2.2 Removing and installing wing panel brace	18
2.3 Removing and installing seal for wing	19
2.4 Removing and installing closure plate	20
3 Bulkhead	22
3.1 Assembly overview - plenum chamber partition panel	22
3.2 Removing and installing plenum chamber cover	24
55 - Bonnet, rear lid	28
1 Bonnet	28
1.1 Assembly overview - bonnet	28
1.2 Assembly overview - bonnet lock	29
1.3 Assembly overview - Bowden cable	31
1.4 Assembly overview - gas strut	35
1.5 Assembly overview - bonnet seals	36
1.6 Adjusting bonnet	37
1.7 Removing and installing operating lever for bonnet lock	39
1.8 Removing and installing striker	41
1.9 Removing and installing hinges	42
1.10 Removing and installing insulation	43
1.11 Removing and installing gas strut	44
1.12 Releasing gas from gas strut	45
1.13 Removing and installing impact guard	46
2 Rear lid	47
2.1 Assembly overview - rear lid	47
2.2 Assembly overview - gas strut	52
2.3 Assembly overview - motor for rear lid	53
2.4 Adjusting rear lid	57
2.5 Removing and installing rear lid lock	65
2.6 Removing and installing hinges	67
2.7 Removing and installing actuating mechanism	74
2.8 Manual release for rear lid lock	77
2.9 Removing and installing rear lid seal	79
2.10 Removing and installing gas strut	82
2.11 Releasing gas from gas strut	82



3	Tank flap unit	84
3.1	Assembly overview - tank flap unit	84
3.2	Removing and installing lid for tank flap	86
3.3	Removing and installing tank flap	87
3.4	Removing and installing tank flap cup	89
3.5	Manual release for tank flap	90
57	- Front doors, door components, central locking	92
1	Door	92
1.1	Assembly overview - door	92
1.2	Assembly overview - door arrester	93
1.3	Removing and installing door	94
1.4	Adjusting door	95
1.5	Adjusting striker	100
1.6	Removing and installing door arrester	100
1.7	Removing and installing inner door seal	101
1.8	Removing and installing outer door seal	102
2	Door components	110
2.1	Assembly overview - window regulator	110
2.2	Assembly overview - door handle and door lock	111
2.3	Assembly overview - lock cylinder	114
2.4	Assembly overview - window guides and window slot seals	115
2.5	Removing and installing inner door cover	117
2.6	Removing and installing window regulator motor	118
2.7	Removing and installing window regulator	120
2.8	Removing and installing lock cylinder	123
2.9	Removing and installing cap for lock cylinder	123
2.10	Removing and installing door handle	124
2.11	Removing and installing door handle trim	126
2.12	Removing and installing contact sensor for front exterior door handle G605/G606	127
2.13	Removing and installing cover for door lock	128
2.14	Removing and installing door lock	128
2.15	Removing and installing mounting bracket	130
2.16	Removing and installing operating cable for door lock	132
2.17	Removing and installing cable for interior door handle	133
2.18	Removing and installing striker	135
2.19	Removing and installing outer window slot seal	135
3	Central locking system	139
3.1	Overview of fitting locations - central locking system	139
3.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	141
3.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	142
3.4	Removing and installing convenience system central control unit J393	143
3.5	Removing and installing interface control unit for vehicle location system J843	143
3.6	Removing and installing tank filler flap locking motor V155	144
58	- Rear doors, door components	147
1	Door	147
1.1	Assembly overview - door	147
1.2	Assembly overview - door arrester	148
1.3	Removing and installing door	149
1.4	Adjusting door	150
1.5	Adjusting striker	155
1.6	Removing and installing door arrester	155
1.7	Removing and installing inner door seal	156

1.8	Removing and installing outer door seal	157
2	Door components	166
2.1	Assembly overview - window regulator	166
2.2	Assembly overview - door handle and door lock	167
2.3	Assembly overview - housing	171
2.4	Assembly overview - window guides and window slot seals	172
2.5	Removing and installing inner door cover	174
2.6	Removing and installing window regulator motor	175
2.7	Removing and installing window regulator	177
2.8	Removing and installing housing	178
2.9	Removing and installing cap for housing	179
2.10	Removing and installing door handle	179
2.11	Removing and installing door handle trim	181
2.12	Removing and installing contact sensor for rear exterior door handle G417/G418	182
2.13	Removing and installing door lock	183
2.14	Removing and installing mounting bracket	184
2.15	Removing and installing operating cable for door lock	186
2.16	Removing and installing cable for interior door handle	188
2.17	Removing and installing striker	189
2.18	Removing and installing outer window slot seal	190
60	Sunroof	193
1	Sliding sunroof	193
1.1	Assembly overview - sliding sunroof	193
1.2	Assembly overview - sunroof roller blind	198
1.3	Removing and installing sliding sunroof panel	199
1.4	Removing and installing rear sliding sunroof panel	201
1.5	Adjusting sliding sunroof panel	202
1.6	Removing and installing sliding sunroof frame	203
1.7	Removing and installing wind deflector	206
1.8	Removing and installing sliding sunroof seals	208
1.9	Removing and installing sunroof sun blind	211
1.10	Removing and installing sunroof roller blind	211
1.11	Removing and installing cables for sunroof roller blind	213
1.12	Removing and installing sliding sunroof adjustment control unit J245	214
1.13	Removing and installing sunroof roller blind control unit J394	215
1.14	Adapting sliding sunroof adjustment control unit J245	215
1.15	Checking and adjusting zero position for cables (slotted guide)	216
1.16	Adjusting zero position for sliding sunroof adjustment control unit J245 (motor)	217
2	Water drain hoses	218
2.1	Assembly overview - water drain hoses	218
2.2	Cleaning water drain hoses	222
63	Bumpers	223
1	Front bumper	223
1.1	Assembly overview - bumper cover	223
1.2	Assembly overview - bumper carrier	229
1.3	Removing and installing lock carrier cover	230
1.4	Removing and installing bumper cover	231
1.5	Adjusting bumper cover	234
1.6	Removing and installing guides for bumper	235
1.7	Removing and installing air intake grille	235
1.8	Removing and installing attachments	238
1.9	Removing and installing impact absorber	239
1.10	Removing and installing bumper carrier	242
1.11	Removing and installing bracket for bumper carrier	244



1.12	Removing and installing retainer for bumper cover mounting	246
2	Bumper (rear)	248
2.1	Assembly overview - bumper cover	248
2.2	Assembly overview - bumper carrier	255
2.3	Removing and installing bumper cover	257
2.4	Removing and installing guides for bumper	263
2.5	Removing and installing attachments	266
2.6	Removing and installing bumper carrier	269
2.7	Removing and installing mounting for bumper carrier	271
64	- Glazing	273
1	Repair instructions	273
1.1	Minimum drying times for bonded windows	273
1.2	Repairing windows	273
1.3	Notes on installing flush-bonded windows	274
1.4	Preparing undamaged windows for installation	277
1.5	Preparing new windows for installation	278
1.6	Preparing body flange for installation	280
1.7	Cleaning off adhesive sealant	281
2	Windscreen	282
2.1	Assembly overview - windscreen	282
2.2	Removing and installing windscreen	283
3	Rear window	291
3.1	Assembly overview - rear window	291
3.2	Removing and installing rear window	293
4	Side windows	308
4.1	Assembly overview - side window	308
4.2	Removing and installing side window	310
5	Door windows	315
5.1	Assembly overview - front door window	315
5.2	Assembly overview - rear door window	315
5.3	Removing and installing front door window	316
5.4	Removing and installing rear door window	318
66	- Exterior equipment	322
1	Radiator grille/front trim	322
1.1	Assembly overview - radiator grille	322
1.2	Removing and installing radiator grille	325
1.3	Removing and installing bracket for ambient temperature sensor G17	327
1.4	Removing and installing number plate holder	328
1.5	Removing and installing reinforcement strut	328
1.6	Removing and installing mounting bracket for parking aid sender	329
2	Spoiler	331
2.1	Removing and installing spoiler	331
2.2	Removing and installing spoiler lip	333
2.3	Removing and installing spoiler (bottom)	334
3	Strips/trim panels/extensions	335
3.1	Assembly overview - side member trim	335
3.2	Assembly overview - heat shield	336
3.3	Removing and installing sill panel trim	338
3.4	Removing and installing side member trim	339
3.5	Removing and installing water deflector strip	346
3.6	Removing and installing trim panel for B-pillar on door	347
3.7	Removing and installing trim panel for C-pillar on door	349
3.8	Removing and installing wheel arch trim	349

4	Noise insulation	354
4.1	Assembly overview - noise insulation	354
4.2	Removing and installing noise insulation	359
4.3	Removing and installing air ducts	361
5	Underbody cladding	363
5.1	Assembly overview - underbody cladding	363
5.2	Assembly overview - tunnel cross-piece	364
6	Roof strips/roof rails	366
6.1	Assembly overview - roof rail	366
6.2	Assembly overview - roof trim strip	367
7	Exterior mirrors	369
7.1	Assembly overview - exterior mirror	369
7.2	Removing and installing exterior mirror	371
7.3	Removing and installing mirror glass	372
7.4	Removing and installing mirror adjustment unit	374
7.5	Removing and installing mirror cover	375
7.6	Removing and installing mirror trim	379
8	Wheel housing liners	381
8.1	Assembly overview - wheel housing liner (front)	381
8.2	Assembly overview - wheel housing liner (rear)	384
8.3	Removing and installing wheel housing liner (front)	387
8.4	Assembly overview - wheel spoiler (front)	388
8.5	Removing and installing inner wheel spoiler (front)	389
8.6	Removing and installing wheel housing liner (rear)	389
9	Lettering and badges	391
9.1	Dimensions - lettering and badges on rear lid	391
9.2	Dimensions - lettering and badges on wings	396
9.3	Removing and installing front badges	398