

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	6
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	7
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	8
3.10 Moulded foam inserts	8
3.11 Bonded joints	11
3.12 Ultra-high-strength steel (hot-formed)	12
3.13 Renewing studs	18
3.14 Thread repair for M6 pop rivet nut	19
3.15 Repairing thread for seat belt anchorage	19
3.16 Matching the surface contour	20
3.17 Surface treatment	21
4 Vehicle identification data	22
4.1 Type plate and vehicle identification number	22
4.2 Vehicle data sticker	22
5 Using edge milling unit -VAS 882 005-	24
5.1 General information	24
5.2 Assembling unit/changing milling tool	27
5.3 Separating flanged edges	37
5.4 Separating panels at corners and along surfaces	43
5.5 Separating outer edges	46
5.6 Roof - Renewal	49
5.7 Separating laser weld seams using round head milling unit	51
5.8 Aluminium panels	53
6 Processing body structure adhesive D 180 004 M2	56
6.1 Preparing bonding surfaces	57
7 Body panel gaps/shut lines	71
8 Body dimensions	74
8.1 Body - front (Saloon and Avant identical)	74
8.2 Body - centre (Saloon)	76
8.3 Body - centre (Avant)	79
8.4 Floor group - front (Saloon and Avant identical)	82
8.5 Floor group - rear (Saloon and Avant identical)	83
8.6 Body - rear (Saloon)	84
8.7 Body - rear (Avant)	85
9 Tools	88
10 Straightening jig	92
10.1 Procedure for repairing structural body damage on Audi vehicles	92



50 - Body - front	93
1 Safety precautions	93
2 Intermediate piece - Renewal	94
2.1 Tools	94
2.2 Procedure	94
3 Upper wheel housing longitudinal member - Renewal	98
3.1 Tools	98
3.2 Procedure	98
4 Suspension strut mounting - Renewal	101
4.1 Tools	101
4.2 Procedure	101
5 Front longitudinal member - Partial renewal	107
5.1 Tools	107
5.2 Procedure	107
6 Front longitudinal member - Renewal	113
6.1 Tools	113
6.2 Procedure	113
7 Longitudinal member reinforcement (front) - Renewal	122
7.1 Tools	122
7.2 Procedure	122
51 - Body - centre	126
1 Safety precautions	126
2 Permitted separating cuts on complete side panel	127
3 Roof - Renewal (Saloon)	129
3.1 Tools	129
3.2 Procedure	129
3.3 Vehicles with sliding/tilting sunroof	142
3.4 Tools	142
3.5 Procedure	143
4 Roof - Renewal (Avant)	146
4.1 Tools	146
4.2 Procedure	146
5 Vehicles with sliding/tilting sunroof (Avant)	162
5.1 Tools	162
5.2 Procedure	162
6 Roof cross member (front) - Renewal	180
6.1 Tools	180
6.2 Procedure	180
7 Roof side member - Renewal	184
7.1 Tools	184
7.2 Procedure	185
7.3 Roof side member - foam-filling	186
8 Front roof cross member - Renewal (Avant)	198
8.1 Tools	198
8.2 Procedure	198
9 Rear roof frame - Renewal (Saloon)	202
9.1 Tools	202
9.2 Procedure	202
10 Rear roof frame - Renewal (Avant)	206
10.1 Tools	206
10.2 Procedure	206

11	A-pillar - Renewal	211
11.1	Tools	211
11.2	Procedure	211
12	Inner A-pillar - Renewal	217
12.1	Tools	217
12.2	Procedure	217
13	Outer B-pillar - Renewal	222
13.1	Tools	222
13.2	Procedure	222
14	Inner B-pillar - Renewal	227
14.1	Tools	227
14.2	Procedure	227
15	Inner B-pillar - Partial renewal	233
15.1	Tools	233
15.2	Procedure	233
16	Outer side member - Renewal	238
16.1	Tools	238
16.2	Procedure	238
17	Inner side member - Renewal	242
17.1	Tools	242
17.2	Procedure	242
18	Inner side member - Partial renewal	248
18.1	Tools	248
18.2	Procedure	248
19	Inner side member reinforcement - Renewal	253
19.1	Tools	253
19.2	Procedure	253
53 - Body - rear		260
1	Safety precautions	260
2	Permitted separating cuts on complete side panel	261
3	Rear upper cross panel - Renewal	263
3.1	Tools	263
3.2	Procedure	263
4	Rear upper cross panel - Renewal (Avant)	265
4.1	Tools	265
4.2	Procedure	265
5	Rear cross panel - Renewal	268
5.1	Tools	268
5.2	Procedure	268
6	Rear cross panel - Renewal (Avant)	272
6.1	Tools	272
6.2	Procedure	272
7	Inner cross panel - Renewal	276
7.1	Tools	276
7.2	Procedure	276
8	Inner cross panel - Renewal (Avant)	279
8.1	Tools	279
8.2	Procedure	279
9	Tail light mounting - Renewal	283
9.1	Tools	283
9.2	Procedure	283



10	Rear longitudinal member - Partial renewal	286
10.1	Tools	286
10.2	Procedure	286
11	Rear longitudinal member - Renewal	291
11.1	Tools	291
11.2	Procedure	291
12	Side panel - Renewal	298
12.1	Tools	298
12.2	Procedure	298
13	Side panel - Renewal (Avant)	307
13.1	Tools	307
13.2	Procedure	307
14	C-pillar reinforcement - Renewal	316
14.1	Tools	316
14.2	Procedure	316
15	Rear wheel housing - Renewal	318
15.1	Tools	318
15.2	Procedure	318
16	Spare wheel well - Renewal	322
16.1	Tools	322
16.2	Procedure	322