

Contents

00 - Technical data	1
1 General notes	1
1.1 Type plates	2
1.2 Notes on odours in vehicles with air conditioner	4
1.3 Seat heating and seat ventilation (front)	6
1.4 Heated rear window	12
1.5 Notes on control of air conditioner (components in passenger compartment)	14
1.6 Notes on control of air conditioner (components not located in passenger compartment)	15
1.7 Notes on refrigerant circuit	19
1.8 Notes on heater and air conditioning unit (front)	24
1.9 Notes on operating and display unit	28
1.10 Overview - control motors of air conditioner	32
2 Safety precautions	35
2.1 Safety precautions when handling refrigerants	35
2.2 Safety precautions when working on high-voltage vehicles	38
2.3 Safety precautions when working on vehicles with start/stop system	45
2.4 Safety precautions when using testers and measuring instruments during a road test	45
2.5 Safety precautions when working on the cooling system	46
3 Repair instructions	47
3.1 Rules for cleanliness	47
3.2 General notes	47
3.3 General repair instructions	48
3.4 Contact corrosion	50
3.5 Checking electrical air conditioner components activated or evaluated via other control units	51
3.6 Checking air conditioner components - vehicles with high-voltage system	51
3.7 Checking heating output	54
3.8 Checking cooling output	73
3.9 Working on refrigerant circuit	105
3.10 Discharging refrigerant circuit	106
3.11 Notes on dust and pollen filter with activated charcoal filter insert	106
3.12 Paintwork repairs on vehicles with air conditioning system	108
3.13 Refrigerant circuit seals	108
4 Technical data	109
4.1 Refrigerant capacities	109
4.2 Approved refrigerant oils and refrigerant oil capacities	111
4.3 Oil distribution	116
80 - Heating	117
1 Overview of fitting locations - heater	117
87 - Air conditioning system	118
1 Overview of fitting locations - air conditioner	118
1.1 Overview of fitting locations - components not located in passenger compartment	118
1.2 Overview of fitting locations - components in passenger compartment (front)	133
2 Refrigerant circuit	149
2.1 System overview - refrigerant circuit	149
2.2 Overview of fitting locations - refrigerant lines	184
2.3 Exploded view - refrigerant lines	187
2.4 Checking cut-in signal for air conditioner compressor regulating valve N280	190
2.5 Checking activation of air conditioner compressor regulating valve N280	195
2.6 Removing and installing refrigerant pressure and temperature sender G395	195
2.7 Checking refrigerant pressure and temperature sender G395	197

2.8	Checking pressure signal at refrigerant pressure and temperature sender G395	199
2.9	Removing and installing refrigerant lines to battery cooling module on vehicle floor (front)	200
2.10	Removing and installing refrigerant lines to battery cooling module on vehicle floor (rear)	204
2.11	Removing and installing leadthrough for refrigerant lines into luggage compartment	209
2.12	Removing and installing refrigerant lines to battery cooling module in luggage compartment	214
2.13	Detaching and attaching refrigerant lines at quick-release couplings	219
2.14	Removing and installing refrigerant lines with internal heat exchanger	227
2.15	Removing and installing expansion valve	248
2.16	Removing and installing expansion valve (rear) with refrigerant shut-off valve 2 for hybrid battery N517	253
2.17	Detaching and attaching refrigerant lines at condenser	257
2.18	Removing and installing condenser	265
2.19	Removing and installing receiver	276
2.20	Removing and installing desiccant bag/desiccant cartridge	280
2.21	Differences in service connections depending on refrigerant (R134a or R1234yf)	288
2.22	Removing and installing evacuating and charging valve (low-pressure and high-pressure sides)	291
2.23	Starting up air conditioner after charging refrigerant circuit	293
3	Air conditioner compressor	298
3.1	Exploded view - drive unit for air conditioner compressor	298
3.2	Exploded view - pulley	301
3.3	Detaching and attaching air conditioner compressor at bracket	307
3.4	Detaching and attaching refrigerant lines at air conditioner compressor	326
3.5	Removing and installing air conditioner compressor	340
3.6	Preparations for renewing pulley	399
3.7	Removing and installing pulley	400
3.8	Unfastening and securing air conditioner compressor drive shaft	408
3.9	Removing and installing air conditioner compressor drive shaft	409
3.10	Removing and installing drive plate with overload protection	410
3.11	Checking and adjusting concentricity of drive plate with overload protection	411
3.12	Removing and installing drive plate at air conditioner compressor	411
3.13	Removing and installing drive plate with roller bearing	413
4	Control motors	415
4.1	Overview of fitting locations - control motors (front)	415
4.2	Removing and installing temperature flap control motor V68/rear temperature flap control motor V137	431
4.3	Removing and installing air flow flap control motor V71	435
4.4	Removing and installing centre vent control motor V102	438
4.5	Removing and installing defroster flap control motor V107	440
4.6	Removing and installing left footwell flap control motor V108/footwell flap control motor V261	442
4.7	Removing and installing right footwell flap control motor V109	444
4.8	Removing and installing left centre vent control motor V110	446
4.9	Removing and installing right centre vent control motor V111	449
4.10	Removing and installing air recirculation flap control motor V113	451
4.11	Removing and installing left temperature flap control motor V158	453
4.12	Removing and installing right temperature flap control motor V159	458
4.13	Removing and installing air recirculation flap 1 control motor for hybrid battery V479	461
4.14	Removing and installing air recirculation flap 2 control motor for hybrid battery V480	464
4.15	Removing and installing retaining plate (left-side) with control motors V108 and V110	468
4.16	Removing and installing retaining plate (right-side) with control motors V109 and V111	473
4.17	Removing and installing retaining plate (left-side) with footwell flap control motor V261	476
4.18	Dismantling and assembling retaining plate (left-side) with control motors V108 and V110	479
4.19	Dismantling and assembling retaining plate (right-side) with control motors V109 and V111	480

4.20	Dismantling and assembling retaining plate (left-side) with footwell flap control motor V261	481
5	Front heater and air conditioning unit	483
5.1	Exploded view - attachments for heater and air conditioning unit and air intake box	483
5.2	Exploded view - flaps and partitions in air distribution housing	491
5.3	Exploded view - air intake box of heater and air conditioning unit	495
5.4	Exploded view - evaporator housing	500
5.5	Removing and installing evaporator	504
5.6	Removing and installing evaporator housing	525
5.7	Cleaning evaporator	531
5.8	Checking auxiliary air heater element Z35	540
5.9	Removing and installing auxiliary air heater element Z35	544
5.10	Checking heating output of actuation of temperature flaps of air conditioner	548
5.11	Removing and installing heater and air conditioning unit	554
5.12	Removing and installing air intake box of heater and air conditioning unit	573
5.13	Removing and installing heater housing (left-side, with temperature flaps)	579
5.14	Removing and installing heater housing (right-side, with temperature flaps)	583
5.15	Removing and installing dust and pollen filter	597
5.16	Removing and installing fresh air blower V2	599
5.17	Removing and installing fresh air blower control unit J126	603
5.18	Preparations for removing heat exchanger	605
5.19	Removing and installing heat exchanger	611
5.20	Removing and installing condensation drain	623
5.21	Checking condensation drain	624
6	Air duct system	626
6.1	Exploded view - routing of air flow and air distribution in passenger compartment	626
6.2	Air intake and air outlet openings	630
6.3	Removing and installing footwell vent (driver side)	638
6.4	Removing and installing footwell vent (front passenger side)	639
6.5	Installing plugs in air duct to centre vent	640
6.6	Removing and installing forced ventilation vents in passenger compartment	641
6.7	Checking forced ventilation vents in passenger compartment	643
6.8	Removing and installing fresh air intake	647
6.9	Removing and installing intake duct	653
6.10	Removing and installing plenum chamber water drain	654
6.11	Checking plenum chamber water drain	657
6.12	Cleaning plenum chamber water drain	660
6.13	Removing and installing dash panel vents and rear vent	664
6.14	Connection for glove box cooling at air intake box	665
6.15	Masking slots of air duct to vents (rear)	666
7	Coolant circuit	667
7.1	Layout, activation and operation of coolant shut-off valve N82/N422	667
7.2	Layout, activation and operation of coolant circulation pump V50 (coolant pump V36)	672
8	Operating and display unit	677
8.1	Assignment of operating and display unit	677
8.2	Removing and installing operating and display unit	685
8.3	Removing and installing temperature sensor blower	688
9	Further control components	689
9.1	Removing and installing sunlight penetration photosensor G107	689
9.2	Operation of air quality sensor G238	691
9.3	Checking air quality sensor G238	694
9.4	Removing and installing air quality sensor G238/humidity sender in fresh air intake duct G657	703
9.5	Removing and installing ambient temperature sensor G17	707
9.6	Removing and installing centre vent temperature sender G191	708



9.7	Removing and installing footwell vent temperature sender G192/left footwell vent temperature sender G261	709
9.8	Removing and installing right footwell vent temperature sender G262	710
9.9	Removing and installing evaporator output temperature sender G263	710
9.10	Removing and installing humidity sender G355	712
9.11	Removing and installing rain and light sensor G397	716
9.12	Removing and installing front left chest vent temperature sensor G385	717
9.13	Removing and installing front right chest vent temperature sensor G386	717
9.14	Operation of humidity sender in fresh air intake duct G657	719
9.15	Checking humidity sender in fresh air intake duct G657	720
10	Battery cooling module	721
10.1	Overview of fitting locations - components not located in passenger compartment	721
10.2	Overview of fitting locations - components in passenger compartment (rear)	725
10.3	Exploded view - battery cooling module	727
10.4	Air intake, air outlet and routing of air flow at battery cooling module	731
10.5	Exploded view - air ducts	733
10.6	Removing and installing refrigerant shut-off valve 1 for hybrid battery N516	737
10.7	Removing and installing air outlet duct (rear) for drive battery A2	740
10.8	Removing and installing air outlet duct (front) for drive battery A2	742
10.9	Removing and installing air inlet duct for drive battery A2	745
10.10	Removing and installing air ducts (left and right) at drive battery A2	747
10.11	Moving battery cooling module to service position	750
10.12	Removing and installing battery cooling module	752
10.13	Removing and installing battery fan 1 V457	755
10.14	Removing and installing temperature sensor before evaporator for hybrid battery G756 ..	758
10.15	Removing and installing temperature sensor after evaporator for hybrid battery G757	760
10.16	Removing and installing condensation drain	762
10.17	Checking condensation drain	765