

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Technical data	2
2.1 Allocation of gearbox to engine	2
2.2 Capacities	2
3 Transmission layout	3
3.1 Transmission layout - front-wheel drive	3
4 Repair instructions	4
4.1 General repair instructions	4
5 Electrical components	8
30 - Clutch	9
1 Clutch mechanism	9
1.1 Exploded view - pedal cluster	9
1.2 Exploded view - clutch hydraulics	13
1.3 Exploded view - clutch release mechanism	14
1.4 Removing and installing clutch pedal	15
1.5 Removing and installing over-centre spring	16
1.6 Notes on removing and installing clutch master cylinder and slave cylinder	18
1.7 Checking clutch master cylinder and clutch slave cylinder	18
1.8 Removing and installing clutch master cylinder	19
1.9 Removing and installing clutch slave cylinder	24
1.10 Bleeding clutch hydraulics	26
2 Clutch	29
2.1 Exploded view - clutch module	29
2.2 Exploded view - clutch unit	30
2.3 Tightening sequence - clutch module to drive plate	30
34 - Controls, housing	33
1 Selector mechanism	33
1.1 Overview - selector mechanism	33
1.2 Exploded view - gear knob and cover	34
1.3 Exploded view - selector mechanism	35
1.4 Removing and installing gear knob	37
1.5 Removing and installing noise insulation	38
1.6 Removing and installing selector mechanism	39
1.7 Adjusting selector mechanism	43
1.8 Renewing selector shaft oil seal	46
1.9 Removing and installing gear detector switch F208	49
2 Removing and installing gearbox	52
2.1 Removing gearbox	52
2.2 Installing gearbox	59
2.3 Tightening torques for gearbox	67
3 Transporting gearbox	69
4 Assembly mountings	70
4.1 Exploded view - assembly mountings	70
4.2 Removing and installing tunnel cross member	70
4.3 Removing and installing gearbox support with gearbox mounting	72
4.4 Removing and installing gearbox mounting	73
5 Gear oil	74



5.1	Checking gear oil level	74
6	Dismantling and assembling gearbox	75
35	Gears, shafts	76
1	Dismantling and assembling gears and shafts	76
39	Final drive - front differential	77
1	Oil seals	77
1.1	Overview of fitting locations - oil seals	77
1.2	Renewing oil seal (right-side)	78
2	Final drive	82
2.1	Renewing cover for final drive	82