

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Identification of final drive .....	1
<b>2 Technical data</b> .....	<b>4</b>
2.1 Allocation of gearbox to engine .....	4
2.2 Capacities .....	8
<b>3 Transmission layout</b> .....	<b>9</b>
3.1 Transmission layout - four-wheel drive .....	9
<b>4 Repair instructions</b> .....	<b>10</b>
4.1 General repair instructions .....	10
<b>5 Electrical components</b> .....	<b>14</b>
5.1 Overview of fitting locations - electrical components .....	14
<b>30 - Clutch</b> .....	<b>15</b>
<b>1 Clutch mechanism</b> .....	<b>15</b>
1.1 Exploded view - pedal cluster .....	15
1.2 Exploded view - clutch hydraulics .....	19
1.3 Exploded view - clutch release mechanism .....	20
1.4 Removing and installing over-centre spring .....	20
1.5 Removing and installing clutch pedal .....	23
1.6 Notes on removing and installing clutch master cylinder and slave cylinder .....	24
1.7 Checking clutch master cylinder and clutch slave cylinder .....	24
1.8 Removing and installing clutch master cylinder .....	25
1.9 Removing and installing clutch slave cylinder .....	29
1.10 Bleeding clutch hydraulics .....	31
<b>2 Clutch</b> .....	<b>33</b>
2.1 Exploded view - clutch module .....	33
2.2 Exploded view - clutch unit .....	34
2.3 Tightening sequence - clutch module to drive plate .....	34
<b>34 - Controls, housing</b> .....	<b>37</b>
<b>1 Selector mechanism</b> .....	<b>37</b>
1.1 Installation position - selector mechanism .....	37
1.2 Exploded view - gear knob and cover .....	38
1.3 Exploded view - selector mechanism .....	39
1.4 Removing and installing gear knob .....	41
1.5 Removing and installing noise insulation .....	42
1.6 Removing and installing selector mechanism .....	43
1.7 Adjusting selector mechanism .....	48
1.8 Renewing selector shaft oil seal .....	51
1.9 Removing and installing gear detector switch F208 .....	54
<b>2 Removing and installing gearbox</b> .....	<b>61</b>
2.1 Removing gearbox .....	61
2.2 Installing gearbox .....	95
2.3 Tightening torques for gearbox .....	117
<b>3 Transporting gearbox</b> .....	<b>121</b>
<b>4 Assembly mountings</b> .....	<b>122</b>
4.1 Exploded view - assembly mountings .....	122
4.2 Removing and installing tunnel cross member .....	122
4.3 Removing and installing gearbox support with gearbox mounting .....	124
4.4 Removing and installing gearbox mounting .....	125



<b>5</b>	<b>Dismantling and assembling gearbox</b> .....	<b>126</b>
<b>6</b>	<b>Gear oil</b> .....	<b>127</b>
6.1	Checking gear oil level .....	127
<b>35 - Gears, shafts</b> .....		<b>128</b>
1	<b>Dismantling and assembling gears and shafts</b> .....	<b>128</b>
<b>39 - Final drive - front differential</b> .....		<b>129</b>
<b>1</b>	<b>Oil seals</b> .....	<b>129</b>
1.1	Overview of fitting locations - oil seals .....	129
1.2	Renewing oil seal (right-side) .....	130
<b>2</b>	<b>Final drive</b> .....	<b>134</b>
2.1	Renewing cover for final drive .....	134
<b>3</b>	<b>Front differential</b> .....	<b>140</b>
<b>4</b>	<b>Centre differential</b> .....	<b>141</b>
4.1	Exploded view - centre differential housing .....	141
4.2	Removing and installing centre differential housing .....	142
4.3	Renewing oil seal for rear splined shaft .....	147
4.4	Renewing oil seal for flange shaft (rear) .....	152