

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when using testers and measuring instruments during a road test	3
2.3 Notes on tow-starting and towing	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 General notes	4
3.3 General repair instructions	5
3.4 Contact corrosion	7
4 Technical data	8
4.1 Allocation of gearbox to engine	8
4.2 Capacities	10
5 Transmission layout	11
5.1 Transmission layout - four-wheel drive	11
32 - Torque converter	12
1 Torque converter	12
1.1 Exploded view - torque converter	12
1.2 Identification of torque converter	13
1.3 Removing and installing torque converter	13
1.4 Draining torque converter	15
1.5 Checking torque converter	15
1.6 Removing and installing oil seal for torque converter	15
37 - Controls, housing	17
1 Selector mechanism	17
1.1 Exploded view - selector mechanism	17
1.2 Exploded view - selector lever handle	19
1.3 Exploded view - selector lever cable	20
1.4 Checking selector mechanism	20
1.5 Manual release from position P	22
1.6 Removing and installing selector mechanism	23
1.7 Dismantling and assembling selector mechanism	27
1.8 Removing and installing selector lever handle	30
1.9 Detaching selector lever boot from selector lever handle	33
1.10 Removing and installing selector lever position display Y26	34
1.11 Removing and installing selector lever cable	34
1.12 Checking and adjusting selector lever cable	39
1.13 Adjusting selector lever cable to basic setting	40
1.14 Renewing selector shaft oil seal	44
2 Removing and installing gearbox	47
2.1 Removing gearbox	47
2.2 Installing gearbox	86
2.3 Tightening torques for gearbox	110
3 Assembly mountings	115
3.1 Exploded view - assembly mountings	115
3.2 Removing and installing tunnel cross member	115
3.3 Removing and installing gearbox support with gearbox mounting	117
3.4 Removing and installing gearbox mounting	118



4	Transporting gearbox	119
5	Securing to engine and gearbox support	121
6	ATF	122
6.1	Checking ATF level	122
6.2	Draining and filling ATF	126
7	ATF circuit	131
7.1	Exploded view - ATF circuit	131
7.2	Cleaning ATF lines	134
38 - Gears, control		136
1	ATF system	136
1.1	Exploded view - ATF system	136
1.2	Removing and installing oil pan	138
1.3	Removing and installing ATF strainer	140
2	Mechatronic unit	142
2.1	Removing and installing mechatronic unit	142
2.2	Removing and installing wiring harness in gearbox	146
39 - Final drive - front differential		148
1	Final drive	148
1.1	Exploded view - final drive	148
1.2	Renewing O-ring on cover for front final drive	149
2	Gear oil	151
2.1	Checking gear oil level	151
2.2	Draining and filling gear oil	153
3	Oil seals	157
3.1	Renewing oil seal (left-side)	157
3.2	Renewing oil seal (right-side)	160
4	Differential	162
4.1	Removing and installing flange shaft (left-side)	162
4.2	Removing and installing flange shaft (right-side)	163
5	Centre differential	166
5.1	Exploded view - centre differential	166
5.2	Removing and installing centre differential	168
5.3	Renewing oil seal for flange shaft (rear)	172
5.4	Renewing ball bearing for flange shaft (rear)	174
5.5	Renewing ball bearing for centre differential	176
6	Gearbox control system	179
6.1	Overview of fitting locations - gearbox control system	179