

Contents

00 - Technical data	1
1 Identification	1
1.1 Gearbox identification	1
2 Safety precautions	2
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when working on vehicles with start/stop system	3
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Notes on tow-starting and towing	3
3 Repair instructions	4
3.1 Rules for cleanliness	4
3.2 General notes	4
3.3 General repair instructions	5
3.4 Contact corrosion	7
3.5 Safety functions of gearbox control unit	7
4 Technical data	8
4.1 Allocation of gearbox to engine	8
4.2 Capacities	11
30 - Clutch	14
1 Clutch	14
1.1 Exploded view - flywheel and dual clutch	14
1.2 Removing and installing flywheel	15
1.3 Removing dual clutch	15
1.4 Installing dual clutch	15
34 - Controls, housing	17
1 Mechatronic unit	17
1.1 Exploded view - mechatronic unit	17
1.2 Removing and installing oil pan	20
1.3 Removing and installing ATF filter	21
1.4 Removing and installing mechatronic unit	22
2 Selector mechanism	24
2.1 Exploded view - selector mechanism	24
2.2 Exploded view - selector lever handle	26
2.3 Exploded view - selector lever cable	28
2.4 Checking selector mechanism	28
2.5 Manual release from position P	31
2.6 Removing and installing selector mechanism	32
2.7 Dismantling and assembling selector mechanism	38
2.8 Removing and installing selector lever handle	41
2.9 Removing and installing selector lever position display Y26	51
2.10 Removing and installing selector lever cable	51
2.11 Checking and adjusting selector lever cable	57
2.12 Adjusting selector lever cable to basic setting	58
2.13 Renewing selector shaft oil seal	61
3 Removing and installing gearbox	64
3.1 Removing gearbox	64
3.2 Installing gearbox	126
3.3 Tightening torques for gearbox	136
4 Assembly mountings	139
4.1 Exploded view - assembly mountings	139
4.2 Removing and installing tunnel cross member	140



4.3	Removing and installing gearbox support with gearbox mounting	142
4.4	Removing and installing gearbox mounting	143
5	Transporting gearbox	144
6	Securing to engine and gearbox support	145
7	ATF	146
7.1	Exploded view - drain, filler and inspection plugs	146
7.2	Checking ATF level	146
7.3	Draining and filling ATF	149
8	ATF circuit	153
8.1	Exploded view - ATF circuit	153
8.2	Cleaning ATF lines	162
8.3	Removing and installing ATF lines	164
8.4	Removing and installing ATF filter	178
8.5	Removing and installing ATF filter housing and connecting piece for ATF lines	186
35	Gears, shafts	189
1	Input shaft	189
1.1	Renewing ball bearing for input shaft	189
1.2	Renewing input shaft oil seal	189
39	Final drive - front differential	190
1	Final drive	190
1.1	Exploded view - final drive	190
2	Gear oil	192
2.1	Exploded view - gear oil drain and inspection plugs	192
2.2	Checking gear oil level	193
2.3	Draining and filling gear oil	197
2.4	Removing and installing gearbox oil temperature sender 2 G754	204
3	Oil seals	205
3.1	Renewing oil seal (left-side)	205
3.2	Renewing oil seal (right-side)	205
4	Differential	206
4.1	Removing and installing flange shaft (left-side)	206
4.2	Removing and installing flange shaft (right-side)	206
5	Centre differential	209
5.1	Exploded view - centre differential housing	209
5.2	Removing and installing centre differential housing	213
5.3	Removing and installing rear flange shaft, oil seal and ball bearing for rear flange shaft	225
5.4	Removing and installing rear splined shaft, oil seal and ball bearing	225
5.5	Renewing oil seal for rear splined shaft	225
5.6	Pressing vibration damper onto rear splined shaft	226
5.7	Removing and installing centre differential housing	226
6	Gearbox control system	227
6.1	Overview of fitting locations - gearbox control system	227
6.2	Guided Functions for gearbox	231