

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Repair instructions</b> .....	<b>1</b>
1.1 General repair instructions .....	1
1.2 Contact corrosion .....	2
1.3 Rules for cleanliness .....	3
1.4 Common faults .....	3
<b>37 - Controls, housing</b> .....	<b>4</b>
<b>1 ATF</b> .....	<b>4</b>
1.1 Purging ATF .....	4
<b>2 Transporting gearbox</b> .....	<b>14</b>
<b>3 Securing to engine and gearbox support</b> .....	<b>15</b>
<b>38 - Gears, control</b> .....	<b>17</b>
<b>1 Dismantling and assembling gearbox</b> .....	<b>17</b>
1.1 Exploded view - dual-mass flywheel .....	17
1.2 Exploded view - end cover .....	18
1.3 Exploded view - input shaft .....	20
1.4 Exploded view - intermediate housing .....	21
1.5 Exploded view - pulley set I and II .....	22
1.6 Exploded view - suction-jet pump, bearing flange .....	23
1.7 Exploded view - ATF filter, valve unit .....	25
1.8 Removing and installing dual-mass flywheel .....	26
1.9 Removing and installing end cover .....	28
1.10 Cleaning selector shaft .....	29
1.11 Modifying thrust piece T40099 for use with multitronic gearbox 0AW, front-wheel drive ..	30
1.12 Removing and installing input shaft .....	31
1.13 Removing and installing input shaft cover .....	37
1.14 Renewing ball bearing for input shaft .....	42
1.15 Removing and installing pulley set I and II .....	45
1.16 Removing and installing bearings .....	58
1.17 Removing and installing suction-jet pump .....	72
1.18 Wear assessment .....	73
<b>2 Clutch</b> .....	<b>78</b>
2.1 Exploded view - reverse gear clutch .....	78
2.2 Exploded view - input shaft with friction plates .....	79
2.3 Removing and installing reverse gear clutch and determining shim thicknesses .....	79
2.4 Dismantling and assembling input shaft .....	86
2.5 Adjusting input shaft and checking clearance .....	93
2.6 Assessing wear on input shaft .....	99
<b>39 - Final drive - differential</b> .....	<b>102</b>
<b>1 Final drive</b> .....	<b>102</b>
1.1 Exploded view - final drive .....	102
<b>2 Oil seals</b> .....	<b>105</b>
2.1 Renewing oil seal (left-side) .....	105
2.2 Renewing oil seal (right-side) .....	108
2.3 Renewing oil seal for input shaft .....	109
2.4 Renewing selector shaft oil seal .....	110
<b>3 Differential</b> .....	<b>114</b>
3.1 Removing and installing flange shaft (left-side) .....	114
3.2 Removing and installing flange shaft (right-side) .....	117



3.3	Preload of ball bearing for flange shaft (left-side) .....	118
3.4	Renewing mounting bracket and ball bearing for flange shaft (left-side) .....	124
<b>4</b>	<b>Gearbox control system</b> .....	<b>127</b>
4.1	Removing and installing gearbox control unit .....	127
4.2	Removing and installing hydraulic control unit .....	129