

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Identification</b>	1
1.1    Engine identification number/engine data	1
2 <b>Safety precautions</b>	2
3 <b>Repair instructions</b>	3
<b>10 - Removing and installing engine</b>	<b>4</b>
1 <b>Removing and installing engine</b>	4
1.1    Removing engine	4
1.2    Securing engine to engine and gearbox support	20
1.3    Installing engine	20
2 <b>Assembly mountings</b>	28
2.1    Exploded view - assembly mountings	28
2.2    Supporting engine in installation position	28
2.3    Removing and installing engine mountings	29
3 <b>Engine cover panel</b>	31
<b>13 - Crankshaft group</b>	<b>32</b>
1 <b>Cylinder block (pulley end)</b>	32
1.1    Exploded view - cylinder block (pulley end)	32
1.2    Removing and installing poly V-belt	32
1.3    Removing and installing tensioner for poly V-belt	32
1.4    Removing and installing vibration damper	32
1.5    Removing and installing bracket for ancillaries	33
2 <b>Cylinder block (gearbox end)</b>	34
3 <b>Crankshaft</b>	35
4 <b>Balance shaft</b>	36
5 <b>Pistons and conrods</b>	37
<b>15 - Cylinder head, valve gear</b>	<b>38</b>
1 <b>Timing chain cover</b>	38
2 <b>Chain drive</b>	39
3 <b>Cylinder head</b>	40
3.1    Exploded view - cylinder head	40
3.2    Removing and installing cylinder head	40
3.3    Checking compression	43
4 <b>Valve gear</b>	44
4.1    Exploded view - valve gear	44
4.2    Removing and installing camshaft	44
4.3    Installing ball for slider	46
4.4    Removing and installing actuators for camshaft adjustment	46
4.5    Removing and installing camshaft control valve 1 N205	46
4.6    Removing and installing valve stem oil seals	46
5 <b>Inlet and exhaust valves</b>	47
<b>17 - Lubrication</b>	<b>48</b>
1 <b>Sump/oil pump</b>	48
1.1    Exploded view - sump/oil pump	48
1.2    Engine oil	48
1.3    Removing and installing sump (bottom section)	48
1.4    Removing and installing oil pump	49

1.5	Removing and installing sump (top section) . . . . .	49
1.6	Removing and installing oil level and oil temperature sender G266 . . . . .	49
<b>2</b>	<b>Engine oil cooler . . . . .</b>	<b>50</b>
<b>3</b>	<b>Crankcase breather . . . . .</b>	<b>51</b>
<b>4</b>	<b>Oil filter/oil pressure switches . . . . .</b>	<b>52</b>
<b>19 - Cooling . . . . .</b>		<b>53</b>
<b>1</b>	<b>Cooling system/coolant . . . . .</b>	<b>53</b>
1.1	Connection diagram - coolant hoses . . . . .	53
1.2	Checking cooling system for leaks . . . . .	54
1.3	Draining and filling cooling system . . . . .	54
<b>2</b>	<b>Coolant pump/thermostat assembly . . . . .</b>	<b>60</b>
2.1	Exploded view - coolant pump/thermostat . . . . .	60
2.2	Exploded view - coolant temperature senders . . . . .	60
2.3	Exploded view - coolant valve for gearbox . . . . .	62
2.4	Removing and installing coolant pump . . . . .	62
2.5	Removing and installing toothed belt for coolant pump . . . . .	63
2.6	Removing and installing actuator for engine temperature regulation N493 . . . . .	63
2.7	Removing and installing coolant temperature sender G62 . . . . .	64
2.8	Removing and installing radiator outlet coolant temperature sender G83 . . . . .	64
2.9	Removing and installing coolant valves . . . . .	65
<b>3</b>	<b>Coolant pipes . . . . .</b>	<b>67</b>
3.1	Exploded view - coolant pipes . . . . .	67
3.2	Removing and installing coolant pipes . . . . .	68
<b>4</b>	<b>Radiator/radiator fans . . . . .</b>	<b>71</b>
4.1	Exploded view - radiator/radiator fans . . . . .	71
4.2	Removing and installing radiator . . . . .	73
4.3	Removing and installing radiator cowl . . . . .	79
4.4	Removing and installing radiator fan control unit J293 . . . . .	84
4.5	Removing and installing radiator fans . . . . .	85
<b>21 - Turbocharging/supercharging . . . . .</b>		<b>88</b>
<b>1</b>	<b>Turbocharger . . . . .</b>	<b>88</b>
1.1	Exploded view - turbocharger . . . . .	88
1.2	Removing and installing turbocharger . . . . .	88
<b>2</b>	<b>Charge air system . . . . .</b>	<b>89</b>
2.1	Exploded view - charge air system . . . . .	89
2.2	Exploded view - hose connections for charge air system . . . . .	90
2.3	Removing and installing charge air cooler . . . . .	90
2.4	Removing and installing charge pressure sender G31 . . . . .	92
2.5	Checking charge air system for leaks . . . . .	92
<b>24 - Mixture preparation - injection . . . . .</b>		<b>94</b>
<b>1</b>	<b>Injection system . . . . .</b>	<b>94</b>
1.1	Overview of fitting locations - injection system . . . . .	94
<b>2</b>	<b>Air cleaner . . . . .</b>	<b>102</b>
2.1	Exploded view - air cleaner housing . . . . .	102
2.2	Removing and installing air cleaner housing . . . . .	103
<b>3</b>	<b>Intake manifold . . . . .</b>	<b>105</b>
3.1	Exploded view - intake manifold . . . . .	105
3.2	Removing and installing intake manifold . . . . .	105
3.3	Removing and installing throttle valve module J338 . . . . .	108
3.4	Cleaning throttle valve module . . . . .	109
3.5	Checking intake manifold change-over function . . . . .	109

<b>4</b>	<b>Injectors</b>	110
4.1	Exploded view - fuel rail with injectors	110
4.2	Removing and installing fuel rail	110
4.3	Removing and installing injectors	110
4.4	Cleaning injectors	110
<b>5</b>	<b>Senders and sensors</b>	111
5.1	Removing and installing intake air temperature sender G42 / intake manifold pressure sender G71	111
5.2	Removing and installing fuel pressure sender G247	111
5.3	Checking fuel pressure sender G247	112
5.4	Removing and installing fuel pressure sender for low pressure G410	112
<b>6</b>	<b>High-pressure pump</b>	113
<b>7</b>	<b>Lambda probe</b>	114
<b>8</b>	<b>Engine control unit</b>	115
8.1	Removing and installing engine/motor control unit J623	115
<b>26</b>	<b>- Exhaust system</b>	119
1	<b>Exhaust pipes/silencers</b>	119
1.1	Exploded view - silencers	119
1.2	Separating exhaust pipes/silencers	121
1.3	Removing and installing front silencers	122
1.4	Renewing tailpipes	123
1.5	Stress-free alignment of exhaust system	124
1.6	Checking exhaust system for leaks	125
<b>2</b>	<b>Emission control system</b>	126
2.1	Exploded view - emission control system	126
2.2	Removing and installing catalytic converter	126
<b>28</b>	<b>- Ignition system</b>	130
1	<b>Ignition system</b>	130