



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
1.2 Technical data of injection system	2
2 General notes	3
2.1 General notes on self-diagnosis	3
2.2 General notes on ignition system	3
3 Safety precautions	4
3.1 Safety precautions when working on the fuel supply system	4
3.2 Safety precautions when working on the cooling system	4
3.3 Safety precautions when working on vehicles with start/stop system	5
3.4 Safety precautions when using testers and measuring instruments during a road test	5
3.5 Safety precautions when working on the exhaust system	5
3.6 Safety precautions when working on the subframe	5
3.7 Safety precautions when working on the ignition system	6
4 Repair instructions	7
4.1 Rules for cleanliness	7
4.2 General notes	7
4.3 General repair instructions	8
4.4 Foreign particles in engine	8
4.5 Contact corrosion	8
4.6 Routing and attachment of pipes, hoses and wiring	9
4.7 Installing radiators and condensers	9
4.8 Nuts, bolts	9
4.9 Identification plates	9
4.10 Use of impact wrenches	9
4.11 Checking vacuum system	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Separating engine and gearbox	72
1.3 Securing engine to engine and gearbox support	88
1.4 Installing engine	93
2 Assembly mountings	114
2.1 Exploded view - assembly mountings	114
2.2 Removing and installing engine mounting (left-side)	115
2.3 Removing and installing engine mounting (right-side)	119
13 - Crankshaft group	123
1 Cylinder block (pulley end)	123
1.1 Exploded view - poly V-belt drive	123
1.2 Removing and installing poly V-belts	129
1.3 Removing and installing poly V-belt tensioner	139
1.4 Removing and installing vibration damper	145
1.5 Removing and installing sealing flange (pulley end)	150
2 Cylinder block (gearbox end)	155
2.1 Exploded view - drive plate	155
2.2 Removing and installing drive plate	156
2.3 Removing and installing sender wheel	157
2.4 Checking sender wheel	157
2.5 Renewing crankshaft oil seal (gearbox end)	158

2.6	Renewing needle bearing in drive plate	161
3	Crankshaft	164
3.1	Exploded view - crankshaft	164
3.2	Crankshaft dimensions	169
3.3	Measuring axial clearance of crankshaft	169
3.4	Measuring radial clearance of crankshaft	170
4	Balance shaft	172
4.1	Exploded view - balance shaft	172
4.2	Removing and installing balance shaft	172
5	Pistons and conrods	175
5.1	Exploded view - pistons and conrods	175
5.2	Removing and installing pistons	178
5.3	Checking pistons and cylinder bores	179
5.4	Checking radial clearance of conrod bearings	181
15 - Cylinder head, valve gear	182	
1	Cylinder head	182
1.1	Exploded view - cylinder head	182
1.2	Removing and installing cylinder head	186
1.3	Removing and installing cylinder head cover (left-side)	195
1.4	Removing and installing cylinder head cover (right-side)	196
1.5	Checking compression	198
2	Timing chain cover	201
2.1	Exploded view - timing chain cover	201
2.2	Removing and installing timing chain covers (left and right)	205
2.3	Removing and installing timing chain cover (bottom)	210
3	Chain drive	220
3.1	Exploded view - camshaft timing chains	220
3.2	Exploded view - drive chain for valve gear	224
3.3	Exploded view - drive chain for balance shaft and oil pump	226
3.4	Removing and installing camshaft timing chain	227
3.5	Removing camshaft timing chain from camshafts	230
3.6	Removing and installing drive chain for valve gear	247
3.7	Removing and installing drive chain for auxiliary drive	249
4	Valve gear	254
4.1	Exploded view - valve gear	254
4.2	Measuring axial clearance of camshaft	257
4.3	Measuring radial clearance of camshaft	258
4.4	Removing and installing camshaft	259
4.5	Checking hydraulic compensation elements	267
4.6	Removing and installing valve stem oil seals	269
5	Inlet and exhaust valves	280
5.1	Checking valve guides	280
5.2	Checking valves	281
5.3	Valve dimensions	281
17 - Lubrication	283	
1	Sump/oil pump	283
1.1	Exploded view - sump/oil pump	283
1.2	Engine oil	287
1.3	Removing and installing sump (bottom section)	287
1.4	Removing and installing sump (top section)	292
1.5	Removing and installing oil pump	296
1.6	Removing and installing oil level and oil temperature sender G266	297
1.7	Checking oil level	297



2	Engine oil cooler	298
2.1	Removing and installing engine oil cooler	298
3	Crankcase breather	301
3.1	Exploded view - crankcase breather system	301
3.2	Removing and installing crankcase breather hoses	303
3.3	Removing and installing oil separator	305
3.4	Removing and installing pressure control valve	306
3.5	Removing and installing oil drain valve	309
3.6	Removing and installing crankcase breather shut-off valve N548	310
4	Oil filter/oil pressure switches	312
4.1	Exploded view - oil filter/oil pressure switch	312
4.2	Removing and installing oil pressure switch F22	315
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	316
4.4	Checking oil pressure	318
4.5	Checking oil pressure and oil pressure switch	319
4.6	Removing and installing oil filter housing	319
4.7	Removing and installing valve for oil pressure control N428	322
19 - Cooling	325	
1	Cooling system/coolant	325
1.1	Connection diagram - coolant hoses	325
1.2	Draining and filling cooling system	333
1.3	Checking cooling system for leaks	345
2	Coolant pump/thermostat assembly	349
2.1	Exploded view - coolant pump/thermostat	349
2.2	Exploded view - electric coolant pump	351
2.3	Removing and installing electric coolant pump	351
2.4	Removing and installing coolant pump	355
2.5	Removing and installing thermostat	358
2.6	Removing and installing coolant temperature sender G62	359
2.7	Removing and installing temperature sender for engine temperature regulation G694	361
3	Coolant pipes	362
3.1	Exploded view - coolant pipes	362
3.2	Fitting coolant hoses	367
3.3	Removing and installing coolant pipes (left-side)	367
3.4	Removing and installing coolant pipes (front left)	369
3.5	Removing and installing coolant pipes (front)	373
3.6	Removing and installing coolant pipes (top)	378
3.7	Removing and installing coolant pipes on supercharger	380
4	Radiators/radiator fans	384
4.1	Exploded view - radiators/radiator fans	384
4.2	Removing and installing radiator	389
4.3	Removing and installing radiator cowl	397
4.4	Removing and installing water radiator for charge air cooling circuit (front)	405
4.5	Removing and installing water radiator for charge air cooling circuit (left-side)	410
4.6	Removing and installing radiator fans	413
21 - Turbocharging/supercharging	415	
1	Charge air system	415
1.1	Exploded view - charge air system	415
1.2	Removing and installing charge air cooler	416
1.3	Removing and installing charge pressure sender	422
2	Supercharger	424
2.1	Exploded view - supercharger	424
2.2	Exploded view - drive unit	427

2.3	Removing and installing supercharger	428
2.4	Checking supercharger for leaks	434
2.5	Removing and installing drive unit and damper spring	437
2.6	Securing supercharger to engine and gearbox support for leak test	439
2.7	Securing supercharger to engine and gearbox support	441
24	- Mixture preparation - injection	443
1	Injection system	443
1.1	Overview of fitting locations - injection system	443
1.2	Checking fuel system for leaks	458
2	Vacuum system	459
2.1	Connection diagram - vacuum system	459
2.2	Checking vacuum system	461
2.3	Removing and installing vacuum unit for actuating intake manifold flaps	461
3	Air cleaner	469
3.1	Exploded view - air cleaner housing	469
3.2	Removing and installing air filter element	471
4	Intake manifold	474
4.1	Exploded view - intake manifold (bottom section) with fuel rail	474
4.2	Removing and installing intake manifold (bottom section) with fuel rail	477
4.3	Removing and installing throttle valve module J338	481
4.4	Removing and installing regulating flap control unit J808	483
4.5	Cleaning throttle valve module	484
5	Injectors	486
5.1	Removing and installing injectors	486
5.2	Cleaning injectors	492
6	Senders and sensors	495
6.1	Removing and installing control unit for structure-borne sound J869 and actuator for structure-borne sound R214	495
7	Engine control unit	497
7.1	Wiring and component check with test box V.A.G 1598/42	497
7.2	Removing and installing engine/motor control unit J623	499
8	High-pressure pump	504
8.1	Exploded view - high-pressure pump	504
8.2	Removing and installing high-pressure pump	506
8.3	Removing and installing high-pressure pipe	509
8.4	Checking fuel pressure and residual pressure (up to high-pressure pump)	512
8.5	Checking fuel system for leaks	517
9	Lambda probe	519
9.1	Exploded view - Lambda probe	519
9.2	Removing and installing Lambda probe	521
26	- Exhaust system	530
1	Exhaust pipes/silencers	530
1.1	Exploded view - silencers	530
1.2	Removing and installing front silencer	535
1.3	Separating exhaust pipes/silencers	537
1.4	Renewing tailpipes	538
1.5	Stress-free alignment of exhaust system	539
1.6	Aligning tailpipes	541
1.7	Checking exhaust system for leaks	542
2	Emission control system	543
2.1	Removing and installing catalytic converter (left-side)	543
2.2	Removing and installing catalytic converter (right-side)	544

3	Secondary air system	546
3.1	Exploded view - secondary air system	546
3.2	Removing and installing secondary air pump motor V101	549
3.3	Checking combination valve for correct operation and leaks	551
3.4	Removing and installing combination valve (left-side)	554
3.5	Removing and installing combination valve (right-side)	556
3.6	Removing and installing sender 1 for secondary air pressure G609	558
4	Exhaust manifolds	560
4.1	Exploded view - exhaust manifolds	560
4.2	Removing and installing exhaust manifold (left-side)	562
4.3	Removing and installing exhaust manifold (right-side)	565
28	- Ignition system	569
1	Ignition system	569
1.1	Exploded view - ignition system	569
1.2	Test data - spark plugs	571
1.3	Removing and installing ignition coils	571
1.4	Removing and installing knock sensor	574
1.5	Removing and installing Hall senders	575
1.6	Removing and installing engine speed sender G28	577