



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	2
<b>2 Safety precautions</b>	<b>3</b>
2.1 Safety precautions when working on the fuel system	3
2.2 Safety precautions when using testers and measuring instruments during a road test	4
2.3 Safety precautions when working on the subframe	5
2.4 Safety precautions when working on the cooling system	5
2.5 Safety precautions when working on the ignition system	5
<b>3 Repair instructions</b>	<b>7</b>
3.1 Rules for cleanliness	7
3.2 Foreign particles in engine	7
3.3 Contact corrosion	7
3.4 Routing and attachment of pipes, hoses and wiring	8
3.5 Installing radiators and condensers	8
3.6 Checking vacuum system	8
3.7 General notes on self-diagnosis	9
3.8 General notes on ignition system	9
<b>4 Technical data</b>	<b>10</b>
4.1 Technical data of injection system	10
<b>10 - Removing and installing engine</b>	<b>11</b>
<b>1 Removing and installing engine</b>	<b>11</b>
1.1 Removing engine	11
1.2 Separating engine and gearbox	68
1.3 Securing engine to engine and gearbox support	82
1.4 Installing engine	86
<b>2 Assembly mountings</b>	<b>109</b>
2.1 Exploded view - assembly mountings	109
2.2 Removing and installing engine mounting (left-side)	109
2.3 Removing and installing engine mounting (right-side)	112
<b>13 - Crankshaft group</b>	<b>116</b>
<b>1 Cylinder block (pulley end)</b>	<b>116</b>
1.1 Exploded view - poly V-belt drive	116
1.2 Removing and installing poly V-belt	118
1.3 Removing and installing poly V-belt tensioner	119
1.4 Removing and installing vibration damper	120
1.5 Removing and installing sealing flange (pulley end)	120
<b>2 Cylinder block (gearbox end)</b>	<b>124</b>
2.1 Exploded view - drive plate	124
2.2 Removing and installing drive plate	124
2.3 Renewing needle bearing in drive plate	125
2.4 Renewing crankshaft oil seal (gearbox end)	127
<b>3 Crankshaft</b>	<b>129</b>
3.1 Exploded view - crankshaft	129
3.2 Crankshaft dimensions	132
3.3 Measuring axial clearance of crankshaft	132
3.4 Measuring radial clearance of crankshaft	133
<b>4 Balance shaft</b>	<b>135</b>
4.1 Exploded view - balance shaft	135
4.2 Removing and installing balance shaft	135



<b>5</b>	<b>Pistons and conrods</b> .....	<b>138</b>
5.1	Exploded view - pistons and conrods .....	138
5.2	Piston and cylinder dimensions .....	141
5.3	Checking radial clearance of conrod bearings .....	141
<b>15</b>	<b>- Cylinder head, valve gear</b> .....	<b>142</b>
<b>1</b>	<b>Cylinder head</b> .....	<b>142</b>
1.1	Exploded view - cylinder head .....	142
1.2	Removing and installing cylinder head .....	145
1.3	Removing and installing cylinder head cover (left-side) .....	165
1.4	Removing and installing cylinder head cover (right-side) .....	168
1.5	Checking compression .....	171
<b>2</b>	<b>Timing chain cover</b> .....	<b>176</b>
2.1	Exploded view - timing chain cover .....	176
2.2	Removing and installing timing chain covers (left and right) .....	178
2.3	Removing and installing timing chain cover (bottom) .....	182
<b>3</b>	<b>Chain drive</b> .....	<b>188</b>
3.1	Exploded view - camshaft timing chains .....	188
3.2	Exploded view - drive chain for valve gear .....	190
3.3	Exploded view - drive chain for balance shaft and oil pump .....	192
3.4	Removing and installing camshaft timing chain .....	192
3.5	Removing camshaft timing chain from camshafts .....	194
3.6	Removing and installing drive chain for valve gear .....	204
3.7	Removing and installing drive chain for auxiliary drive .....	205
<b>4</b>	<b>Valve gear</b> .....	<b>209</b>
4.1	Exploded view - valve gear .....	209
4.2	Measuring axial clearance of camshaft .....	212
4.3	Measuring radial clearance of camshaft .....	212
4.4	Removing and installing camshaft .....	213
4.5	Checking hydraulic compensation elements .....	218
4.6	Removing and installing valve stem oil seals .....	220
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>228</b>
5.1	Checking valve guides .....	228
5.2	Checking valves .....	229
5.3	Valve dimensions .....	230
<b>17</b>	<b>- Lubrication</b> .....	<b>231</b>
<b>1</b>	<b>Sump/oil pump</b> .....	<b>231</b>
1.1	Exploded view - sump/oil pump .....	231
1.2	Engine oil .....	234
1.3	Checking engine oil level .....	234
1.4	Removing and installing sump (bottom section) .....	234
1.5	Removing and installing sump (top section) .....	237
1.6	Removing and installing oil pump .....	240
1.7	Removing and installing oil level and oil temperature sender G266 .....	240
<b>2</b>	<b>Engine oil cooler</b> .....	<b>241</b>
2.1	Exploded view - engine oil cooler .....	241
2.2	Removing and installing engine oil cooler .....	243
<b>3</b>	<b>Crankcase breather</b> .....	<b>245</b>
3.1	Exploded view - crankcase breather system .....	245
3.2	Removing and installing crankcase breather hoses .....	246
3.3	Removing and installing oil separator .....	247
3.4	Removing and installing pressure control valve .....	248
3.5	Removing and installing oil drain valve .....	249
3.6	Removing and installing crankcase breather shut-off valve N548 .....	250



<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>252</b>
4.1	Exploded view - oil filter/oil pressure switch	252
4.2	Removing and installing oil pressure switch F22	253
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	254
4.4	Checking oil pressure and oil pressure switch	256
4.5	Checking oil pressure	256
4.6	Removing and installing oil filter housing	256
4.7	Removing and installing valve for oil pressure control N428	258
<b>19</b>	<b>Cooling</b>	<b>261</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>261</b>
1.1	Connection diagram - coolant hoses	261
1.2	Checking cooling system for leaks	264
1.3	Draining and filling cooling system	265
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>272</b>
2.1	Exploded view - coolant pump/thermostat	272
2.2	Exploded view - electric coolant pump	273
2.3	Removing and installing electric coolant pump	273
2.4	Removing and installing coolant pump	275
2.5	Removing and installing thermostat	276
2.6	Checking thermostat	276
2.7	Removing and installing coolant temperature sender G62	277
<b>3</b>	<b>Coolant pipes</b>	<b>278</b>
3.1	Exploded view - coolant pipes	278
3.2	Removing and installing coolant pipes (front)	279
3.3	Removing and installing coolant pipes (left-side)	282
3.4	Removing and installing coolant pipes (top)	284
<b>4</b>	<b>Radiator/radiator fans</b>	<b>287</b>
4.1	Exploded view - radiator/radiator fans	287
4.2	Removing and installing radiator	289
4.3	Removing and installing radiator cowl	300
4.4	Removing and installing radiator fan control unit J293	304
4.5	Removing and installing radiator fans	305
<b>24</b>	<b>Mixture preparation - injection</b>	<b>307</b>
<b>1</b>	<b>Injection system</b>	<b>307</b>
1.1	Overview of fitting locations - injection system	307
1.2	Reducing pressure in high-pressure section of injection system	317
1.3	Procedure before opening high-pressure section of injection system	318
1.4	Checking fuel system for leaks	322
<b>2</b>	<b>Injectors</b>	<b>324</b>
2.1	Removing and installing injectors	324
<b>3</b>	<b>Air cleaner</b>	<b>328</b>
3.1	Exploded view - air cleaner housing	328
3.2	Removing and installing air filter element	329
3.3	Removing air cleaner (bottom section)	331
<b>4</b>	<b>Intake manifold</b>	<b>334</b>
4.1	Exploded view - intake manifold (bottom section) with fuel rail	334
4.2	Exploded view - intake manifold (top section)	336
4.3	Removing and installing intake manifold (bottom section) with fuel rail	337
4.4	Removing and installing intake manifold (top section)	339
<b>5</b>	<b>Senders and sensors</b>	<b>342</b>
5.1	Removing and installing fuel pressure sender G247	342
<b>6</b>	<b>Engine control unit</b>	<b>343</b>



6.1	Wiring and component check with test box V.A.G 1598/42	343
6.2	Removing and installing engine control unit J623	345
<b>7</b>	<b>High-pressure pump</b>	<b>349</b>
7.1	Exploded view - high-pressure pump	349
7.2	Removing and installing high-pressure pump	351
7.3	Removing and installing high-pressure pipe	354
7.4	Checking fuel system pressurisation pump G6	355
<b>8</b>	<b>Lambda probe</b>	<b>360</b>
8.1	Exploded view - Lambda probe	360
8.2	Removing and installing Lambda probe	361
<b>26</b>	<b>- Exhaust system</b>	<b>369</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>369</b>
1.1	Exploded view - silencers	369
1.2	Separating exhaust pipes/silencers	373
1.3	Removing and installing front silencers	374
1.4	Renewing tailpipes	375
1.5	Stress-free alignment of exhaust system	376
1.6	Aligning tailpipes	377
1.7	Checking exhaust system for leaks	377
<b>2</b>	<b>Emission control system</b>	<b>378</b>
2.1	Removing and installing catalytic converter (left-side)	378
2.2	Removing and installing catalytic converter (right-side)	381
<b>3</b>	<b>Secondary air system</b>	<b>384</b>
3.1	Exploded view - secondary air system	384
3.2	Removing and installing secondary air pump motor V101	387
3.3	Removing and installing combination valve	391
3.4	Checking combination valves	397
3.5	Removing and installing sender 1 for secondary air pressure G609	400
<b>4</b>	<b>Exhaust manifolds</b>	<b>402</b>
4.1	Exploded view - exhaust manifolds	402
4.2	Removing and installing exhaust manifold (left-side)	403
4.3	Removing and installing exhaust manifold (right-side)	405
<b>28</b>	<b>- Ignition system</b>	<b>407</b>
<b>1</b>	<b>Ignition system</b>	<b>407</b>
1.1	Exploded view - ignition system	407
1.2	Test data - spark plugs	408
1.3	Removing and installing ignition coils	408
1.4	Removing and installing knock sensor	410
1.5	Removing and installing Hall senders	411
1.6	Removing and installing engine speed sender G28	412