

## Contents

<b>00 - Technical data</b>	<b>1</b>
1 <b>Identification</b>	1
1.1    Engine number/engine data	2
2 <b>General notes</b>	3
2.1    Rules for cleanliness when working on the auxiliary/supplementary heater and the fuel system	3
2.2    General notes on self-diagnosis	3
2.3    General notes on ignition system	3
3 <b>Safety precautions</b>	5
3.1    Safety precautions when working on the fuel supply system	5
3.2    Safety precautions when working on the cooling system	6
3.3    Safety precautions when using testers and measuring instruments during a road test	6
3.4    Safety precautions when working on the exhaust system	6
3.5    Safety precautions when working on the subframe	7
3.6    Safety precautions when working on the ignition system	7
4 <b>Repair instructions</b>	9
4.1    General notes	9
4.2    Bolts/nuts	9
4.3    Identification plates	10
4.4    Use of impact wrenches	10
4.5    Foreign particles in engine	10
4.6    Contact corrosion	10
4.7    Routing and attachment of pipes, hoses and wiring	11
4.8    Installing radiators and condensers	11
4.9    Checking vacuum system	11
5 <b>Technical data</b>	13
5.1    Technical data of injection system	13
<b>10 - Removing and installing engine</b>	<b>14</b>
1 <b>Removing and installing engine</b>	14
1.1    Removing engine	14
1.2    Separating engine and gearbox	34
1.3    Securing engine to engine and gearbox support	41
1.4    Installing engine	45
2 <b>Assembly mountings</b>	53
2.1    Exploded view - assembly mountings	53
2.2    Removing and installing engine mountings	54
3 <b>Engine cover panel</b>	64
3.1    Removing and installing engine cover panel	64
<b>13 - Crankshaft group</b>	<b>65</b>
1 <b>Cylinder block (pulley end)</b>	65
1.1    Exploded view - poly V-belt drive	65
1.2    Removing and installing poly V-belt	67
1.3    Removing and installing poly V-belt tensioner	68
1.4    Removing and installing vibration damper	68
1.5    Removing and installing bracket for ancillaries	69
1.6    Renewing crankshaft oil seal (pulley end)	69
2 <b>Cylinder block (gearbox end)</b>	72
2.1    Exploded view - drive plate	72
2.2    Removing and installing drive plate	72
2.3    Renewing crankshaft oil seal (gearbox end)	73

<b>3</b>	<b>Crankshaft</b>	<b>76</b>
3.1	Exploded view - crankshaft	76
3.2	Allocation of main bearing shells	79
3.3	Crankshaft dimensions	81
3.4	Measuring axial clearance of crankshaft	81
3.5	Measuring radial clearance of crankshaft	82
<b>4</b>	<b>Auxiliary drive</b>	<b>83</b>
4.1	Exploded view - auxiliary drive	83
4.2	Removing and installing spur gear drive	84
4.3	Renewing oil seal for power steering pump drive	87
4.4	Renewing oil seal for AC compressor drive	88
<b>5</b>	<b>Pistons and conrods</b>	<b>91</b>
5.1	Exploded view - pistons and conrods	91
5.2	Removing and installing pistons	93
5.3	Checking pistons and cylinder bores	94
5.4	Checking radial clearance of conrod bearings	95
<b>15 - Cylinder head, valve gear</b>		<b>97</b>
<b>1</b>	<b>Cylinder head</b>	<b>97</b>
1.1	Exploded view - cylinder head	97
1.2	Removing and installing cylinder head	99
1.3	Removing and installing cylinder head cover	105
1.4	Checking compression	107
<b>2</b>	<b>Timing chain cover</b>	<b>110</b>
2.1	Exploded view - timing chain cover	110
2.2	Removing and installing timing chain cover (left-side)	112
2.3	Removing and installing timing chain cover (right-side)	115
2.4	Removing and installing timing chain cover (bottom)	117
<b>3</b>	<b>Chain drive</b>	<b>122</b>
3.1	Exploded view - camshaft timing chains	122
3.2	Exploded view - drive chain for valve gear	125
3.3	Exploded view - drive chain for auxiliary drives	127
3.4	Removing and installing camshaft timing chain	127
3.5	Removing camshaft timing chain from camshafts	129
3.6	Removing and installing drive chain for valve gear	137
3.7	Removing and installing drive chain for auxiliary drive	138
<b>4</b>	<b>Valve gear</b>	<b>140</b>
4.1	Exploded view - valve gear	140
4.2	Measuring axial clearance of camshaft	143
4.3	Measuring radial clearance of camshaft	143
4.4	Removing and installing camshaft	144
4.5	Checking hydraulic compensation elements	153
4.6	Removing and installing valve stem oil seals	155
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>163</b>
5.1	Valve dimensions	163
5.2	Checking valve guides	163
5.3	Checking valves	164
<b>17 - Lubrication</b>		<b>165</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>165</b>
1.1	Exploded view - sump/oil pump	165
1.2	Exploded view - sump (top section)	168
1.3	Engine oil	169
1.4	Removing and installing sump (bottom section)	169
1.5	Removing and installing sump (top section)	171

1.6	Removing and installing oil pump .....	175
1.7	Removing and installing oil level and oil temperature sender G266 .....	176
1.8	Checking oil level .....	177
<b>2</b>	<b>Engine oil cooler .....</b>	<b>178</b>
2.1	Exploded view - engine oil cooler .....	178
2.2	Removing and installing engine oil cooler .....	179
2.3	Removing and installing engine oil cooler (front) .....	181
<b>3</b>	<b>Crankcase breather .....</b>	<b>183</b>
3.1	Removing and installing hose for crankcase breather system .....	183
<b>4</b>	<b>Oil filter/oil pressure switches .....</b>	<b>184</b>
4.1	Exploded view - oil filter housing/oil pressure switches .....	184
4.2	Removing and installing oil temperature sender G8 .....	185
4.3	Checking oil pressure switch F22 / oil pressure switch for reduced oil pressure F378 .....	186
4.4	Removing and installing oil pressure switch F22 .....	186
4.5	Removing and installing oil pressure switch for reduced oil pressure F378 .....	187
4.6	Removing and installing valve for oil pressure control N428 .....	188
4.7	Checking oil pressure .....	188
4.8	Removing and installing oil filter housing .....	189
<b>5</b>	<b>Oil circuit .....</b>	<b>191</b>
5.1	Exploded view - oil spray jets/valves .....	191
5.2	Removing and installing oil spray jets/valves .....	192
<b>19 - Cooling .....</b>		<b>194</b>
<b>1</b>	<b>Cooling system/coolant .....</b>	<b>194</b>
1.1	Connection diagram - coolant hoses .....	194
1.2	Draining and filling cooling system .....	196
1.3	Checking cooling system for leaks .....	202
<b>2</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>205</b>
2.1	Exploded view - coolant pump/thermostat .....	205
2.2	Removing and installing electric coolant pump .....	206
2.3	Thermostat opening values .....	208
2.4	Removing and installing coolant pump .....	208
2.5	Removing and installing coolant temperature sender G62 .....	210
2.6	Removing and installing map-controlled engine cooling system thermostat F265 .....	211
<b>3</b>	<b>Coolant pipes .....</b>	<b>213</b>
3.1	Exploded view - coolant pipes .....	213
3.2	Removing and installing coolant pipes (front) .....	214
3.3	Removing and installing coolant pipes (top front) .....	214
3.4	Removing and installing coolant pipes (front centre) .....	216
<b>4</b>	<b>Radiator/radiator fans .....</b>	<b>218</b>
4.1	Exploded view - radiator/radiator fans .....	218
4.2	Exploded view - radiator cowl and radiator fan .....	220
4.3	Removing and installing radiator .....	220
4.4	Removing and installing radiator fans .....	226
4.5	Removing and installing auxiliary radiator .....	227
<b>24 - Mixture preparation - injection .....</b>		<b>229</b>
<b>1</b>	<b>Injection system .....</b>	<b>229</b>
1.1	Overview of fitting locations - injection system .....	229
1.2	Checking fuel system for leaks .....	235
1.3	Reducing pressure in high-pressure section of injection system .....	235
<b>2</b>	<b>Vacuum system .....</b>	<b>237</b>
2.1	Exploded view - vacuum system .....	237
2.2	Checking vacuum system .....	237

<b>3</b>	<b>Injectors</b>	<b>239</b>
3.1	Removing and installing injectors	239
3.2	Cleaning injectors	243
<b>4</b>	<b>Air cleaner</b>	<b>245</b>
4.1	Exploded view - air cleaner housing	245
4.2	Removing and installing air cleaner housing	246
4.3	Removing and installing air filter element	248
<b>5</b>	<b>Intake manifold</b>	<b>249</b>
5.1	Exploded view - intake manifold (top section)	249
5.2	Exploded view - intake manifold (bottom section) with fuel rail	251
5.3	Removing and installing intake manifold (top section)	253
5.4	Removing and installing intake manifold (bottom section) with fuel rail	255
5.5	Removing and installing throttle valve module J338 / J544	259
<b>6</b>	<b>Senders and sensors</b>	<b>260</b>
6.1	Removing and installing fuel pressure sender G247 / G624	260
6.2	Checking fuel pressure and residual pressure (up to high-pressure pump)	260
<b>7</b>	<b>Engine control unit</b>	<b>266</b>
7.1	Removing and installing engine control unit J623	266
7.2	Wiring and component check with isolator boxes VAS 6606	269
<b>8</b>	<b>High-pressure pump</b>	<b>271</b>
8.1	Exploded view - high-pressure pump	271
8.2	Removing and installing high-pressure pump	272
8.3	Removing and installing high-pressure pipe	275
<b>9</b>	<b>Lambda probe</b>	<b>278</b>
9.1	Exploded view - Lambda probe	278
9.2	Removing and installing Lambda probe	278
<b>26</b>	<b>- Exhaust system</b>	<b>281</b>
1	<b>Exhaust pipes/silencers</b>	<b>281</b>
1.1	Exploded view - silencers	281
1.2	Separating exhaust pipes/silencers	283
1.3	Removing and installing front silencers	284
1.4	Stress-free alignment of exhaust system	286
1.5	Aligning tailpipes	287
1.6	Checking exhaust system for leaks	287
1.7	Checking function of exhaust flap	288
<b>2</b>	<b>Exhaust manifold</b>	<b>289</b>
2.1	Exploded view - exhaust manifold	289
2.2	Removing and installing exhaust manifold	290
<b>3</b>	<b>Secondary air system</b>	<b>294</b>
3.1	Exploded view - secondary air system	294
3.2	Removing and installing secondary air pump V101 / V189	296
3.3	Removing and installing combination valve	297
3.4	Checking combination valve for correct operation and leaks	298
3.5	Removing and installing senders for secondary air pressure G609 / G610	300
<b>28</b>	<b>- Ignition system</b>	<b>301</b>
1	<b>Ignition system</b>	<b>301</b>
1.1	Exploded view - ignition system	301
1.2	Test data - spark plugs	302
1.3	Removing and installing ignition coils	302
1.4	Removing and installing knock sensor	304
1.5	Removing and installing Hall senders	305
1.6	Removing and installing engine speed sender G28	306