

Contents

24 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General notes on self-diagnosis	1
1.2 Safety precautions	2
1.3 Rules for cleanliness and instructions for working on fuel system	3
1.4 Reducing pressure in high-pressure section of injection system	3
1.5 Checking for leaks in the fuel system	5
1.6 Checking vacuum system	6
2 Injection system	7
2.1 Test data	7
2.2 Overview of fitting locations	7
2.3 Air cleaner - exploded view	17
2.4 Removing and installing air filter element	19
2.5 Intake manifold (bottom section) - exploded view	20
2.6 Removing and installing intake manifold (bottom section) with fuel rail	23
2.7 Removing and installing throttle valve module J338	25
2.8 Removing and installing regulating flap control unit J808	27
2.9 Removing and installing injectors	27
2.10 Checking fuel pressure and residual pressure (up to high-pressure pump)	31
2.11 High-pressure pump - exploded view	35
2.12 Removing and installing high-pressure pipe	37
2.13 Removing and installing high-pressure pump	39
2.14 Lambda probes - overview	41
2.15 Removing and installing Lambda probe G39	42
2.16 Removing and installing Lambda probe after catalytic converter G130	44
2.17 Removing and installing Lambda probe 2 G108	46
2.18 Removing and installing Lambda probe 2 after catalytic converter G131	48
3 Engine control unit	51
3.1 Wiring and component check with test box V.A.G 1598/42	51
3.2 Removing and installing engine control unit	53
28 - Ignition system	57
1 General notes and safety precautions	57
1.1 General notes on ignition system	57
1.2 Safety precautions	57
2 Servicing ignition system	59
2.1 Test data	59
2.2 Ignition system - exploded view	59
2.3 Removing and installing ignition coils	60
2.4 Removing and installing knock sensors G61 / G66	62
2.5 Removing and installing Hall senders G40 / G163	63
2.6 Removing and installing engine speed sender G28	64