

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the ignition system	4
2.7 Safety precautions when working on the subframe	4
3 Repair instructions	5
3.1 Rules for cleanliness	5
3.2 Foreign material in engine	5
3.3 Contact corrosion	5
3.4 Routing and attachment of pipes, hoses and wiring	6
3.5 Installing radiators and condensers	6
3.6 Nuts, bolts	6
3.7 Identification plates	6
3.8 Use of impact wrenches	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Securing engine to engine and gearbox support	8
1.3 Installing engine	9
2 Assembly mountings	10
3 Engine cover panel	11
3.1 Removing and installing engine cover panel	11
13 - Crankshaft group	13
1 Cylinder block (pulley end)	13
1.1 Assembly overview - cylinder block (pulley end)	13
1.2 Removing and installing poly V-belt	20
1.3 Removing and installing poly V-belt tensioner	23
1.4 Removing and installing vibration damper	24
1.5 Removing and installing bracket for ancillaries	32
2 Cylinder block (gearbox end)	34
2.1 Assembly overview - cylinder block (gearbox end)	34
2.2 Removing and installing drive plate	36
2.3 Removing and installing sealing flange (gearbox end)	37
2.4 Renewing needle bearing in drive plate	45
3 Crankshaft	48
3.1 Assembly overview - crankshaft	48
3.2 Crankshaft dimensions	51
3.3 Allocation of main bearing shells	51
3.4 Measuring axial clearance of crankshaft	53
3.5 Measuring radial clearance of crankshaft	54
3.6 Removing and installing sender wheel	54
4 Balance shaft	56
4.1 Assembly overview - balance shaft	56
4.2 Removing and installing balance shaft	57



4.3	Renewing oil seal for balance shaft (inlet side)	64
5	Pistons and conrods	67
5.1	Assembly overview - pistons and conrods	67
5.2	Removing and installing pistons	71
5.3	Removing and installing oil spray jets	73
5.4	Checking pistons and cylinder bores	74
5.5	Separating parts of new conrod	77
5.6	Checking radial clearance of conrod bearings	78
15	- Cylinder head, valve gear	79
1	Timing chain cover	79
1.1	Assembly overview - timing chain cover	79
1.2	Removing and installing timing chain cover	82
1.3	Renewing oil seal for vibration damper	87
2	Chain drive	90
2.1	Assembly overview - camshaft timing chains	90
2.2	Assembly overview - drive chain for balance shaft	92
2.3	Removing and installing bearing saddle	95
2.4	Removing camshaft timing chain from camshafts	101
2.5	Removing and installing camshaft timing chain	113
2.6	Removing and installing drive chain for balance shaft	127
2.7	Checking timing chain	130
2.8	Checking valve timing	133
3	Cylinder head	138
3.1	Assembly overview - cylinder head	138
3.2	Removing and installing cylinder head	142
3.3	Removing and installing non-return valve	152
3.4	Checking compression	152
4	Valve gear	155
4.1	Assembly overview - valve gear	155
4.2	Removing and installing camshaft	160
4.3	Installing ball for slider	179
4.4	Removing and installing cam adjustment actuators	180
4.5	Removing and installing camshaft control valve 1 N205	181
4.6	Removing and installing valve stem oil seals	182
5	Inlet and exhaust valves	194
5.1	Checking valve guides	194
5.2	Checking valves	195
5.3	Valve dimensions	195
17	- Lubrication	196
1	Sump/oil pump	196
1.1	Assembly overview - sump/oil pump	196
1.2	Engine oil	199
1.3	Removing and installing lower part of sump	199
1.4	Removing and installing oil pump	202
1.5	Removing and installing upper part of sump	204
1.6	Removing and installing oil level and oil temperature sender G266	208
2	Engine oil cooler	210
2.1	Assembly overview - engine oil cooler	210
2.2	Removing and installing engine oil cooler	210
3	Crankcase breather	212
3.1	Assembly overview - crankcase breather system	212
3.2	Removing and installing oil separator	213

4	Oil filter/oil pressure switches	216
4.1	Assembly overview - oil filter	216
4.2	Assembly overview - oil pressure switches/oil pressure control	216
4.3	Removing and installing oil pressure switch F22	217
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	219
4.5	Removing and installing valve for oil pressure control N428	220
4.6	Checking oil pressure	221
19	Cooling	223
1	Cooling system/coolant	223
1.1	Connection diagram - coolant hoses	223
1.2	Checking cooling system for leaks	223
1.3	Draining and filling cooling system	228
2	Coolant pump/thermostat assembly	231
2.1	Assembly overview - coolant pump/thermostat	231
2.2	Assembly overview - electric coolant pump	234
2.3	Removing and installing electric coolant pump	234
2.4	Removing and installing coolant pump	234
2.5	Detaching and attaching coolant pump at thermostat housing	236
2.6	Removing and installing toothed belt for coolant pump	239
2.7	Removing and installing thermostat	240
2.8	Checking thermostat	241
2.9	Removing and installing coolant temperature sender G62	241
2.10	Removing and installing coolant valves	242
3	Coolant pipes	243
4	Radiator/radiator fans	244
21	Turbocharging/supercharging	245
1	Turbocharger	245
1.1	Assembly overview - turbocharger	245
1.2	Removing and installing turbocharger	250
1.3	Checking vacuum unit for turbocharger	253
1.4	Renewing vacuum unit for turbocharger	255
1.5	Adjusting vacuum unit for turbocharger	256
2	Charge air system	261
2.1	Assembly overview - charge air system	261
2.2	Assembly overview - hose connections for charge air system	261
2.3	Removing and installing charge air cooler	263
2.4	Removing and installing charge pressure sender G31	263
2.5	Checking charge air system for leaks	263
24	Mixture preparation - injection	267
1	Injection system	267
1.1	Overview of fitting locations - injection system	267
1.2	Checking fuel system for leaks	267
2	Vacuum system	268
2.1	Checking vacuum system	268
2.2	Checking dual non-return valve	268
3	Air filter	271
4	Intake manifold	272
4.1	Assembly overview - intake manifold	272
4.2	Removing and installing intake manifold	276
4.3	Removing and installing throttle valve module J338	277
4.4	Cleaning throttle valve module	277



4.5	Checking intake manifold change-over function	278
5	Injectors	281
5.1	Assembly overview - fuel rail with injectors	281
5.2	Removing and installing fuel rail	285
5.3	Removing and installing injectors	286
5.4	Cleaning injectors	292
5.5	Removing and installing cold-start valve N17	293
6	Senders and sensors	295
6.1	Removing and installing intake air temperature sender G42	295
6.2	Removing and installing air mass meter G70	295
6.3	Removing and installing fuel pressure sender G247	296
6.4	Checking fuel pressure sender G247	299
7	High-pressure pump	302
7.1	Assembly overview - high-pressure pump	302
7.2	Removing and installing high-pressure pump	304
8	Lambda probe	308
8.1	Assembly overview - Lambda probe	308
8.2	Removing and installing Lambda probe	310
9	Engine control unit	311
9.1	Removing and installing engine control unit J623	311
9.2	Wiring and component check	311
26	- Exhaust system	315
1	Exhaust pipes/silencers	315
1.1	Assembly overview - silencers	315
1.2	Separating exhaust pipes/silencers	315
1.3	Removing and installing front silencers	315
1.4	Removing and installing silencers	315
1.5	Stress-free alignment of exhaust system	315
1.6	Checking exhaust system for leaks	315
2	Emission control system	316
2.1	Assembly overview - emission control system	316
2.2	Removing and installing catalytic converter	318
3	Secondary air system	319
28	- Ignition system	320
1	Ignition system	320
1.1	Assembly overview - ignition system	320
1.2	Removing and installing ignition coils with output stages	321
1.3	Removing and installing knock sensor 1 G61	324
1.4	Removing and installing Hall senders	324
1.5	Removing and installing engine speed sender G28	325