



Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety precautions	3
2.1 Safety precautions when working on the fuel supply system	3
2.2 Working on the reducing agent metering system - vehicles with SCR catalytic converter	5
2.3 Adapting learnt value after draining reducing agent or renewing components	6
2.4 Safety precautions when working on vehicles with start/stop system	6
2.5 Safety precautions when using testers and measuring instruments during a road test	6
2.6 Safety precautions when working on the cooling system	7
2.7 Safety precautions when working on the subframe	7
2.8 Safety precautions when working on the exhaust system	7
3 Repair instructions	9
3.1 Rules for cleanliness	9
3.2 General notes	9
3.3 General repair instructions	10
3.4 Foreign particles in engine	11
3.5 Contact corrosion	11
3.6 Routing and attachment of pipes, hoses and wiring	11
3.7 Installing radiators and condensers	11
3.8 Checking vacuum system	11
10 - Removing and installing engine	13
1 Removing and installing engine	13
1.1 Removing engine	13
1.2 Separating engine and gearbox	96
1.3 Securing engine to engine and gearbox support	122
1.4 Installing engine	126
2 Assembly mountings	156
2.1 Exploded view - assembly mountings	156
2.2 Removing and installing engine mountings	157
3 Engine cover panel	162
3.1 Removing and installing engine cover panel	162
13 - Crankshaft group	163
1 Cylinder block (pulley end)	163
1.1 Exploded view - poly V-belt drive	163
1.2 Exploded view - sealing flange (pulley end)	167
1.3 Removing and installing poly V-belt	168
1.4 Removing and installing tensioner for poly V-belt	170
1.5 Removing and installing idler roller (left-side) for poly V-belt	170
1.6 Removing and installing vibration damper	171
1.7 Removing and installing bracket for ancillaries	171
1.8 Renewing crankshaft oil seal (pulley end)	171
1.9 Removing and installing sealing flange (pulley end)	173
2 Cylinder block (gearbox end)	176
2.1 Exploded view - drive plate	176
2.2 Removing and installing drive plate	177
2.3 Removing and installing sender wheel	178
2.4 Checking sender wheel	179
2.5 Renewing crankshaft oil seal (gearbox end)	180



2.6	Renewing needle bearing in drive plate	181
3	Crankshaft	184
3.1	Exploded view - crankshaft	184
3.2	Crankshaft dimensions	186
3.3	Measuring axial clearance of crankshaft	186
3.4	Measuring radial clearance of crankshaft	187
4	Balance shaft	188
4.1	Removing and installing balance shaft	188
5	Pistons and conrods	190
5.1	Exploded view - pistons and conrods	190
5.2	Measuring piston projection at TDC	193
5.3	Checking pistons and cylinder bores	195
5.4	Checking radial clearance of conrod bearings	195
15	Cylinder head, valve gear	197
1	Cylinder head	197
1.1	Exploded view - cylinder head	197
1.2	Exploded view - cylinder head cover	199
1.3	Removing and installing cylinder head	200
1.4	Removing and installing cylinder head cover	216
1.5	Checking compression	225
2	Timing chain cover	228
2.1	Exploded view - timing chain cover	228
2.2	Removing and installing timing chain cover	230
3	Chain drive	237
3.1	Exploded view - camshaft timing chains	237
3.2	Exploded view - drive chain for valve gear	242
3.3	Exploded view - drive chain for balance shaft and oil pump	245
3.4	Exploded view - drive chain for balance shaft	246
3.5	Removing and installing camshaft timing chain	247
3.6	Removing camshaft timing chain from camshafts	264
3.7	Removing and installing drive chain for valve gear	282
3.8	Removing and installing drive chain for auxiliary drive	285
4	Valve gear	290
4.1	Exploded view - valve gear	290
4.2	Measuring axial clearance of camshaft	292
4.3	Measuring radial clearance of camshaft	293
4.4	Removing and installing camshaft oil seal	294
4.5	Removing and installing camshaft	296
4.6	Removing and installing valve stem oil seals	311
5	Inlet and exhaust valves	318
5.1	Machining valve seats	318
5.2	Checking valve guides	318
5.3	Checking valves	319
5.4	Valve dimensions	320
17	Lubrication	321
1	Sump/oil pump	321
1.1	Exploded view - sump/oil pump	321
1.2	Engine oil	325
1.3	Checking oil level	326
1.4	Removing and installing sump (bottom section)	326
1.5	Removing and installing sump (top section)	328
1.6	Removing and installing oil pump	331
1.7	Removing and installing oil level and oil temperature sender G266	333



2	Engine oil cooler	334
2.1	Exploded view - engine oil cooler	334
2.2	Removing and installing engine oil cooler	336
2.3	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	338
3	Crankcase breather	340
3.1	Removing and installing pressure control valve for crankcase breather system	340
4	Oil filter/oil pressure switches	341
4.1	Removing and installing oil pressure switch F22	341
4.2	Removing and installing oil pressure switch F1	342
4.3	Removing and installing oil pressure switch F1 / oil pressure switch for reduced oil pressure F378	343
4.4	Checking oil pressure	344
4.5	Removing and installing oil filter housing	345
4.6	Removing and installing valve for oil pressure control N428	347
4.7	Checking oil pressure switch F1 / oil pressure switch F22 / oil pressure switch for reduced oil pressure F378	348
19 - Cooling		349
1	Cooling system/coolant	349
1.1	Connection diagram - coolant hoses	349
1.2	Checking cooling system for leaks	352
1.3	Draining and filling cooling system	353
2	Coolant pump/thermostat assembly	362
2.1	Exploded view - coolant pump/thermostat	362
2.2	Exploded view - electric coolant pump	365
2.3	Removing and installing electric coolant pump	365
2.4	Removing and installing coolant pump	367
2.5	Removing and installing thermostat	368
2.6	Removing and installing coolant temperature sender G62	371
2.7	Removing and installing radiator outlet coolant temperature sender G83	373
3	Coolant pipes	374
3.1	Exploded view - coolant pipes	374
3.2	Removing and installing coolant pipes	380
4	Radiator/radiator fans	403
4.1	Exploded view - radiator cowl and radiator fans	403
4.2	Removing and installing radiator	405
4.3	Removing and installing radiator cowl	411
4.4	Removing and installing radiator fan control unit	417
4.5	Removing and installing radiator fan	418
21 - Turbocharging/supercharging		420
1	Turbocharger	420
1.1	Exploded view - turbocharger	420
1.2	Removing and installing turbocharger	422
1.3	Removing and installing turbocharger 1 control unit J724	428
1.4	Removing and installing intermediate flange	440
2	Charge air system	441
2.1	Exploded view - charge air system	441
2.2	Removing and installing charge air cooler	442
2.3	Removing and installing charge pressure sender G31	445
23 - Mixture preparation - injection		446
1	Injection system	446
1.1	Overview - fuel system	446



1.2	Overview of fitting locations - injection system	449
1.3	Exploded view - fuel system	468
1.4	Filling and bleeding fuel system	474
1.5	Checking fuel system for leaks	475
2	Air cleaner	476
2.1	Exploded view - air cleaner housing	476
2.2	Removing and installing air filter element	478
2.3	Removing and installing air cleaner housing	479
3	Intake manifold	482
3.1	Exploded view - intake manifold	482
3.2	Removing and installing intake manifold (top section)	483
3.3	Removing and installing intake manifold (bottom section)	485
4	Injectors/high-pressure reservoir (rail)	491
4.1	Checking injectors	491
4.2	Performing adaption of correction values for injectors	491
4.3	Checking for injectors sticking open	492
4.4	Checking return flow rate of injectors with engine running	494
4.5	Checking return flow rate of injectors at starter cranking speed	497
4.6	Checking pressure retention valve in fuel return line	499
4.7	Checking restrictor in fuel return line	500
4.8	Removing and installing injectors	501
4.9	Removing and installing high-pressure pipes	507
5	High-pressure pump	510
5.1	Exploded view - high-pressure pump	510
5.2	Removing and installing high-pressure pump	519
6	Senders and sensors	538
6.1	Checking fuel pressure regulating valve N276	538
6.2	Removing and installing fuel pressure regulating valve N276	540
6.3	Removing and installing fuel pressure sender G247	542
6.4	Removing and installing air mass meter G70	545
6.5	Removing and installing pressure differential sender G505	545
6.6	Removing and installing exhaust gas pressure sensor 1 G450	546
6.7	Removing and installing control unit for NOx sender J583 with NOx sender G295 - engine codes CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CAPA	547
6.8	Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687 - engine code CCLA	548
7	Lambda probe	549
7.1	Exploded view - Lambda probe	549
7.2	Removing and installing Lambda probe	552
8	Engine control unit	555
8.1	Wiring and component check with test box V.A.G 1598/42	555
8.2	Removing and installing engine/motor control unit J623	557
26 - Exhaust system		561
1	Exhaust pipes/silencers	561
1.1	Exploded view - silencers	561
1.2	Removing and installing front exhaust pipe	567
1.3	Separating exhaust pipes/silencers	571
1.4	Stress-free alignment of exhaust system	574
1.5	Checking exhaust system for leaks	576
2	Emission control system	577
2.1	Removing and installing catalytic converter	577
2.2	Removing and installing particulate filter	578
3	SCR (selective catalytic reduction) system	584
3.1	Exploded view - reducing agent tank	584



3.2	Exploded view - delivery unit for reducing agent	588
3.3	Exploded view - pump for reducing agent V437	589
3.4	Exploded view - injector for reducing agent N474	591
3.5	Exploded view - control unit for reducing agent metering system	592
3.6	Removing and installing delivery unit for reducing agent	592
3.7	Removing and installing injector for reducing agent N474	595
3.8	Draining active tank for reducing agent	596
3.9	Removing and installing active tank for reducing agent	598
3.10	Draining passive tank for reducing agent	600
3.11	Removing and installing passive tank for reducing agent	602
3.12	Removing and installing pump for reducing agent V437	604
3.13	Removing and installing transfer pump for reducing agent V436	605
3.14	Checking control unit for reducing agent metering system J880	607
3.15	Removing and installing control unit for reducing agent metering system J880	607
3.16	Adapting learnt value after draining reducing agent or renewing components	608
4	Exhaust gas temperature control	609
4.1	Exploded view - exhaust gas temperature control	609
4.2	Removing and installing exhaust gas temperature senders	612
5	Exhaust gas recirculation	616
5.1	Exploded view - exhaust gas recirculation system	616
5.2	Removing and installing exhaust gas recirculation control motor V338	619
5.3	Removing and installing exhaust gas recirculation cooler	623
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	627
6	Exhaust manifolds	629
6.1	Exploded view - exhaust manifold	629
6.2	Removing and installing exhaust manifolds	630
28	Glow plug system	634
1	Glow plug system	634
1.1	Removing and installing glow plug	634
1.2	Removing and installing engine speed sender G28	637