

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when working on the injection and glow plug system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when working on the fuel system	3
1.5 Rules for cleanliness and instructions for working on fuel system	3
1.6 Checking vacuum system	4
2 Overview of fitting locations - injection system	6
3 Overview - fuel system	14
4 Filling and bleeding fuel system	16
5 Air cleaner	17
5.1 Exploded view - air cleaner	17
5.2 Removing and installing engine cover panel	18
5.3 Removing and installing air filter element	19
5.4 Removing and installing air cleaner (bottom section)	20
5.5 Removing and installing air mass meter G70	22
6 Intake manifold	23
6.1 Exploded view - intake manifold	23
6.2 Removing and installing throttle valve module J338	24
6.3 Removing and installing intake manifold	24
7 High-pressure pump	28
7.1 Exploded view - high-pressure pump	28
7.2 Removing and installing high-pressure pump	29
7.3 Performing first fuel filling after installing high-pressure pump	32
7.4 Checking fuel system for leaks	33
8 Injectors	34
8.1 Exploded view - injectors	34
8.2 Checking injectors	37
8.3 Performing adaption of correction values for injectors	37
8.4 Checking return flow rate of injectors with engine running	38
8.5 Checking return flow rate of injectors at starter cranking speed	40
8.6 Checking for injectors sticking open	42
8.7 Removing and installing injectors	43
8.8 Renewing injector seals	49
9 Senders and sensors	51
9.1 Removing and installing fuel rail	51
9.2 Installing high-pressure pipes	53
9.3 Checking fuel pressure (low pressure)	54
9.4 Checking fuel pressure regulating valve N276	56
9.5 Removing and installing fuel pressure regulating valve N276	58
9.6 Removing and installing fuel pressure sender G247	59
10 Lambda probe	63
10.1 Exploded view - Lambda probe and exhaust gas temperature senders	63
10.2 Removing and installing Lambda probe G39 with Lambda probe heater Z19	64
10.3 Removing and installing pressure differential sender G505	65
11 Engine control unit	66
11.1 Wiring and component check with test box V.A.G 1598/42	66
11.2 Removing and installing engine control unit J623	67
28 - Glow plug system	71



1	Glow plug system	71
1.1	Checking glow plug system	71
1.2	Exploded view - glow plugs, Hall sender, engine speed sender	71
1.3	Removing and installing glow plugs	72
1.4	Removing and installing Hall sender G40	74
1.5	Removing and installing engine speed sender G28	75