

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 General note for vehicles with SCR system	1
1.2 Adapting learnt value after draining reducing agent or renewing components	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions for vehicles with start/stop system	2
1.5 Safety precautions when working on the fuel system	3
1.6 Safety precautions when working on the injection and glow plug system	5
1.7 Checking vacuum system	5
2 Overview of fitting locations (CAPA, CAMA, CAMB, CCWA, CCWB, CGKA, CGKB)	7
3 Overview of fitting locations (CCLA)	17
4 Fuel system - overview	27
5 Exploded view - fuel system (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CCLA)	30
6 Exploded view - fuel system (CAPA)	34
7 Bleeding fuel system (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CCLA)	37
8 Air cleaner	38
8.1 Exploded view - air cleaner	38
8.2 Removing and installing engine cover panel	40
8.3 Removing and installing air filter element	40
8.4 Removing air cleaner (bottom section)	42
9 Intake manifold	44
9.1 Exploded view - intake manifold	44
9.2 Removing and installing intake manifold (top section)	45
9.3 Removing and installing intake manifold (bottom section, left-side)	47
9.4 Removing and installing intake manifold (bottom section, right-side)	49
10 Toothed belt (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CCLA)	53
10.1 Exploded view - toothed belt for high-pressure pump	53
10.2 Removing and installing toothed belt for high-pressure pump	55
11 Toothed belt (CAPA)	64
11.1 Exploded view - toothed belt for high-pressure pump	64
11.2 Removing and installing toothed belt for high-pressure pump	64
12 High-pressure pump (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CCLA)	69
12.1 Exploded view - high-pressure pump	69
12.2 Removing and installing high-pressure pump	72
12.3 Performing first fuel filling after installing high-pressure pump (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CCLA)	74
13 High-pressure pump (CAPA)	76
13.1 Exploded view - high-pressure pump	76
13.2 Removing and installing high-pressure pump	77
13.3 Bleeding fuel system and checking for leaks	79
14 Injectors	81
14.1 Checking injectors	81
14.2 Performing adaption of correction values for injectors	81
14.3 Checking return flow rate of injectors with engine running	82
14.4 Checking return flow rate of injectors at starter cranking speed	84
14.5 Checking for injectors sticking open	86
14.6 Checking pressure retention valve in fuel return line	88
14.7 Checking restrictor in fuel return line	89
14.8 Removing and installing injectors	90
15 Senders and sensors	97



15.1	Removing and installing air mass meter G70	97
15.2	Installing high-pressure pipes	97
15.3	Checking fuel pressure regulating valve N276	100
15.4	Removing and installing fuel pressure regulating valve N276	100
15.5	Removing and installing fuel pressure sender G247	102
16	Lambda probe and exhaust gas temperature control (CAMA, CAMB, CCWA, CCWB, CGKA, CGKB, CAPA)	105
16.1	Exploded view - Lambda probe and exhaust gas temperature control	105
16.2	Removing and installing Lambda probe G39 with Lambda probe heater Z19	106
16.3	Removing and installing exhaust gas pressure sensor 1 G450	107
17	Lambda probe and exhaust gas temperature control (CCLA)	108
17.1	Exploded view - Lambda probe and exhaust gas temperature control	108
17.2	Removing and installing Lambda probe G39 with Lambda probe heater Z19	109
17.3	Removing and installing control unit for NOx sender J583 with NOx sender G295	110
17.4	Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687	111
17.5	Removing and installing pressure differential sender G505	111
18	Engine control unit	113
18.1	Wiring and component check with test box V.A.G 1598/42	113
18.2	Renewing engine control unit J623	115
28	Glow plug system	119
1	Removing and installing glow plugs (CAMA, CAPA, CAMB, CCWA, CCWB, CGKA, CGKB)	119
2	Removing and installing glow plugs (CCLA)	121
3	Removing and installing engine speed sender G28	123