

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Identification of final drive	1
<b>2 Technical data</b>	<b>5</b>
2.1 Allocation of gearbox to engine	5
2.2 Capacities	5
<b>3 Transmission layout</b>	<b>8</b>
<b>4 Electrical components</b>	<b>9</b>
4.1 Overview of fitting locations - electrical components	9
<b>5 Safety precautions</b>	<b>10</b>
5.1 General safety precautions	10
5.2 Safety precautions when working on high-voltage vehicles	11
<b>6 Repair instructions</b>	<b>14</b>
6.1 General repair instructions	14
6.2 Safety precautions and testing	14
6.3 Jacking mode for vehicles with air suspension	16
6.4 Special tools	16
6.5 Components	16
<b>39 - Final drive - rear differential</b>	<b>19</b>
<b>1 Propshaft</b>	<b>19</b>
1.1 Exploded view - propshaft	19
1.2 Removing and installing propshaft	24
1.3 Detaching and attaching propshaft at rear final drive	37
1.4 Detaching and attaching propshaft at gearbox	39
1.5 Renewing protective boot	41
<b>2 Final drive</b>	<b>45</b>
2.1 Exploded view - final drive	45
2.2 Removing and installing final drive	48
<b>3 Dismantling and assembling final drive</b>	<b>90</b>
3.1 Exploded view - dismantling and assembling final drive	90
3.2 Removing and installing hydraulic control unit	93
3.3 Dismantling and assembling hydraulic control unit	96
3.4 Removing and installing all-wheel drive pump V415	99
3.5 Removing and installing oil pressure and oil temperature sender G437 or oil pressure and oil temperature sender 2 G640	101
3.6 Removing and installing clutch valve for all-wheel drive N445 or clutch valve 2 for all-wheel drive N446	104
3.7 Checking torque distribution	106
<b>4 Gear oil</b>	<b>107</b>
4.1 Overview of fitting locations - drain and inspection plugs	107
4.2 Checking gear oil level	107
4.3 Draining and filling gear oil	109
<b>5 ATF</b>	<b>118</b>
5.1 Overview of fitting locations - drain and inspection plugs	118
5.2 Checking ATF level	118
5.3 Draining and filling ATF	119
<b>6 Oil seals</b>	<b>124</b>
6.1 Overview of fitting locations - oil seals	124
6.2 Renewing oil seal (left-side)	125
6.3 Renewing oil seal (right-side)	132
6.4 Renewing input shaft oil seal	132

6.5	Renewing protective ring on flange shaft . . . . .	156
6.6	Renewing protective ring on input shaft flange . . . . .	163
<b>7</b>	<b>Renewing propshaft flange - 0BD</b> . . . . .	<b>169</b>
<b>8</b>	<b>Gearbox control system</b> . . . . .	<b>173</b>
8.1	Overview of fitting locations - gearbox control system . . . . .	173
8.2	Removing and installing all-wheel drive control unit J492 . . . . .	175
8.3	Additional work required after renewing all-wheel drive control unit J492 . . . . .	176