

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	3
1.5	Vehicle identification number	4
1.6	Vehicle data sticker	5
2	Preparations	6
2.1	Vehicle: raising	6
2.2	Engine cover panel: removing and installing	8
2.3	Noise insulation: removing and installing	10
2.4	Window regulators: activating automatic open/close function	11
2.5	Vehicle diagnostic tester: connecting	12
3	Maintenance	14
3.1	Diesel particulate filter: reading out ash deposit volume	17
3.2	Readiness for sending and receiving information: establishing	18
3.3	ERA-GLONASS: checking emergency call function	19
3.4	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	20
3.5	Emergency call function: checking status LED (must be green before delivery to customer)	20
3.6	Certificate of conformity (COC): checking COC is present in vehicle	21
3.7	Event memory: reading out	21
3.8	Service interval display: resetting service event	21
3.9	Diagnostic work: performing	22
3.10	Transport mode: deactivating	22
3.11	Transport mode: checking activation and activating if necessary	23
3.12	Battery: reading out status	24
3.13	Vehicle diagnosis: completing	24
3.14	Rear final drive: changing gear oil	25
3.15	Rear final drive: changing ATF	25
3.16	Battery: checking electrolyte level	25
3.17	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	27
3.18	Battery: determining and recording state of charge (SOC)	29
3.19	Mirror hanger indicating defective battery: renewing battery on affected vehicles	31
3.20	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	31
3.21	Connectivity box: checking emergency battery, telematics	31
3.22	Connected gateway: renewing emergency battery, telematics	32
3.23	Brake fluid: changing	33
3.24	Brake fluid (vehicles older than 12 months): changing	38
3.25	Brake fluid: checking fluid level	38
3.26	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	38
3.27	Brake pads: checking thickness	39
3.28	Brake discs: checking for surface rust and operating brakes to clean if necessary	40
3.29	Parking brake: releasing	41
3.30	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	41
3.31	Tyres: checking tyre pressures and adjusting if necessary	43
3.32	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	44
3.33	Tyre Pressure Loss Indicator: storing changed tyre pressures	44
3.34	Tyre repair kit: checking that set is complete, and checking and recording expiry date	44
3.35	Wheel bolts: tightening to specified torque	45
3.36	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	46



3.37	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	48
3.38	Engine, gearbox, final drive and steering: checking for leaks and damage	52
3.39	Vehicle (from below): checking for damage	53
3.40	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	53
3.41	Roof insert: checking operation	53
3.42	Roof insert - sliding/tilting sunroof: cleaning and lubricating	54
3.43	Roof insert for panoramic sliding sunroof: checking operation	56
3.44	Roof insert - panoramic sliding sunroof: checking, cleaning and lubricating	56
3.45	Water drains - panoramic sliding sunroof: checking	60
3.46	Door hinges with separate door arrester: cleaning and lubricating	61
3.47	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	62
3.48	Wiper blades: checking for damage	63
3.49	Headlight washer system: checking operation	64
3.50	Headlights: checking for correct adjustment	64
3.51	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	65
3.52	Luggage compartment lighting: checking operation	66
3.53	Luggage compartment: removing protective film and felt pieces	67
3.54	Glove compartment light, interior lighting and reading light: checking operation	67
3.55	Horn: checking operation	67
3.56	Passenger airbag: checking key switch on/off and setting to "on"	68
3.57	Owner's literature: checking that all documents are present	68
3.58	Service Schedule: affixing vehicle data sticker	68
3.59	Owner's Manual: attaching vehicle data sticker	69
3.60	Service Schedule: entering Delivery Inspection	69
3.61	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	69
3.62	Vehicle interior: removing protective film (if present) and protective covers for seats	70
3.63	Vehicle interior: checking that it is clean and cleaning if necessary	70
3.64	Vehicle interior: removing any objects other than those protecting interior surfaces	70
3.65	Vehicle interior and exterior: checking for and documenting any damage	70
3.66	Instrument cluster: checking warning lamps	71
3.67	Warning triangle: checking availability	71
3.68	First-aid kit: checking and recording expiry date	71
3.69	Vehicle keys: checking operation and recording number of keys given to customer	71
3.70	Vehicle key: removing from ignition lock	72
3.71	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	72
3.72	Static event memory: working through	72
3.73	Sun visors: checking that they are folded up and folding up if necessary	72
3.74	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	73
3.75	Engine oil: draining	73
3.76	Engine oil: extracting	75
3.77	Engine oil: renewing oil filter	76
3.78	Engine oil: filling up	80
3.79	Engine oil: checking oil level and correcting if necessary	81
3.80	Spark plugs: renewing	82
3.81	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	92
3.82	Air filter: renewing filter element and cleaning housing	96
3.83	ECE towing bracket: checking (if fitted)	103
3.84	Vehicle identification numbers: checking numbers match and are embossed properly	104
3.85	Dust and pollen filter: renewing	104
3.86	Water separator (fuel filter): draining	106

3.87	Fuel filter: renewing	107
3.88	Water separator filter: renewing	108
3.89	Fuel tank: adding fuel additive	110
3.90	Reducing agent (AdBlue®): filling up tank completely	110
3.91	Natural gas tank: renewing	115
3.92	Natural gas system: checking for damage and leaks	115
3.93	Service display for checking natural gas system: resetting	124
3.94	Filler connection for natural gas: checking condition and cleaning if necessary	125
3.95	Vehicle doors: removing edge protection	125
3.96	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	125
3.97	Vehicle exterior: removing protective film, if present	125
3.98	Vehicle cover: checking position and correcting if necessary	125
3.99	Vehicle cover: removing according to manufacturer's instructions	126
3.100	Paintwork, trims, side windows and wiper blades: checking cleanliness	126
3.101	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	126
3.102	Vehicles parked outdoors: locking	126
3.103	Road test	126
3.104	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	127
3.105	Accessories: installing	127
3.106	Checklist "Documentation of cleaning and care routine": checking that list is present	128
3.107	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	128
3.108	Cleaning and care: checking that required measures have been carried out on time	128
3.109	Stock vehicle care management: deciding and recording date of next check	128
3.110	Display instruments: setting time and date	128
3.111	Manual gearbox/automatic gearbox: selecting 1st gear/park	128
3.112	Dual clutch gearbox (S tronic): changing ATF	129
3.113	Interior mirror: calibrating compass	129
3.114	Instrument cluster: resetting driver information system	129
3.115	Poly V-belt for ancillaries: renewing	129
3.116	Toothed belt for coolant pump drive: checking	129
3.117	Toothed belt for camshaft drive: renewing	130
3.118	Toothed belt for camshaft drive and tensioning roller: renewing	130
4	Exhaust emissions test	131
4.1	Petrol engines: performing exhaust emissions test	131
4.2	Diesel engines: performing exhaust emissions test - up to EU5	139
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	148
5	Periodic technical inspection (PTI)	150