

Contents

00 - Technical data	1
1 Identification	1
1.1 PR number and type of brake system	1
2 Safety information	3
2.1 Safety precautions when working on vehicles with start/stop system	3
2.2 Safety precautions when using testers and measuring instruments during a road test	3
3 Repair instructions	4
3.1 Identification plates	4
3.2 Use of impact wrenches	4
3.3 Rules for cleanliness	4
3.4 Nuts, bolts	5
3.5 Contact corrosion	5
4 Technical data	7
4.1 Technical data for brakes	7
5 Brake test	9
5.1 General notes	9
5.2 Testing vehicles with front-wheel drive	9
5.3 Testing vehicles with all-wheel drive	9
5.4 Checking parking brake	10
5.5 Checking brake discs	11
6 Electrical components	19
6.1 Starting diagnosis	19
45 - Anti-lock brake system	21
1 General notes	21
1.1 Notes for repair work on ABS	21
2 Overview of fitting locations	22
2.1 Overview of fitting locations - ABS/ESP	22
3 Control unit and hydraulic unit	25
3.1 Assembly overview - control unit and hydraulic unit	25
3.2 Removing and installing ABS control unit J104/ABS hydraulic unit N55	27
3.3 Separating control unit from hydraulic unit	34
3.4 Attaching control unit to hydraulic unit	35
4 Sensors	37
4.1 Assembly overview - speed sensors on front axle	37
4.2 Assembly overview - speed sensors on rear axle	37
4.3 Removing and installing brake light switch	38
4.4 Removing and installing front wheel speed sensor G45/G47	40
4.5 Removing and installing rear wheel speed sensor G44/G46	40
46 - Brakes - mechanism	42
1 Front brakes	42
1.1 Assembly overview - front brakes	42
1.2 Removing and installing brake pads	56
1.3 Removing and installing brake caliper	72
1.4 Renewing brake caliper	84
1.5 Removing and installing brake carrier	102
1.6 Removing and installing brake disc	103
1.7 Removing and installing splash plate	105
1.8 Removing and installing pad wear indicator wire	106
2 Rear brakes	109



2.1	Assembly overview - rear brakes	109
2.2	Removing and installing brake pads	112
2.3	Removing and installing brake caliper	122
2.4	Renewing brake caliper	124
2.5	Removing and installing brake carrier	128
2.6	Removing and installing brake disc	129
2.7	Removing and installing splash plate	131
2.8	Removing and installing pad wear indicator wire	132
3	Parking brake	134
3.1	Assembly overview - parking brake	134
3.2	Removing and installing parking brake motor V282/V283	134
3.3	Releasing parking brake manually	136
4	Brake pedal	138
4.1	Assembly overview - brake pedal	138
4.2	Removing and installing mounting bracket	139
4.3	Separating brake pedal from brake servo	141
4.4	Connecting brake pedal to brake servo	142
4.5	Removing and installing brake pedal	142
47	Brakes - hydraulics	146
1	Front brake caliper	146
1.1	Assembly overview - front brake caliper	146
1.2	Removing and installing brake caliper piston	148
1.3	Renewing bearing bushes and guide pins	158
2	Rear brake caliper	160
2.1	Assembly overview - rear brake caliper	160
2.2	Removing and installing brake caliper piston	160
3	Brake servo/brake master cylinder	166
3.1	Assembly overview - brake servo/brake master cylinder	166
3.2	Removing and installing brake servo	169
3.3	Removing and installing brake master cylinder	173
3.4	Removing and installing brake fluid reservoir	175
3.5	Removing and installing brake fluid level warning contact F34	179
4	Vacuum system	180
4.1	Assembly overview - vacuum pump	180
4.2	Checking non-return valve	184
4.3	Removing and installing non-return valve	185
4.4	Removing and installing vacuum pump	187
4.5	Removing and installing brake servo pressure sensor	192
4.6	Checking vacuum system	193
5	Brake lines	199
6	Hydraulic system	200
6.1	General notes on brake fluid	200
6.2	Bleeding hydraulic system	201
6.3	Leak test	207