

Contents

00 - Technical data	1
1 General notes	1
1.1 Running gear	1
1.2 Steering	1
1.3 Types of tyre	1
1.4 General notes on drive shaft	1
2 Safety information	2
2.1 Safety precautions when working on vehicles with start/stop system	2
2.2 Safety precautions when using testers and measuring instruments during a road test	2
3 Repair instructions	3
3.1 Safety precautions when working on the subframe	3
3.2 Identification plates	3
3.3 Use of impact wrenches	4
3.4 Routing and attachment of pipes, hoses and wiring	4
3.5 Leaks at shock absorbers	5
3.6 Checking shock absorbers when removed	5
3.7 Checking shock absorbers on shock tester	6
3.8 Maximum values "a" in mm	7
3.9 Rules for cleanliness	8
3.10 General notes	9
3.11 Contact corrosion	10
3.12 Gaskets, seals	10
3.13 Nuts, bolts	11
3.14 Electrical components	11
3.15 Repairing damaged threads in longitudinal member (subframe to body)	11
3.16 Lifting suspension to unladen position - vehicles with coil springs	11
4 Disposal	14
4.1 Releasing gas and draining front gas-filled shock absorbers	14
4.2 Releasing gas and draining rear gas-filled shock absorbers	14
5 Electrical components	16
5.1 Starting diagnosis	16
40 - Front suspension	19
1 Front axle	19
1.1 Overview - front axle	19
2 Subframe	20
2.1 Assembly overview - subframe	20
2.2 Fixing subframe in position	22
2.3 Lowering subframe	28
2.4 Removing and installing subframe with steering rack	31
2.5 Removing and installing subframe cross brace	38
2.6 Removing and installing subframe shield	44
3 Anti-roll bar	46
3.1 Assembly overview - anti-roll bar	46
3.2 Removing and installing anti-roll bar	47
3.3 Removing and installing coupling rod	47
4 Suspension strut, upper suspension links	49
4.1 Assembly overview - suspension strut, upper suspension links	49
4.2 Removing and installing suspension strut	53
4.3 Servicing suspension strut	56
4.4 Removing and installing upper suspension link	60
4.5 Renewing bush for upper suspension link	61



4.6	Removing and installing shock absorber fork	63
4.7	Removing and installing strut brace	65
5	Lower suspension links, swivel joint	66
5.1	Assembly overview - lower suspension links, swivel joint	66
5.2	Removing and installing track control link	68
5.3	Removing and installing guide link	71
5.4	Renewing bush for track control link	74
5.5	Removing and installing swivel joint	78
5.6	Removing and installing bonded rubber bush for guide link	79
6	Wheel bearing	83
6.1	Assembly overview - wheel bearing	83
6.2	Removing and installing wheel bearing housing	84
6.3	Removing and installing wheel bearing unit	88
6.4	Servicing wheel bearing unit	89
7	Drive shaft	93
7.1	Assembly overview - drive shaft	93
7.2	Removing and installing drive shaft	96
7.3	Removing and installing heat shield for drive shaft	97
7.4	Loosening and tightening nut/bolt securing drive shaft	98
7.5	Dismantling and assembling drive shaft	99
7.6	Servicing constant velocity joint	111
7.7	Checking outer constant velocity joint	112
7.8	Tightening hose clip on triple roller joint and outer joint	113
42	Rear suspension	115
1	Rear axle	115
1.1	Overview of fitting locations - rear axle	115
2	Subframe	116
2.1	Assembly overview - subframe	116
2.2	Fixing subframe in position	120
2.3	Removing and installing subframe	124
2.4	Servicing subframe	128
3	Anti-roll bar	137
3.1	Assembly overview - anti-roll bar	137
3.2	Removing and installing anti-roll bar	138
3.3	Removing and installing coupling rod	138
4	Suspension links, track rod	139
4.1	Assembly overview - transverse links	139
4.2	Removing and installing upper transverse links	143
4.3	Removing and installing lower transverse links	145
4.4	Removing and installing track rod	148
5	Suspension strut/shock absorber, spring	150
5.1	Assembly overview - suspension strut/shock absorber, spring	150
5.2	Removing and installing shock absorber	156
5.3	Removing and installing shock absorber mounting	159
5.4	Removing and installing spring	161
6	Wheel bearing, trailing arm	171
6.1	Assembly overview - wheel bearing	171
6.2	Removing and installing wheel bearing housing	173
6.3	Removing and installing wheel bearing unit	176
6.4	Servicing wheel bearing unit	179
7	Drive shaft	183
7.1	Assembly overview - drive shaft	183
7.2	Removing and installing drive shaft	187

7.3	Loosening and tightening nut/bolt securing drive shaft	188
7.4	Dismantling and assembling drive shaft	189
7.5	Checking outer constant velocity joint	195
7.6	Checking inner constant velocity joint	196
43	- Self-levelling suspension	198
1	Electronic damping control	198
1.1	Overview of fitting locations - electronic damping control	198
1.2	Basic setting of electronic damper control	200
1.3	Removing and installing running gear control unit J775	201
2	Vehicle level senders	203
2.1	Assembly overview - front vehicle level senders	203
2.2	Assembly overview - rear vehicle level senders	203
2.3	Removing and installing front vehicle level sender G78 / G289	205
2.4	Removing and installing rear vehicle level sender G76 / G77	205
3	Dynamic Ride Control (DRC)	206
3.1	System description - DRC	206
3.2	Overview of fitting locations - DRC	206
3.3	Assembly overview - central valve	207
3.4	Assembly overview - front shock absorber	208
3.5	Assembly overview - rear shock absorber	209
3.6	Removing and installing central valve	210
3.7	Checking DRC system	211
3.8	Checking DRC system pressure	212
3.9	Discharging and charging DRC system	214
44	- Wheels, tyres, vehicle geometry	223
1	Wheels, tyres	223
2	Tyre Pressure Monitoring System	224
2.1	Assembly overview - tyre pressure sensor	224
2.2	Assembly overview - Tyre Pressure Monitoring System control unit J502	224
2.3	Removing and installing Tyre Pressure Monitoring System control unit J502	225
2.4	Changing tyres on vehicles with Tyre Pressure Monitoring System	226
2.5	Removing and installing metal valve body	227
3	Wheel alignment	228
3.1	Notes on wheel alignment	228
3.2	Test requirements for wheel alignment	228
3.3	Preparations	229
3.4	When does wheel alignment have to be checked?	231
3.5	Wheel alignment procedure	232
3.6	Explanatory notes on production control numbers (PR numbers)	233
3.7	Wheel runout compensation	233
3.8	Checking maximum steering angle	234
3.9	Checking unladen position for wheel alignment - vehicles with coil springs	234
3.10	Wheel alignment specifications	237
3.11	Adjusting camber at rear wheels	244
3.12	Adjusting toe setting at rear wheels	245
3.13	Centralising camber at front wheels	246
3.14	Adjusting toe setting at front wheels	247
3.15	Basic setting for steering angle sender G85	248
4	Dynamic steering	249
4.1	Assembly overview - dynamic steering	249
4.2	Removing and installing active steering control unit J792	250
4.3	Basic setting for dynamic steering	250
5	Adaptive cruise control	252



5.1	Adjusting adaptive cruise control	252
6	Front camera for driver assist systems	257
6.1	Calibrating front camera for driver assist systems	257
48 - Steering		263
1	Steering wheel	263
1.1	Assembly overview - steering wheel	263
1.2	Removing and installing steering wheel	269
2	Steering column	271
2.1	Assembly overview - steering column	271
2.2	Checking steering column for damage	274
2.3	Handling and transporting steering column	274
2.4	Removing and installing steering column	275
2.5	Removing and installing safety lock for active steering (locking solenoid)	278
2.6	Removing and installing intermediate steering shaft	279
2.7	Removing and installing control unit for electronic steering column lock J764	281
3	Steering rack	283
3.1	Assembly overview - steering rack	283
3.2	Handling and transporting steering rack	287
3.3	Removing and installing steering rack	287
3.4	Removing and installing boot	290
3.5	Removing and installing track rod	292
3.6	Removing and installing track rod ball joint	294