

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on the high-voltage system | 1 |
| 1.2 Safety precautions when working in the vicinity of high-voltage components | 2 |
| 1.3 Safety precautions when working on vehicles with start/stop system | 2 |
| 1.4 Safety precautions when using testers and measuring instruments during a road test | 2 |
| 2 Repair instructions | 4 |
| 2.1 Identification plates | 4 |
| 2.2 Use of impact wrenches | 4 |
| 2.3 Rules for cleanliness | 5 |
| 2.4 Contact corrosion | 5 |
| 2.5 Routing and attachment of pipes, hoses and wiring | 5 |
| 91 - Radio, telephone, navigation | 7 |
| 1 Safety information | 7 |
| 2 Infotainment system | 8 |
| 2.1 Layout - infotainment system | 8 |
| 2.2 Overview of fitting locations - infotainment system | 15 |
| 2.3 Removing and installing infotainment system display | 17 |
| 2.4 Removing and installing control unit 1 for information electronics J794 | 19 |
| 2.5 Removing and installing multimedia system operating unit E380 | 22 |
| 2.6 Removing and installing driver side volume regulator E67 | 23 |
| 2.7 Removing and installing multimedia system button module E817 | 24 |
| 3 Sound system | 25 |
| 3.1 Layout - sound system | 25 |
| 3.2 Overview of fitting locations - sound system | 31 |
| 3.3 Removing and installing digital sound package control unit/amplifier | 37 |
| 3.4 Removing and installing rear treble loudspeakers R14/R16 | 40 |
| 3.5 Removing and installing front treble loudspeakers R20/R22 | 41 |
| 3.6 Removing and installing front treble loudspeakers 2 R220/R221 | 43 |
| 3.7 Removing and installing front mid-range loudspeakers | 45 |
| 3.8 Removing and installing front mid-range loudspeakers 2 R276/R277 | 46 |
| 3.9 Removing and installing rear bass loudspeakers R15/R17 | 47 |
| 3.10 Removing and installing front bass loudspeakers R21/R23 | 48 |
| 3.11 Removing and installing subwoofer R211 | 49 |
| 3.12 Removing and installing effect loudspeakers | 52 |
| 3.13 Removing and installing centre loudspeaker | 54 |
| 3.14 Removing and installing internal microphone R74 | 56 |
| 4 Aerial systems | 58 |
| 4.1 Layout - aerial systems | 58 |
| 4.2 Overview of fitting locations - aerial systems | 65 |
| 4.3 Removing and installing aerial amplifier | 81 |
| 4.4 Removing and installing window aerial suppression filter C18 | 93 |
| 4.5 Removing and installing GPS aerial | 94 |
| 4.6 Removing and installing GSM aerial | 94 |
| 4.7 Removing and installing satellite tuner aerial R172 | 95 |
| 4.8 Removing and installing traffic data aerial | 95 |
| 4.9 Removing and installing dedicated short-range communication aerial | 96 |
| 4.10 Removing and installing emergency call module aerial R263 | 96 |
| 4.11 Removing and installing emergency call module aerial 2 R322 | 101 |
| 4.12 Removing and installing emergency call module aerial 3 R323 | 103 |
| 4.13 Removing and installing roof aerial | 104 |



| | | |
|-----------|--|------------|
| 4.14 | Removing and installing bumper aerials | 105 |
| 4.15 | Removing and installing LTE aerials | 105 |
| 4.16 | Removing and installing wireless data transfer aerial R336/R366 | 108 |
| 4.17 | Removing and installing near field communication control unit 2 J1170 | 109 |
| 4.18 | Removing and installing near field communication aerial 2 R351 | 110 |
| 5 | Telephone system | 111 |
| 5.1 | Layout - telephone | 111 |
| 5.2 | Overview of fitting locations - telephone system | 120 |
| 5.3 | Assembly overview - microphone unit | 123 |
| 5.4 | Removing and installing microphone unit in front roof module R164 | 124 |
| 5.5 | Removing and installing aerial amplifier for mobile telephone R86 | 125 |
| 5.6 | Removing and installing telephone bracket | 126 |
| 6 | Navigation system | 128 |
| 6.1 | Layout - navigation system | 128 |
| 6.2 | Overview of fitting locations - navigation system | 136 |
| 6.3 | Removing and installing chip card reader control unit | 138 |
| 7 | TV system | 140 |
| 7.1 | Layout - TV system | 140 |
| 7.2 | Overview of fitting locations - TV system | 141 |
| 7.3 | Removing and installing TV tuner | 143 |
| 8 | Reversing camera system | 146 |
| 8.1 | Layout - reversing camera system | 146 |
| 8.2 | Overview of fitting locations - reversing camera system | 146 |
| 8.3 | Removing and installing reversing camera R189 | 147 |
| 8.4 | Removing and installing reversing camera system control unit J772 | 149 |
| 8.5 | Calibrating reversing camera system | 150 |
| 9 | Multifunction steering wheel | 157 |
| 9.1 | Layout - multifunction steering wheel | 157 |
| 9.2 | Assembly overview - multi-function steering wheel | 157 |
| 9.3 | Removing and installing multifunction buttons in steering wheel E441/E440 | 159 |
| 9.4 | Removing and installing tiptronic switches in steering wheel E479/E448 | 164 |
| 10 | Connection for external multimedia devices | 166 |
| 10.1 | Layout - connection for external multimedia devices | 166 |
| 10.2 | Removing and installing connection for external multimedia devices | 168 |
| 10.3 | Removing and installing USB connection 1 U41 | 169 |
| 10.4 | Removing and installing USB charging socket 2 U38 | 170 |
| 10.5 | Removing and installing control unit with Android operating system J1243 | 171 |
| 11 | Rear Seat Entertainment system (RSE) | 173 |
| 11.1 | Layout - Rear Seat Entertainment system | 173 |
| 11.2 | Overview of fitting locations - Rear Seat Entertainment system | 173 |
| 11.3 | Removing and installing multimedia system display unit Y31/Y32 | 174 |
| 11.4 | Removing and installing holder for multimedia system display unit R315/R316 | 175 |
| 11.5 | Removing and installing rear information display and operating unit control unit J648/J649 | 176 |
| 12 | Overhead view camera | 178 |
| 12.1 | Layout - overhead view camera system | 178 |
| 12.2 | Overview of fitting locations - overhead view camera | 179 |
| 12.3 | Removing and installing control unit for overhead view camera J928 | 180 |
| 12.4 | Removing and installing rear overhead view camera R246 | 181 |
| 12.5 | Removing and installing front overhead view camera R243 | 183 |
| 12.6 | Removing and installing right and left overhead view cameras R244/R245 | 184 |
| 12.7 | Calibrating overhead view camera | 184 |
| 13 | Online services | 189 |
| 13.1 | Layout - mobile online services | 189 |
| 13.2 | Overview of fitting locations - mobile online services | 194 |

| | | |
|------|--|------|
| 13.3 | Removing and installing emergency call module control unit and communication unit J949 | .200 |
| 13.4 | Removing and installing emergency battery, telematics A16 | 201 |
| 13.5 | Removing and installing loudspeaker for emergency call module R335 | 202 |