

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on vehicles with start/stop system | 2 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 1.3 Safety precautions when working on pyrotechnic components | 3 |
| 1.4 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components) | 5 |
| 1.5 Additional safety regulations for airbag control units | 6 |
| 1.6 Additional safety regulations for side airbags | 6 |
| 1.7 Additional safety regulations for curtain airbags | 7 |
| 1.8 Safety regulations for crash sensors (pressure sensors) for front side airbag | 7 |
| 1.9 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version | 8 |
| 1.10 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version | 9 |
| 1.11 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident | 9 |
| 1.12 Checking airbag mounting components following an accident | 10 |
| 1.13 Accident in which no airbag was triggered | 11 |
| 1.14 Checking seat belts | 11 |
| 1.15 Checking belt webbing | 11 |
| 1.16 Checking automatic belt retractor (locking action) | 12 |
| 1.17 Visual inspection of belt buckle | 13 |
| 1.18 Functional check of belt buckle | 13 |
| 1.19 Checking guide fittings and latch plate | 13 |
| 1.20 Checking securing components and anchorage points following an accident | 13 |
| 1.21 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version) | 14 |
| 1.22 Checking child seat anchors following an accident | 14 |
| 1.23 Safety regulations for automatic anti-dazzle interior mirror | 15 |
| 2 Repair instructions | 16 |
| 2.1 Contact corrosion | 16 |
| 2.2 Routing and attachment of pipes, hoses and wiring | 16 |
| 2.3 Identification plates | 16 |
| 2.4 Use of impact wrenches | 17 |
| 68 - Interior equipment | 18 |
| 1 Storage compartments/covers/trim panels | 18 |
| 1.1 Overview of fitting locations - storage compartments/covers/trim panels | 18 |
| 1.2 Assembly overview - dash panel cover (driver side) | 20 |
| 1.3 Assembly overview - steering column trim | 21 |
| 1.4 Assembly overview - glove compartment | 22 |
| 1.5 Removing and installing dash panel cover (driver side) | 24 |
| 1.6 Removing and installing footwell cover (driver side) | 24 |
| 1.7 Removing and installing upper steering column trim | 24 |
| 1.8 Removing and installing lower steering column trim | 26 |
| 1.9 Removing and installing glove compartment opening mechanism | 27 |
| 1.10 Removing and installing lock cylinder for glove compartment opening mechanism | 28 |
| 1.11 Removing and installing glove compartment | 29 |
| 1.12 Removing and installing glove compartment cover | 32 |
| 1.13 Removing and installing restrictor for glove compartment cover | 33 |
| 2 Equipment | 34 |
| 2.1 Assembly overview - net partition | 34 |
| 2.2 Assembly overview - sun visors | 35 |

| | | |
|--|--|-----------|
| 2.3 | Assembly overview - sun blind | 36 |
| 2.4 | Assembly overview - luggage compartment cover | 39 |
| 2.5 | Removing and installing retainer for net partition | 41 |
| 2.6 | Removing and installing mounting for net partition | 41 |
| 2.7 | Removing and installing bracket for net partition | 42 |
| 2.8 | Removing and installing sun visor | 42 |
| 2.9 | Removing and installing sun visor centre mount | 43 |
| 2.10 | Removing and installing sun blind | 44 |
| 2.11 | Removing and installing retainer for sun blind | 48 |
| 2.12 | Removing and installing grab handle | 48 |
| 2.13 | Removing and installing luggage compartment cover | 49 |
| 3 | Centre console | 52 |
| 3.1 | Assembly overview - centre console | 52 |
| 3.2 | Removing and installing rear centre console trim | 57 |
| 3.3 | Removing and installing rear ashtray | 58 |
| 3.4 | Removing and installing centre console insert | 58 |
| 3.5 | Removing and installing front centre console storage compartment | 60 |
| 3.6 | Removing and installing centre console trim | 61 |
| 3.7 | Removing and installing front centre console footwell trim | 61 |
| 3.8 | Removing and installing centre console | 62 |
| 3.9 | Removing and installing trim panel for centre console | 63 |
| 3.10 | Removing and installing cup holders | 66 |
| 3.11 | Removing and installing vent (rear) in centre console | 66 |
| 3.12 | Removing and installing bracket for centre console | 67 |
| 4 | Front centre armrest | 68 |
| 4.1 | Assembly overview - front centre armrest | 68 |
| 4.2 | Removing and installing front centre armrest | 69 |
| 4.3 | Removing and installing upper part of centre armrest | 69 |
| 4.4 | Removing and installing trim for hinge arm | 71 |
| 5 | Interior mirror | 72 |
| 5.1 | Assembly overview - interior mirror | 72 |
| 5.2 | Removing and installing interior mirror | 73 |
| 5.3 | Setting magnetic deflection zone | 74 |
| 5.4 | Calibrating digital compass | 75 |
| 5.5 | Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles | 75 |
| 5.6 | Selecting the applicable deflection zone from the map | 76 |
| 69 - Passenger protection | 82 | |
| 1 | Seat belts | 82 |
| 1.1 | Overview of fitting locations - seat belts and anchorage points | 82 |
| 1.2 | Assembly overview - front three-point seat belt | 84 |
| 1.3 | Assembly overview - rear outer three-point seat belt | 86 |
| 1.4 | Assembly overview - rear centre three-point seat belt | 86 |
| 1.5 | Assembly overview - front belt buckle | 87 |
| 1.6 | Assembly overview - rear belt buckle | 88 |
| 1.7 | Removing and installing front three-point seat belt | 90 |
| 1.8 | Removing and installing rear three-point seat belt | 94 |
| 1.9 | Removing and installing rear belt guide | 100 |
| 1.10 | Removing and installing front belt guide | 104 |
| 1.11 | Removing and installing front belt end fitting | 104 |
| 1.12 | Removing and installing rear outer belt end fitting | 105 |
| 1.13 | Removing and installing belt height adjuster | 105 |
| 1.14 | Removing and installing front belt buckle | 106 |
| 1.15 | Removing and installing rear belt buckle | 106 |

| | | |
|-----------|--|-----|
| 2 | Child seat anchors | 108 |
| 2.1 | Assembly overview - front child seat anchors | 108 |
| 2.2 | Assembly overview - rear child seat anchors | 108 |
| 2.3 | Removing and installing front child seat anchor | 109 |
| 2.4 | Removing and installing rear child seat anchor | 110 |
| 3 | Airbag system | 112 |
| 3.1 | Overview of fitting locations - airbag system | 112 |
| 4 | Airbag control unit | 115 |
| 4.1 | Assembly overview - airbag control unit | 115 |
| 4.2 | Removing and installing airbag control unit J234 | 115 |
| 5 | Battery isolation igniter | 119 |
| 5.1 | Assembly overview - battery isolation igniter | 119 |
| 5.2 | Removing and installing battery isolation igniter | 119 |
| 6 | Driver airbag | 124 |
| 6.1 | Assembly overview - driver airbag | 124 |
| 6.2 | Removing and installing airbag unit with igniters | 127 |
| 6.3 | Removing and installing connector at airbag | 136 |
| 7 | Front passenger airbag | 139 |
| 7.1 | Assembly overview - front passenger airbag | 139 |
| 7.2 | Removing and installing front passenger airbag unit with igniters | 141 |
| 7.3 | Removing and installing key-operated switch to deactivate airbag on front passenger side | 144 |
| 8 | Side airbags | 145 |
| 8.1 | Assembly overview - front side airbag | 145 |
| 8.2 | Assembly overview - rear side airbag | 146 |
| 8.3 | Removing and installing front side airbag with igniter | 148 |
| 8.4 | Removing and installing rear side airbag with igniter | 158 |
| 8.5 | Removing and installing wire for side airbag | 161 |
| 9 | Curtain airbags | 173 |
| 9.1 | Assembly overview - curtain airbag | 173 |
| 9.2 | Removing and installing curtain airbag with igniter | 174 |
| 10 | Knee airbags | 178 |
| 10.1 | Assembly overview - knee airbag | 178 |
| 10.2 | Removing and installing knee airbag with igniter | 181 |
| 11 | Crash sensors for airbags | 187 |
| 11.1 | Overview of fitting locations - crash sensors for airbags | 187 |
| 11.2 | Removing and installing front airbag crash sensor for driver side G283 | 189 |
| 11.3 | Removing and installing front side airbag crash sensor G179 / G180 | 192 |
| 11.4 | Removing and installing rear side airbag crash sensor G256 / G257 | 195 |
| 12 | Seat position sensor | 199 |
| 12.1 | Assembly overview - seat position sensor | 199 |
| 12.2 | Removing and installing seat position sensor | 200 |
| 13 | Belt-fastened recognition system | 202 |
| 13.1 | Removing and installing seat occupied sensor on front passenger side G128 | 202 |
| 14 | Seat occupied recognition system | 204 |
| 14.1 | Overview of fitting locations - seat occupied recognition system | 204 |
| 14.2 | Removing and installing seat occupied sensor | 205 |
| 15 | Pedestrian protection | 208 |
| 15.1 | Assembly overview - pedestrian protection | 208 |
| 15.2 | Removing and installing centre crash sensor for pedestrian protection G693 | 210 |
| 15.3 | Removing and installing crash sensor for pedestrian protection | 213 |
| 15.4 | Resetting triggered pedestrian protection system | 215 |
| 15.5 | Removing and installing trigger for pedestrian protection G598 / G599 | 216 |

| | |
|---|------------|
| 70 - Trim, insulation | 221 |
| 1 Front door trim | 221 |
| 1.1 Assembly overview - front door trim | 221 |
| 1.2 Removing and installing front door trim | 223 |
| 1.3 Removing and installing front door puller | 226 |
| 1.4 Removing and installing interior door handle | 227 |
| 1.5 Removing and installing window frame trim | 227 |
| 2 Rear door trim | 230 |
| 2.1 Assembly overview - rear door trim | 230 |
| 2.2 Removing and installing loudspeaker trim in door trim | 232 |
| 2.3 Removing and installing interior door handle | 233 |
| 2.4 Removing and installing rear door trim | 234 |
| 2.5 Removing and installing rear door puller | 236 |
| 2.6 Removing and installing window frame trim | 237 |
| 3 Dash panel | 240 |
| 3.1 Assembly overview - dash panel | 240 |
| 3.2 Removing and installing dash panel cover (side) | 243 |
| 3.3 Removing and installing cover for MMI screen | 244 |
| 3.4 Removing and installing trim for dash panel insert | 245 |
| 3.5 Removing and installing loudspeaker trim | 246 |
| 3.6 Removing and installing trim for light switch | 247 |
| 3.7 Removing and installing dash panel | 247 |
| 3.8 Removing and installing trim for operating and display unit | 253 |
| 3.9 Removing and installing loudspeaker mounting | 253 |
| 3.10 Removing and installing outer dash panel vent | 254 |
| 3.11 Removing and installing centre vent | 255 |
| 3.12 Removing and installing bracket for infotainment system display | 256 |
| 3.13 Removing and installing front centre defroster vent | 257 |
| 3.14 Removing and installing side defroster vent | 258 |
| 4 Dash panel cross member | 259 |
| 4.1 Assembly overview - dash panel cross member | 259 |
| 4.2 Removing and installing dash panel cross member | 262 |
| 5 Passenger compartment trim panels | 267 |
| 5.1 Overview of fitting locations - passenger compartment trim panels | 267 |
| 5.2 Assembly overview - sill panel moulding | 269 |
| 5.3 Assembly overview - A-pillar trim | 271 |
| 5.4 Assembly overview - B-pillar trim | 271 |
| 5.5 Assembly overview - C-pillar trim | 272 |
| 5.6 Assembly overview - D-pillar trim | 273 |
| 5.7 Assembly overview - foot rest and floor covering | 274 |
| 5.8 Assembly overview - rear shelf | 276 |
| 5.9 Removing and installing sill panel moulding | 277 |
| 5.10 Removing and installing A-pillar trim | 280 |
| 5.11 Removing and installing B-pillar trim | 283 |
| 5.12 Removing and installing C-pillar trim | 285 |
| 5.13 Removing and installing D-pillar trim | 288 |
| 5.14 Removing and installing foot rest | 291 |
| 5.15 Removing and installing floor covering | 292 |
| 5.16 Removing and installing rear shelf | 293 |
| 5.17 Removing and installing loudspeaker trim | 295 |
| 6 Luggage compartment trim panels | 297 |
| 6.1 Overview of fitting locations - luggage compartment trim panels | 297 |
| 6.2 Assembly overview - luggage compartment side trim | 299 |
| 6.3 Assembly overview - luggage compartment floor | 303 |

| | | |
|-------------------------------|--|------------|
| 6.4 | Assembly overview - lower rear lid trim | 307 |
| 6.5 | Removing and installing lower rear lid trim | 311 |
| 6.6 | Removing and installing upper rear lid trim | 315 |
| 6.7 | Removing and installing luggage compartment side trim | 316 |
| 6.8 | Removing and installing support for luggage compartment floor | 321 |
| 6.9 | Removing and installing lock carrier trim | 321 |
| 6.10 | Removing and installing frame for loading aid | 321 |
| 6.11 | Removing and installing luggage compartment floor | 323 |
| 6.12 | Removing and installing fastening ring | 325 |
| 6.13 | Removing and installing bag hook | 327 |
| 6.14 | Removing and installing grip for rear luggage compartment floor | 327 |
| 6.15 | Removing and installing retaining rail | 329 |
| 6.16 | Removing and installing lining for spare wheel well | 329 |
| 7 | Roof trim panels | 330 |
| 7.1 | Assembly overview - moulded headliner | 330 |
| 7.2 | Removing and installing roof end strip | 332 |
| 7.3 | Removing and installing moulded headliner | 333 |
| 7.4 | Lowering moulded headliner | 336 |
| 7.5 | Removing and installing roof reinforcement | 342 |
| 7.6 | Lowering moulded headliner for removal of roof aerial | 346 |
| 72 - Seat frames | 349 | |
| 1 | Overview - seat versions | 349 |
| 1.1 | Overview of fitting locations - seat versions | 349 |
| 2 | Front seats | 353 |
| 2.1 | Overview of fitting locations - electrical and electronic components | 353 |
| 2.2 | Assembly overview - front seat | 356 |
| 2.3 | Assembly overview - front seat backrest | 358 |
| 2.4 | Assembly overview - head restraint | 365 |
| 2.5 | Assembly overview - seat pan | 369 |
| 2.6 | Removing and installing front seat | 381 |
| 2.7 | Attaching front seat to seat repair stand | 386 |
| 2.8 | Connecting and disconnecting airbag adapter | 387 |
| 2.9 | Connecting and disconnecting modular wiring | 390 |
| 2.10 | Removing and installing seat longitudinal adjuster | 394 |
| 2.11 | Removing and installing seat height adjuster | 399 |
| 2.12 | Removing and installing seat rake adjuster | 406 |
| 2.13 | Removing and installing backrest adjuster | 407 |
| 2.14 | Removing and installing front seat backrest | 416 |
| 2.15 | Removing and installing backrest cover panel | 422 |
| 2.16 | Removing and installing backrest fan | 428 |
| 2.17 | Removing and installing head restraint | 429 |
| 2.18 | Removing and installing head restraint guide | 432 |
| 2.19 | Dismantling and assembling seat pan | 434 |
| 2.20 | Removing and installing seat adjustment operating unit E470 / E471 | 443 |
| 2.21 | Removing and installing lumbar support adjustment switch E663 / E664 | 444 |
| 2.22 | Removing and installing massage function button E670 / E671 | 445 |
| 2.23 | Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 .. | 445 |
| 2.24 | Removing and installing control unit for seat functions | 447 |
| 2.25 | Removing and installing seat cushion fan | 448 |
| 3 | Rear seats | 450 |
| 3.1 | Assembly overview - bench seat/individual seats | 450 |
| 3.2 | Assembly overview - head restraint and head restraint guide | 451 |
| 3.3 | Assembly overview - rear seat backrest | 452 |
| 3.4 | Assembly overview - locking mechanism | 455 |

| | | |
|--|--|------------|
| 3.5 | Assembly overview - centre armrest | 456 |
| 3.6 | Assembly overview - backrest remote release mechanism | 457 |
| 3.7 | Removing and installing bench seat/individual seats | 458 |
| 3.8 | Removing and installing head restraint | 459 |
| 3.9 | Removing and installing head restraint guide | 460 |
| 3.10 | Removing and installing rear seat backrest | 463 |
| 3.11 | Removing and installing trim for locking mechanism | 466 |
| 3.12 | Removing and installing locking mechanism for rear seat backrest | 467 |
| 3.13 | Removing and installing lock cylinder | 468 |
| 3.14 | Removing and installing outer bearing sleeve | 469 |
| 3.15 | Removing and installing inner pivot pin | 470 |
| 3.16 | Removing and installing trim for folding backrest (centre) | 470 |
| 3.17 | Removing and installing padding cover for folding backrest (centre) | 471 |
| 3.18 | Removing and installing folding backrest lock trim | 472 |
| 3.19 | Removing and installing centre mount | 473 |
| 3.20 | Removing and installing centre armrest | 473 |
| 3.21 | Removing and installing side padding | 475 |
| 4 | Front seat pneumatic system | 476 |
| 4.1 | Connection diagram - pneumatic system | 476 |
| 4.2 | Assembly overview - pneumatic system | 477 |
| 4.3 | Checking pneumatic system | 478 |
| 4.4 | Severing and connecting pneumatic lines | 484 |
| 4.5 | Servicing pneumatic lines | 485 |
| 4.6 | Removing and installing air cushion for lumbar support | 485 |
| 4.7 | Removing and installing air cushion for backrest bolster adjuster | 487 |
| 4.8 | Removing and installing control unit for multicontour seat J872 / J873 | 488 |
| 4.9 | Removing and installing lumbar support adjustment pump V152 / V153 | 490 |
| 74 - Seat - padding, covers | 491 | |
| 1 | Covers and padding on front seats | 491 |
| 1.1 | Assembly overview - seat pan cover and padding | 491 |
| 1.2 | Assembly overview - backrest cover and padding | 495 |
| 1.3 | Assembly overview - seat heater elements | 500 |
| 1.4 | Removing and installing seat pan cover and padding | 502 |
| 1.5 | Removing and installing backrest cover and padding | 511 |
| 1.6 | Separating seat pan cover and padding | 519 |
| 1.7 | Separating backrest cover and padding | 520 |
| 1.8 | Removing and installing seat heater element | 521 |
| 1.9 | Removing and installing backrest heater element | 524 |
| 2 | Covers and padding on rear seats | 526 |
| 2.1 | Assembly overview - cover and padding | 526 |
| 2.2 | Assembly overview - seat heater elements | 529 |
| 2.3 | Removing and installing cover and padding | 530 |
| 2.4 | Detaching cover from padding | 534 |
| 2.5 | Removing and installing seat heater element | 536 |
| 2.6 | Removing and installing backrest heater element | 537 |