

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the convertible roof	1
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on vehicles with natural gas systems	2
2 Repair instructions	4
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Installation requirements for self-adhesive components	4
2.4 General information on using adhesives	6
2.5 Secure threaded connections	7
2.6 Rules for cleanliness	7
2.7 Identification plates	7
2.8 Use of impact wrenches	8
50 - Body - front	9
1 Lock carrier	9
1.1 Assembly overview - lock carrier	9
1.2 Assembly overview - actuator	11
1.3 Removing and installing lock carrier	13
1.4 Removing and installing bracket for bumper cover	18
1.5 Removing and installing spring element for bracket for bumper cover	19
1.6 Removing and installing actuator	21
2 Wing	22
2.1 Assembly overview - wing	22
2.2 Assembly overview - wing covers	24
2.3 Assembly overview - repair set for wing	26
2.4 Removing and installing wing	27
2.5 Removing and installing wing panel brace	29
2.6 Removing and installing connecting piece and wing panel brace (outside)	32
2.7 Removing and installing front cover for wing	35
2.8 Removing and installing rear cover for wing	36
2.9 Removing and installing closure plate	37
3 Bulkhead	38
3.1 Assembly overview - bulkhead	38
3.2 Assembly overview - plenum chamber cover	38
3.3 Removing and installing plenum chamber bulkhead	39
3.4 Removing and installing plenum chamber cover	41
3.5 Removing and installing cover (side) for plenum chamber cover	42
55 - Bonnet, rear lid	44
1 Bonnet	44
1.1 Assembly overview - bonnet	44
1.2 Assembly overview - insulation and impact guard on bonnet	45
1.3 Assembly overview - Bowden cable	46
1.4 Removing and installing bonnet	48
1.5 Adjusting bonnet	49
1.6 Removing and installing hinges	54
1.7 Resetting hinge	55
1.8 Removing and installing striker	55
1.9 Removing and installing gas strut	56

57 - Front doors, door components, central locking	141
1 Door	141
1.1 Assembly overview - door	141
1.2 Assembly overview - door seals	143
1.3 Removing and installing door	147
1.4 Adjusting door	147
1.5 Removing and installing door arrester	154
1.6 Removing and installing inner door seal	155
1.7 Removing and installing retainer for inner door seal	158
1.8 Removing and installing door seal for roof trim strip	159
1.9 Removing and installing door seal at A-pillar	160
1.10 Removing and installing outer door seal	161
2 Door components	174
2.1 Assembly overview - window regulator	174
2.2 Assembly overview - door handle and door lock	175
2.3 Assembly overview - window guides and window slot seals	177
2.4 Removing and installing window regulator	180
2.5 Removing and installing window regulator motor	182
2.6 Removing and installing door handle	183
2.7 Removing and installing door handle trim	184
2.8 Removing and installing trim strip for door handle	185
2.9 Removing and installing mounting bracket	185
2.10 Removing and installing operating cable for exterior door handle	186
2.11 Removing and installing lock cylinder	187
2.12 Removing and installing housing	188
2.13 Removing and installing door lock	188
2.14 Removing and installing cover for door lock	189
2.15 Removing and installing striker	190
2.16 Removing and installing operating cable for interior door handle	190
2.17 Removing and installing inner door cover	190
2.18 Removing and installing window guide	191
2.19 Removing and installing window guide	192
2.20 Removing and installing inner window slot seal	192
2.21 Removing and installing outer window slot seal	194
3 Central locking system	197
3.1 Overview of fitting locations - central locking system	197
3.2 Removing and installing driver door control unit J386 and front passenger door control unit J387	201
3.3 Removing and installing rear left door control unit J388 and rear right door control unit J389	201
3.4 Removing and installing convenience system central control unit J393	202
3.5 Removing and installing bonnet contact switch F266	203
3.6 Removing and installing tank filler flap locking motor V155	203
58 - Rear doors, door components	205
1 Door	205
1.1 Assembly overview - door	205
1.2 Assembly overview - door seals	209
1.3 Removing and installing door	211
1.4 Adjusting door	211
1.5 Removing and installing door arrester	218
1.6 Removing and installing inner door seal	219
1.7 Removing and installing retainer for inner door seal	220
1.8 Removing and installing outer door seal	222
2 Door components	235

2.27	Removing and installing spring for wind deflector	355
2.28	Emergency opening	356
3	Water drain hoses	357
3.1	Assembly overview - water drain hoses	357
3.2	Cleaning water drain hoses	360
3.3	Removing and installing water drain hoses	361
61	Convertible roof, hardtop, canopy	366
1	Convertible roof	366
1.1	Assembly overview - convertible roof	366
1.2	Assembly overview - convertible roof frame	367
1.3	Assembly overview - main mounting for convertible roof	368
1.4	Assembly overview - convertible roof locking mechanism	369
1.5	Removing and installing convertible roof	371
1.6	Removing and installing retaining plate for convertible roof	373
1.7	Removing and installing convertible roof locking mechanism	373
1.8	Removing and installing convertible roof locking element	374
1.9	Removing and installing mounting with convertible roof lock motor V223	374
1.10	Service position of convertible roof and convertible roof compartment lid	375
1.11	Manual operation	376
2	Convertible roof cover	377
2.1	Assembly overview - convertible roof cover and convertible roof headliner	377
2.2	Assembly overview - tensioning cables and control cables for convertible roof cover	378
2.3	Assembly overview - tensioning cables and control cables for convertible roof headliner	379
2.4	Assembly overview - tensioning and control cable repair kit	380
2.5	Removing and installing convertible roof cover	384
2.6	Removing and installing convertible roof headliner	388
2.7	Removing and installing tensioning cable for convertible roof cover	392
2.8	Removing and installing tensioning cable for rear window operating lever	394
2.9	Procedure for repairing tensioning and control cables	395
3	Attachments	398
3.1	Assembly overview - convertible roof seals	398
3.2	Assembly overview - convertible roof trim	400
3.3	Assembly overview - convertible roof frame attachments	400
3.4	Removing and installing convertible roof seals	401
3.5	Removing and installing convertible roof trim	404
3.6	Removing and installing connecting rod	405
3.7	Removing and installing damper	406
3.8	Removing and installing mounting for interior light (rear)	406
3.9	Removing and installing rear window operating lever	407
4	Hydraulic system	408
4.1	Overview of fitting locations - hydraulic system	408
4.2	Assembly overview - hydraulic system	409
4.3	Assembly overview - hydraulic pump	411
4.4	Removing and installing hydraulic pump	413
4.5	Removing and installing hydraulic pump with hydraulic cylinders	413
4.6	Removing and installing hydraulic pump motor	416
4.7	Removing and installing hydraulic cylinders	418
4.8	Removing and installing hydraulic line	420
4.9	Checking fluid level in hydraulic system	422
4.10	Filling and bleeding hydraulic system	423
5	Electrical and electronic components	426
5.1	Overview of fitting locations - electrical and electronic components	426
5.2	Removing and installing convertible roof actuation control unit J256	430



5.3	Removing and installing convertible roof latch open switch F294 / convertible roof latch closed switch F295	431
5.4	Removing and installing convertible roof stowed switch F171 / convertible roof front switch F202	431
5.5	Removing and installing tensioning strut top switch F408 / tensioning strut stowed switch, left F419	432
5.6	Removing and installing tensioning strut intermediate position switch F518 / tensioning strut stowed switch, right F420	434
5.7	Removing and installing convertible roof box lid open switch F407	436
5.8	Removing and installing rear ultrasonic sensor for passenger compartment monitoring system G981 / G982	437
63	- Bumpers	439
1	Front bumper	440
1.1	Assembly overview - bumper cover	440
1.2	Assembly overview - reflector	467
1.3	Assembly overview - bumper carrier	468
1.4	Removing and installing bumper cover	470
1.5	Adjusting bumper cover	472
1.6	Removing and installing side panel of bumper cover	473
1.7	Removing and installing bumper cover mounting	473
1.8	Removing and installing cover for headlight washer jet	474
1.9	Removing and installing grille trim	474
1.10	Removing and installing centre air intake grille	476
1.11	Removing and installing side air intake grille	481
1.12	Removing and installing side air intake grille - RS 4/RS 5 from product upgrade onwards	484
1.13	Removing and installing trim for side air intake grille	484
1.14	Removing and installing trim for air duct	485
1.15	Removing and installing lower side air intake grille	486
1.16	Removing and installing air duct	486
1.17	Removing and installing front spoiler	490
1.18	Removing and installing lower part of spoiler	491
1.19	Removing and installing spoiler (side)	494
1.20	Removing and installing trim strip	495
1.21	Removing and installing trim strip (centre)	495
1.22	Removing and installing trim strip (side)	495
1.23	Removing and installing underbody guard	496
1.24	Removing and installing closure plate for bumper cover	498
1.25	Removing and installing reflector	500
1.26	Removing and installing lock carrier cover	500
1.27	Removing and installing bumper carrier	502
1.28	Removing and installing moulded foam insert	505
1.29	Removing and installing mounting for moulded foam insert	507
2	Rear bumper	509
2.1	Assembly overview - bumper cover	509
2.2	Assembly overview - bumper cover mounting	538
2.3	Assembly overview - bumper carrier	539
2.4	Removing and installing bumper cover	542
2.5	Removing and installing upper section of bumper cover	544
2.6	Removing and installing lower section of bumper cover	545
2.7	Removing and installing base plate for bumper cover	546
2.8	Removing and installing underbody guard	551
2.9	Removing and installing bumper cover mounting	552
2.10	Removing and installing closure plate	553
2.11	Removing and installing trim strip for bumper cover	554
2.12	Removing and installing bumper cover trim	560
2.13	Removing and installing tailpipe trim	563

2.14	Removing and installing reflector	566
2.15	Removing and installing bumper carrier	571
64	- Glazing	573
1	Repair instructions	573
1.1	Minimum drying times for bonded windows	573
1.2	Repairing windscreen	573
1.3	Tools and materials required for installation and removal	574
1.4	Preparing undamaged windows for installation	578
1.5	Preparing new windows for installation	578
1.6	Preparing body flange for installation	580
1.7	Cleaning off adhesive sealant	580
2	Windscreen	581
2.1	Assembly overview - windscreen	581
2.2	Removing and installing windscreen	584
3	Rear window	591
3.1	Assembly overview - rear window	591
3.2	Removing and installing rear window	594
4	Side windows	612
4.1	Assembly overview - rear side window	612
4.2	Removing and installing rear side window	618
4.3	Adjusting rear side window	629
5	Door windows	636
5.1	Assembly overview - front door window	636
5.2	Assembly overview - rear door window	637
5.3	Removing and installing front door window	640
5.4	Adjusting front door window	642
5.5	Removing and installing rear door window	654
5.6	Adjusting rear door window	657
66	- Exterior equipment	664
1	Radiator grille/front trim	664
1.1	Assembly overview - radiator grille	664
1.2	Removing and installing radiator grille	670
1.3	Preparing new radiator grille for installation	673
1.4	Removing and installing closure plate	674
1.5	Removing and installing number plate holder	676
1.6	Removing and installing mounting bracket for front parking aid sender	680
2	Spoilers	681
2.1	Assembly overview - spoilers	681
2.2	Removing and installing spoiler	683
2.3	Removing and installing spoiler (side)	691
3	Strips/trim panels/extensions	694
3.1	Assembly overview - trim strip and covers	694
3.2	Assembly overview - sill panel trim	700
3.3	Assembly overview - side member trim	702
3.4	Assembly overview - water deflector strip	706
3.5	Assembly overview - trim panel for A-pillar	707
3.6	Assembly overview - trim panel for B-pillar	708
3.7	Assembly overview - trim panel for C-pillar	710
3.8	Assembly overview - wheel arch covers	711
3.9	Removing and installing trim strip	712
3.10	Removing and installing wing trim panel	721
3.11	Removing and installing side panel trim	722
3.12	Removing and installing cover	723



3.13	Adjustment dimensions for covers	726
3.14	Removing and installing sill panel trim	727
3.15	Removing and installing side member trim	729
3.16	Removing and installing bracket for side member trim	738
3.17	Removing and installing mounting	738
3.18	Removing and installing fastening strip for side member trim	739
3.19	Removing and installing trim strip for side member trim	741
3.20	Removing and installing water deflector strip	743
3.21	Removing and installing trim panel for A-pillar	744
3.22	Removing and installing trim panel for B-pillar on door	745
3.23	Removing and installing trim panel for B-pillar	746
3.24	Removing and installing trim panel for C-pillar on door	747
3.25	Removing and installing wheel arch covers	748
4	Noise insulation	755
4.1	Assembly overview - noise insulation	755
4.2	Removing and installing noise insulation	759
5	Underbody cladding	761
5.1	Assembly overview - underbody cladding	761
5.2	Assembly overview - underbody struts	764
5.3	Removing and installing front underbody cladding	768
5.4	Removing and installing underbody cladding for tunnel	768
5.5	Removing and installing centre underbody cladding	768
5.6	Removing and installing rear underbody cladding	769
5.7	Removing and installing underbody cladding for spare wheel	771
5.8	Removing and installing side underbody cladding	771
5.9	Removing and installing tunnel cross-piece	772
5.10	Removing and installing diagonal struts	772
5.11	Removing and installing underbody guard	775
6	Roof strips/roof rails	776
6.1	Assembly overview - roof rail	776
6.2	Removing and installing roof rail	777
6.3	Removing and installing compensation element	778
7	Exterior mirrors	780
7.1	Assembly overview - exterior mirror	780
7.2	Removing and installing exterior mirror	782
7.3	Removing and installing mirror glass	783
7.4	Removing and installing mirror adjustment unit	785
7.5	Removing and installing mirror cover	785
7.6	Removing and installing mirror trim	785
8	Wheel housing liners	787
8.1	Assembly overview - front wheel housing liner	787
8.2	Assembly overview - rear wheel housing liner	790
8.3	Removing and installing front wheel housing liner	791
8.4	Removing and installing wheel spoiler (front)	792
8.5	Removing and installing drive shaft cover	793
8.6	Removing and installing rear wheel housing liner	793
8.7	Removing and installing spoiler for luggage compartment recess	794
9	Lettering and badges	795
9.1	Assembly overview - lettering and badges	795
9.2	Dimensions - lettering and badges at rear	796
9.3	Dimensions - lettering and badges on sides	801
9.4	General notes on renewing lettering and badges	803
9.5	Renewing lettering and badges on side	804
9.6	Removing and installing lettering and badges for radiator grille	806
10	Towing bracket	813

10.1	Assembly overview - towing bracket	813
10.2	Removing and installing trailer detector control unit J345	814
10.3	Removing and installing trailer articulation angle sensor G820	814
11	Heat shields	816
11.1	Overview of fitting locations - heat shields	816
11.2	Assembly overview - heat shields	818
11.3	Removing and installing heat shield on bonnet	822
11.4	Removing and installing heat shield (front) for longitudinal member	823
11.5	Removing and installing heat shield (rear) for longitudinal member	824
11.6	Removing and installing heat shield for plenum chamber bulkhead	824
11.7	Removing and installing heat shield (top front) for tunnel	825
11.8	Removing and installing heat shield for tunnel (gearbox)	827
11.9	Removing and installing heat shield for propshaft	828
11.10	Removing and installing heat shield for exhaust system (centre)	828
11.11	Removing and installing heat shield for luggage compartment recess	830
11.12	Removing and installing heat shield for rear silencer	830