

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety briefing/employee qualification</b> .....	<b>1</b>
1.1 Qualification .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety information .....	2
2.2 Work that requires high-voltage system to be de-energised .....	4
2.3 Safety precautions when working on the high-voltage system .....	5
2.4 Safety precautions when working in the vicinity of high-voltage components .....	6
2.5 Safety precautions when working on the cooling system .....	6
2.6 Safety precautions when using testers and measuring instruments during a road test .....	6
<b>3 Repair instructions</b> .....	<b>8</b>
3.1 Information on handling fine dust, aluminium dust and steel dust .....	8
3.2 Routing and attachment of pipes, hoses and wiring .....	9
3.3 Contact corrosion .....	9
3.4 Bonding surfaces for self-adhesive components .....	9
3.5 Secure threaded connections .....	10
3.6 Identification plates .....	10
3.7 Impact wrenches .....	10
3.8 Important notes .....	11
3.9 Moulded foam insert .....	11
3.10 Repairing joints with flow-drill screws .....	12
3.11 Dent removal .....	14
3.12 Surface treatment .....	14
3.13 Matching the surface contour .....	15
<b>4 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b> .....	<b>16</b>
<b>5 Vehicle identification data</b> .....	<b>18</b>
5.1 Type plate and vehicle identification number .....	18
5.2 Vehicle data sticker .....	18
<b>6 Galvanised body panels, high-strength and extra-high-strength steel</b> .....	<b>19</b>
6.1 Ultra-high-strength hot-formed steel .....	19
6.2 Aluminium panels .....	20
6.3 Contact corrosion .....	22
6.4 Surface treatment .....	23
6.5 Moulded foam inserts .....	23
6.6 Matching the surface contour .....	26
6.7 Laser welding .....	26
6.8 Repairing thread for seat belt anchorage .....	27
<b>7 Overview of riveting attachments (pairs of tools)</b> .....	<b>28</b>
<b>8 Overview of rivets and tools</b> .....	<b>29</b>
8.1 Overview of rivets used for repair measures .....	33
8.2 Thread repair for M6 pop rivet nut .....	34
<b>9 Body dimensions</b> .....	<b>35</b>
<b>10 Body - front (Saloon and Avant identical)</b> .....	<b>36</b>
10.1 Body - centre (Saloon and Avant identical) .....	37
10.2 Floor group - front (Saloon and Avant identical) .....	39
10.3 Floor group - rear (Saloon and Avant identical) .....	40
10.4 Body - rear (Saloon) .....	41
10.5 Body - rear (Avant) .....	42
<b>11 Bonded joints</b> .....	<b>44</b>
11.1 Bonded joints .....	44

11.2	Spot-welded bonded joints	44
11.3	Inspecting and repairing bonded joints	44
11.4	Repair methods for replacing body parts	44
<b>12</b>	<b>Processing body structure adhesive D 180 004 M2</b>	<b>46</b>
12.1	Preparing bonding surfaces	47
<b>13</b>	<b>Using edge milling unit -VAS 882 005-</b>	<b>60</b>
13.1	General information	60
13.2	Assembling unit/changing milling tool	63
13.3	Separating flanged edges	73
13.4	Separating panels at corners and along surfaces	79
13.5	Separating outer edges	82
13.6	Renewing roof	85
13.7	Separating laser weld seams using round head milling unit	87
13.8	Aluminium panels	89
<b>14</b>	<b>Tools</b>	<b>92</b>
14.1	Straightening jig	95
<b>50 - Body - front</b>		<b>96</b>
<b>1</b>	<b>Safety information</b>	<b>96</b>
<b>2</b>	<b>Renewing impact damper mounting</b>	<b>97</b>
2.1	Tools	97
2.2	Procedure	97
<b>3</b>	<b>Renewing upper wheel housing longitudinal member - part section</b>	<b>101</b>
3.1	Tools	101
3.2	Procedure	102
<b>4</b>	<b>Renewing front longitudinal member - part section</b>	<b>108</b>
4.1	Tools	108
4.2	Procedure	109
<b>5</b>	<b>Renewing upper wheel housing longitudinal member</b>	<b>113</b>
5.1	Tools	113
5.2	Procedure	114
<b>6</b>	<b>Renewing front longitudinal member with suspension turret</b>	<b>123</b>
6.1	Tools	123
6.2	Procedure	124
6.3	Renewing suspension turret support	131
<b>7</b>	<b>Renewing front longitudinal member</b>	<b>137</b>
7.1	Tools	137
7.2	Procedure	138
<b>8</b>	<b>Renewing upper footwell cross member</b>	<b>146</b>
8.1	Tools	146
8.2	Procedure	147
<b>9</b>	<b>Repairing threads for attachment of subframe</b>	<b>151</b>
9.1	Tools	151
<b>51 - Body - centre</b>		<b>157</b>
<b>1</b>	<b>Safety information</b>	<b>157</b>
<b>2</b>	<b>Permitted separating cuts on complete side panel</b>	<b>158</b>
<b>3</b>	<b>Renewing roof - Saloon</b>	<b>160</b>
3.1	Tools	160
3.2	Procedure	161
3.3	Vehicles with sliding/tilting sunroof	179
3.4	Tools	180
3.5	Procedure	181

<b>4</b>	<b>Vehicles with sliding/tilting sunroof (Avant)</b> .....	<b>194</b>
4.1	Tools .....	194
4.2	Procedure .....	195
<b>5</b>	<b>Renewing roof - Avant</b> .....	<b>205</b>
5.1	Tools .....	205
5.2	Procedure .....	211
<b>6</b>	<b>Renewing front roof cross member</b> .....	<b>226</b>
6.1	Tools .....	226
6.2	Procedure .....	226
<b>7</b>	<b>Renewing roof side member - Saloon</b> .....	<b>230</b>
7.1	Tools .....	230
7.2	Procedure .....	230
<b>8</b>	<b>Renewing rear roof cross member - Saloon</b> .....	<b>237</b>
8.1	Tools .....	237
8.2	Procedure .....	237
<b>9</b>	<b>Renewing rear roof cross member - Avant</b> .....	<b>241</b>
9.1	Tools .....	241
<b>10</b>	<b>Renewing roof side member - Avant</b> .....	<b>248</b>
10.1	Tools .....	248
10.2	Procedure .....	248
<b>11</b>	<b>Renewing outer A-pillar</b> .....	<b>255</b>
11.1	Tools .....	255
11.2	Procedure .....	256
<b>12</b>	<b>Renewing inner A-pillar</b> .....	<b>260</b>
12.1	Tools .....	260
12.2	Procedure .....	260
<b>13</b>	<b>Renewing upper inner A-pillar - partial renewal</b> .....	<b>266</b>
13.1	Tools .....	266
13.2	Procedure .....	266
<b>14</b>	<b>Renewing outer B-pillar</b> .....	<b>276</b>
14.1	Tools .....	276
14.2	Procedure .....	277
<b>15</b>	<b>Renewing inner B-pillar - partial renewal</b> .....	<b>282</b>
15.1	Tools .....	282
15.2	Procedure .....	283
<b>16</b>	<b>Renewing front seat cross member</b> .....	<b>298</b>
16.1	Tools .....	298
16.2	Procedure .....	299
<b>17</b>	<b>Renewing rear seat cross member</b> .....	<b>303</b>
17.1	Tools .....	303
17.2	Procedure .....	304
<b>18</b>	<b>Renewing outer side member</b> .....	<b>309</b>
18.1	Tools .....	309
18.2	Procedure .....	310
<b>19</b>	<b>Renewing inner side member</b> .....	<b>315</b>
19.1	Tools .....	315
19.2	Procedure .....	315
<b>20</b>	<b>Renewing centre tunnel</b> .....	<b>321</b>
20.1	Tools .....	321
20.2	Procedure .....	321
<b>53 - Body - rear</b> .....	<b>328</b>	
<b>1</b>	<b>Safety information</b> .....	<b>328</b>



<b>2</b>	<b>Permitted separating cuts on complete side panel</b>	<b>329</b>
<b>3</b>	<b>Renewing cross panel - Saloon</b>	<b>331</b>
3.1	Tools	331
3.2	Procedure	332
<b>4</b>	<b>Renewing cross panel - Avant</b>	<b>336</b>
4.1	Tools	337
4.2	Procedure	337
<b>5</b>	<b>Renewing lock carrier - Saloon</b>	<b>342</b>
5.1	Tools	342
5.2	Procedure	342
<b>6</b>	<b>Renewing lock carrier - Avant</b>	<b>347</b>
6.1	Tools	348
6.2	Procedure	348
<b>7</b>	<b>Renewing tail light mounting - Saloon</b>	<b>353</b>
7.1	Tools	353
7.2	Procedure	353
<b>8</b>	<b>Renewing tail light mounting - Avant</b>	<b>358</b>
8.1	Tools	359
8.2	Procedure	359
<b>9</b>	<b>Renewing rear longitudinal member</b>	<b>364</b>
9.1	Tools	365
9.2	Procedure	365
<b>10</b>	<b>Renewing side panel - Saloon</b>	<b>374</b>
10.1	Tools	375
10.2	Procedure	375
<b>11</b>	<b>Renewing side panel - Avant</b>	<b>384</b>
11.1	Tools	385
11.2	Procedure	385
<b>12</b>	<b>Renewing C-pillar reinforcement (Saloon and Avant identical)</b>	<b>393</b>
12.1	Tools	394
12.2	Procedure	394
<b>13</b>	<b>Renewing rear wheel housing</b>	<b>399</b>
13.1	Tools	400
13.2	Procedure	400
<b>14</b>	<b>Renewing rear inner wheel housing</b>	<b>407</b>
14.1	Tools	408
14.2	Procedure	408
<b>15</b>	<b>Renewing luggage compartment floor (only for vehicles with natural gas technology)</b>	<b>415</b>
15.1	Tools	416
15.2	Procedure	416
<b>16</b>	<b>Renewing spare wheel well (Saloon and Avant identical)</b>	<b>421</b>
16.1	Tools	422
16.2	Procedure	422