

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number/engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the subframe	3
2.5 Safety precautions when working on the ignition system	3
2.6 Safety precautions when working on the cooling system	4
2.7 Safety precautions when working on the exhaust system	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 Rules for cleanliness	5
3.2 Foreign material in engine	5
3.3 Cleaning engine	5
3.4 Contact corrosion	6
3.5 Routing and attachment of pipes, hoses and wiring	6
3.6 Installing radiators and condensers	6
3.7 Nuts, bolts	6
3.8 Identification plates	7
3.9 Use of impact wrenches	7
3.10 Checking vacuum system	7
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing and installing engine</b>	<b>9</b>
1.1 Removing engine	9
1.2 Securing engine to engine and gearbox support	22
1.3 Installing engine	24
<b>2 Assembly mountings</b>	<b>31</b>
2.1 Assembly overview - assembly mountings	31
2.2 Supporting engine in installation position	33
2.3 Removing and installing engine mountings	34
2.4 Removing and installing gearbox mounting	36
<b>3 Engine cover panel</b>	<b>38</b>
3.1 Removing and installing engine cover panel	38
<b>13 - Crankshaft group</b>	<b>39</b>
<b>1 Cylinder block (pulley end)</b>	<b>39</b>
1.1 Assembly overview - poly V-belt drive	39
1.2 Assembly overview - sealing flange (pulley end)	41
1.3 Removing and installing poly V-belt	43
1.4 Removing and installing poly V-belt tensioner	44
1.5 Removing and installing engine support	45
1.6 Removing and installing vibration damper	47
1.7 Renewing crankshaft oil seal (pulley end)	50
1.8 Removing and installing sealing flange (pulley end)	52
<b>2 Cylinder block (gearbox end)</b>	<b>55</b>
2.1 Assembly overview - cylinder block (gearbox end)	55
2.2 Removing and installing drive plate	57
2.3 Removing and installing sealing flange (gearbox end)	58
2.4 Renewing needle bearing in drive plate	70
<b>3 Crankshaft</b>	<b>72</b>

<b>4</b>	<b>Pistons and conrods</b>	<b>73</b>
4.1	Assembly overview - pistons and conrods	73
4.2	Removing and installing pistons	77
4.3	Removing and installing oil spray jets	79
4.4	Checking pistons and cylinder bores	81
4.5	Separating parts of new conrod	83
4.6	Checking radial clearance of conrod bearings	84
<b>15</b>	<b>- Cylinder head, valve gear</b>	<b>85</b>
1	<b>Toothed belt drive</b>	<b>85</b>
1.1	Assembly overview - toothed belt guard	85
1.2	Assembly overview - toothed belt	86
1.3	Removing and installing toothed belt guard	88
1.4	Detaching toothed belt from camshaft	91
1.5	Removing and installing toothed belt	105
2	<b>Cylinder head</b>	<b>121</b>
2.1	Assembly overview - cylinder head	121
2.2	Assembly overview - camshaft housing	124
2.3	Removing and installing cylinder head	127
2.4	Removing and installing camshaft housing	130
2.5	Checking compression	135
3	<b>Valve gear</b>	<b>138</b>
3.1	Assembly overview - valve gear	138
3.2	Measuring axial clearance of camshaft	140
3.3	Removing and installing camshaft oil seal	141
3.4	Removing and installing camshaft control valve 1 N205	148
3.5	Removing and installing valve stem oil seals	149
4	<b>Inlet and exhaust valves</b>	<b>159</b>
4.1	Checking valve guides	159
4.2	Checking valves	160
4.3	Valve dimensions	160
<b>17</b>	<b>- Lubrication</b>	<b>161</b>
1	<b>Sump/oil pump</b>	<b>161</b>
1.1	Assembly overview - sump/oil pump	161
1.2	Engine oil	164
1.3	Removing and installing lower part of sump	164
1.4	Removing and installing upper part of sump	167
1.5	Removing and installing oil pump	171
1.6	Removing and installing oil level and oil temperature sender G266	172
2	<b>Engine oil cooler</b>	<b>174</b>
2.1	Assembly overview - engine oil cooler	174
2.2	Removing and installing engine oil cooler	174
3	<b>Crankcase breather</b>	<b>177</b>
3.1	Assembly overview - crankcase breather system	177
3.2	Removing and installing oil separator	178
4	<b>Oil filter/oil pressure switches</b>	<b>181</b>
4.1	Assembly overview - oil filter/oil pressure switch	181
4.2	Removing and installing oil pressure switch F22	183
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	183
4.4	Checking oil pressure	184
4.5	Removing and installing valve for oil pressure control N428	185
<b>19</b>	<b>- Cooling</b>	<b>187</b>
1	<b>Cooling system/coolant</b>	<b>187</b>



1.1	Connection diagram - coolant hoses .....	187
1.2	Checking cooling system for leaks .....	189
1.3	Draining and filling cooling system .....	193
<b>2</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>201</b>
2.1	Assembly overview - coolant pump/thermostat .....	201
2.2	Assembly overview - electric coolant pump .....	204
2.3	Assembly overview - coolant temperature senders .....	205
2.4	Removing and installing electric coolant pump .....	206
2.5	Removing guard of toothed belt for coolant pump .....	210
2.6	Removing and installing coolant pump .....	211
2.7	Removing and installing thermostat .....	215
2.8	Removing and installing toothed belt pulley for coolant pump .....	218
2.9	Removing and installing coolant temperature sender G62 .....	219
2.10	Removing and installing radiator outlet coolant temperature sender G83 .....	222
<b>3</b>	<b>Coolant pipes .....</b>	<b>223</b>
3.1	Assembly overview - coolant pipes .....	223
3.2	Removing and installing coolant pipes .....	223
<b>4</b>	<b>Radiators/radiator fan .....</b>	<b>225</b>
4.1	Exploded view - radiators/radiator fan .....	225
4.2	Removing and installing radiator .....	228
4.3	Removing and installing water radiator for charge air cooling circuit .....	233
4.4	Removing and installing radiator cowl .....	235
4.5	Removing and installing radiator fan V7 .....	237
<b>21 - Turbocharging/supercharging .....</b>	<b>238</b>	
<b>1</b>	<b>Turbocharger .....</b>	<b>238</b>
1.1	Exploded view - turbocharger .....	238
1.2	Removing and installing turbocharger .....	242
1.3	Removing and installing charge pressure positioner V465 .....	247
<b>2</b>	<b>Charge air system .....</b>	<b>249</b>
2.1	Assembly overview - charge air system .....	249
2.2	Assembly overview - hose connections for charge air system .....	251
2.3	Removing and installing charge pressure sender G31 .....	251
2.4	Removing and installing charge air cooler .....	252
2.5	Checking charge air system for leaks .....	254
<b>24 - Mixture preparation - injection .....</b>	<b>258</b>	
<b>1</b>	<b>Injection system .....</b>	<b>258</b>
1.1	Overview of fitting locations - injection system .....	258
<b>2</b>	<b>Air filter .....</b>	<b>266</b>
2.1	Assembly overview - air filter housing .....	266
2.2	Removing and installing air filter housing .....	268
<b>3</b>	<b>Intake manifold .....</b>	<b>270</b>
3.1	Exploded view - intake manifold .....	270
3.2	Removing and installing intake manifold .....	273
3.3	Removing and installing throttle valve module J338 .....	275
3.4	Cleaning throttle valve module .....	276
<b>4</b>	<b>Injectors .....</b>	<b>278</b>
4.1	Assembly overview - fuel rail with injectors .....	278
4.2	Removing and installing fuel rail .....	280
4.3	Removing and installing injectors .....	281
4.4	Cleaning injectors .....	286
<b>5</b>	<b>Senders and sensors .....</b>	<b>288</b>
5.1	Removing and installing intake manifold pressure sender G71 .....	288

5.2	Removing and installing fuel pressure sender G247 .....	288
5.3	Checking fuel pressure sender G247 .....	289
<b>6</b>	<b>High-pressure pump</b> .....	<b>292</b>
6.1	Assembly overview - high-pressure pump .....	292
6.2	Removing and installing high-pressure pump .....	293
6.3	Removing and installing high-pressure pipe .....	295
<b>7</b>	<b>Lambda probe</b> .....	<b>297</b>
7.1	Assembly overview - Lambda probe .....	297
7.2	Removing and installing Lambda probe .....	297
<b>8</b>	<b>Engine control unit</b> .....	<b>300</b>
8.1	Assembly overview - engine control unit .....	300
8.2	Removing and installing engine/motor control unit J623 .....	300
<b>26 - Exhaust system</b>	.....	<b>302</b>
<b>1</b>	<b>Exhaust pipes/silencers</b> .....	<b>302</b>
1.1	Exploded view - silencers .....	302
1.2	Separating exhaust pipes/silencers .....	304
1.3	Removing and installing front silencers .....	306
1.4	Removing and installing silencers .....	307
1.5	Stress-free alignment of exhaust system .....	308
1.6	Checking exhaust system for leaks .....	309
<b>2</b>	<b>Emission control system</b> .....	<b>310</b>
2.1	Assembly overview - emission control system .....	310
2.2	Removing and installing catalytic converter .....	312
<b>28 - Ignition system</b>	.....	<b>316</b>
<b>1</b>	<b>Ignition system</b> .....	<b>316</b>
1.1	Assembly overview - ignition system .....	316
1.2	Removing and installing ignition coils with output stages .....	318
1.3	Removing and installing knock sensor 1 G61 .....	322
1.4	Removing and installing Hall senders .....	322
1.5	Removing and installing engine speed sender G28 .....	324