

## Contents

<b>00 - Technical data</b>	<b>1</b>
1     Identification	1
2     Safety information	2
3     Repair instructions	3
<b>10 - Removing and installing engine</b>	<b>4</b>
1     Removing and installing engine	4
1.1    Removing engine	4
1.2    Securing engine to engine and gearbox support	44
1.3    Installing engine	44
2     Assembly mountings	48
2.1    Assembly overview - assembly mountings	48
2.2    Supporting engine in installation position	52
2.3    Removing and installing engine mountings	54
2.4    Removing and installing gearbox mounting	57
3     Engine cover panel	58
<b>13 - Crankshaft group</b>	<b>59</b>
1     Cylinder block (pulley end)	59
1.1    Assembly overview - cylinder block (pulley end)	59
1.2    Removing and installing poly V-belt	59
1.3    Removing and installing poly V-belt tensioner	59
1.4    Removing and installing vibration damper	59
1.5    Removing and installing bracket for ancillaries	59
1.6    Removing and installing engine support	60
2     Cylinder block (gearbox end)	63
3     Crankshaft	64
4     Balance shaft	65
5     Pistons and conrods	66
<b>15 - Cylinder head, valve gear</b>	<b>67</b>
1     Timing chain cover	67
1.1    Assembly overview - timing chain cover	67
1.2    Removing and installing timing chain cover	67
2     Chain drive	68
3     Cylinder head	69
3.1    Assembly overview - cylinder head	69
3.2    Removing and installing cylinder head	70
3.3    Checking compression	77
4     Valve gear	78
4.1    Assembly overview - valve gear	78
4.2    Removing and installing camshaft	78
4.3    Installing ball for slider	85
4.4    Removing and installing cam adjustment actuators	85
4.5    Removing and installing camshaft control valve 1 N205	85
4.6    Removing and installing valve stem oil seals	86
5     Inlet and exhaust valves	87
<b>17 - Lubrication</b>	<b>88</b>
1     Sump/oil pump	88
1.1    Assembly overview - sump/oil pump	88



1.2	Engine oil .....	88
1.3	Removing and installing lower part of sump .....	88
1.4	Removing and installing oil pump .....	90
1.5	Removing and installing upper part of sump .....	90
1.6	Removing and installing oil level and oil temperature sender G266 .....	90
2	<b>Engine oil cooler .....</b>	<b>91</b>
3	<b>Crankcase breather .....</b>	<b>92</b>
4	<b>Oil filter/oil pressure switches .....</b>	<b>93</b>
<b>19 - Cooling .....</b>		<b>94</b>
1	<b>Cooling system/coolant .....</b>	<b>94</b>
1.1	Connection diagram - coolant hoses .....	94
1.2	Checking cooling system for leaks .....	97
1.3	Draining and filling cooling system .....	97
2	<b>Coolant pump/thermostat assembly .....</b>	<b>103</b>
2.1	Assembly overview - coolant pump/thermostat .....	103
2.2	Assembly overview - electric coolant pump .....	103
2.3	Assembly overview - coolant temperature senders .....	104
2.4	Assembly overview - coolant valves .....	105
2.5	Removing and installing electric coolant pump .....	106
2.6	Removing and installing coolant pump .....	110
2.7	Removing and installing toothed belt for coolant pump .....	111
2.8	Removing and installing actuator for engine temperature regulation N493 .....	112
2.9	Removing and installing coolant temperature sender G62 .....	113
2.10	Removing and installing radiator outlet coolant temperature sender G83 .....	115
2.11	Removing and installing coolant valves .....	116
3	<b>Coolant pipes .....</b>	<b>118</b>
3.1	Assembly overview - coolant pipes .....	118
3.2	Removing and installing coolant pipes .....	120
3.3	Removing and installing coolant pipes for gearbox .....	126
4	<b>Radiator/radiator fan .....</b>	<b>129</b>
4.1	Assembly overview - radiator/radiator fan .....	129
4.2	Removing and installing radiator .....	132
4.3	Removing and installing radiator cowl .....	137
4.4	Removing and installing radiator fan V7 .....	140
<b>21 - Turbocharging/supercharging .....</b>		<b>141</b>
1	<b>Turbocharger .....</b>	<b>141</b>
1.1	Assembly overview - turbocharger .....	141
1.2	Removing and installing turbocharger .....	141
2	<b>Charge air system .....</b>	<b>145</b>
2.1	Assembly overview - charge air system .....	145
2.2	Assembly overview - hose connections for charge air system .....	146
2.3	Removing and installing charge air cooler .....	146
2.4	Removing and installing charge pressure sender G31 .....	147
2.5	Checking charge air system for leaks .....	147
<b>24 - Mixture preparation - injection .....</b>		<b>151</b>
1	<b>Injection system .....</b>	<b>151</b>
1.1	Overview of fitting locations - injection system .....	151
2	<b>Air filter .....</b>	<b>163</b>
2.1	Assembly overview - air filter housing .....	163
2.2	Removing and installing air filter housing .....	165
3	<b>Intake manifold .....</b>	<b>168</b>

3.1	Assembly overview - intake manifold .....	168
3.2	Removing and installing intake manifold .....	168
3.3	Removing and installing throttle valve module GX3 .....	182
3.4	Cleaning throttle valve module GX3 .....	182
3.5	Checking intake manifold change-over function .....	182
<b>4</b>	<b>Injectors .....</b>	<b>183</b>
4.1	Assembly overview - fuel rail with injectors .....	183
4.2	Removing and installing fuel rail .....	183
4.3	Removing and installing injectors .....	185
4.4	Cleaning injectors .....	185
<b>5</b>	<b>Senders and sensors .....</b>	<b>186</b>
5.1	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71 .....	186
5.2	Removing and installing fuel pressure sender G247 .....	186
5.3	Checking fuel pressure sender G247 .....	187
5.4	Removing and installing fuel pressure sender for low pressure G410 .....	187
<b>6</b>	<b>High-pressure pump .....</b>	<b>188</b>
6.1	Assembly overview - high-pressure pump .....	188
6.2	Removing and installing high-pressure pump .....	188
<b>7</b>	<b>Lambda probe .....</b>	<b>190</b>
<b>8</b>	<b>Engine control unit .....</b>	<b>191</b>
8.1	Assembly overview - engine control unit .....	191
8.2	Removing and installing engine control unit J623 .....	191
<b>26 - Exhaust system .....</b>	<b>193</b>	
<b>1</b>	<b>Exhaust pipes/silencers .....</b>	<b>193</b>
1.1	Assembly overview - silencers .....	193
1.2	Separating exhaust pipes/silencers .....	198
1.3	Removing and installing front silencers .....	199
1.4	Removing and installing silencers .....	202
1.5	Stress-free alignment of exhaust system .....	204
1.6	Checking exhaust system for leaks .....	205
<b>2</b>	<b>Emission control system .....</b>	<b>206</b>
2.1	Assembly overview - emission control system .....	206
2.2	Removing and installing catalytic converter .....	206
2.3	Removing and installing particulate filter .....	209
<b>3</b>	<b>Exhaust gas temperature regulation .....</b>	<b>212</b>
3.1	Assembly overview - exhaust gas temperature regulation .....	212
3.2	Removing and installing parts of exhaust gas temperature regulation .....	213
<b>28 - Ignition system .....</b>	<b>218</b>	
<b>1</b>	<b>Ignition system .....</b>	<b>218</b>