

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
1.1 Engine number/engine data .....	1
<b>2 Safety information</b> .....	<b>2</b>
2.1 Safety precautions when working on the fuel supply system .....	2
2.2 Safety precautions when working on vehicles with start/stop system .....	2
2.3 Safety precautions when using testers and measuring instruments during a road test .....	3
2.4 Safety precautions when working on the cooling system .....	3
2.5 Safety precautions when working on the exhaust system .....	3
2.6 Safety precautions when working on the ignition system .....	4
<b>3 Repair instructions</b> .....	<b>5</b>
3.1 Identification plates .....	5
3.2 Use of impact wrenches .....	5
3.3 Working on the subframe .....	6
3.4 Rules for cleanliness .....	7
3.5 Performing adaptations after renewing a component .....	7
3.6 Foreign material in engine .....	8
3.7 Cleaning engine .....	8
3.8 Contact corrosion .....	8
3.9 Routing and attachment of pipes, hoses and wiring .....	9
3.10 Installing radiators and condensers .....	9
3.11 Checking vacuum system .....	9
3.12 Nuts, bolts .....	10
<b>10 - Removing and installing engine</b> .....	<b>11</b>
<b>1 Removing and installing engine</b> .....	<b>11</b>
1.1 Removing engine .....	11
1.2 Separating engine and gearbox .....	38
1.3 Removing engine from scissor-type assembly platform .....	48
1.4 Securing engine to engine and gearbox support .....	49
1.5 Installing engine .....	50
<b>2 Assembly mountings</b> .....	<b>54</b>
2.1 Assembly overview - assembly mountings .....	54
2.2 Supporting engine in installation position .....	59
2.3 Removing and installing engine mountings .....	61
2.4 Removing and installing gearbox mountings .....	66
<b>3 Engine cover panel</b> .....	<b>67</b>
3.1 Removing and installing engine cover panel .....	67
<b>13 - Crankshaft group</b> .....	<b>68</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>68</b>
1.1 Assembly overview - cylinder block (pulley end) .....	68
1.2 Removing and installing poly V-belt .....	71
1.3 Removing and installing poly V-belt tensioner .....	72
1.4 Removing and installing vibration damper .....	74
1.5 Removing and installing bracket for ancillaries .....	87
1.6 Removing and installing engine support .....	90
<b>2 Cylinder block (gearbox end)</b> .....	<b>93</b>
2.1 Assembly overview - cylinder block (gearbox end) .....	93
2.2 Removing and installing drive plate .....	95
2.3 Removing and installing sealing flange (gearbox end) .....	96
2.4 Renewing needle bearing in drive plate .....	99



<b>3</b>	<b>Crankshaft</b> .....	<b>101</b>
3.1	Assembly overview - crankshaft .....	101
3.2	Crankshaft dimensions .....	104
3.3	Allocation of main bearing shells .....	104
3.4	Measuring axial clearance of crankshaft .....	105
3.5	Measuring radial clearance of crankshaft .....	106
3.6	Removing and installing crankshaft .....	106
3.7	Removing and installing sender wheel .....	108
<b>4</b>	<b>Balance shaft</b> .....	<b>109</b>
4.1	Assembly overview - balance shaft .....	109
4.2	Removing and installing balance shaft .....	111
4.3	Renewing oil seal for balance shaft (inlet side) .....	114
<b>5</b>	<b>Pistons and conrods</b> .....	<b>117</b>
5.1	Assembly overview - pistons and conrods .....	117
5.2	Removing and installing pistons .....	121
5.3	Removing and installing oil spray jets .....	122
5.4	Checking pistons and cylinder bores .....	125
5.5	Separating parts of new conrod .....	126
5.6	Checking radial clearance of conrod bearings .....	126
<b>15</b>	<b>Cylinder head, valve gear</b> .....	<b>128</b>
<b>1</b>	<b>Timing chain cover</b> .....	<b>128</b>
1.1	Assembly overview - timing chain cover .....	128
1.2	Removing and installing timing chain cover .....	131
1.3	Renewing oil seal for vibration damper .....	134
<b>2</b>	<b>Chain drive</b> .....	<b>137</b>
2.1	Assembly overview - camshaft timing chains .....	137
2.2	Assembly overview - drive chain for balance shaft .....	139
2.3	Removing and installing bearing saddle .....	141
2.4	Removing and installing camshaft timing chain .....	145
2.5	Checking chain elongation .....	154
2.6	Removing and installing drive chain for balance shaft .....	155
2.7	Checking valve timing .....	158
<b>3</b>	<b>Cylinder head</b> .....	<b>162</b>
3.1	Assembly overview - cylinder head .....	162
3.2	Removing and installing cylinder head .....	166
3.3	Checking compression .....	173
<b>4</b>	<b>Valve gear</b> .....	<b>176</b>
4.1	Assembly overview - valve gear .....	176
4.2	Removing and installing camshaft .....	180
4.3	Installing ball for slider .....	189
4.4	Removing and installing cam adjustment actuators .....	190
4.5	Removing and installing camshaft control valves N205 / N318 .....	191
4.6	Removing and installing valve stem oil seals .....	192
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>202</b>
5.1	Checking valve guides .....	202
5.2	Checking valves .....	203
5.3	Valve dimensions .....	203
<b>17</b>	<b>Lubrication</b> .....	<b>204</b>
<b>1</b>	<b>Sump/oil pump</b> .....	<b>204</b>
1.1	Assembly overview - sump/oil pump .....	204
1.2	Engine oil .....	208
1.3	Removing and installing lower part of sump .....	208
1.4	Removing and installing oil pump .....	210

1.5	Removing and installing upper part of sump .....	211
1.6	Removing and installing oil level and oil temperature sender G266 .....	215
<b>2</b>	<b>Engine oil cooler</b> .....	<b>216</b>
2.1	Assembly overview - engine oil cooler .....	216
2.2	Removing and installing engine oil cooler .....	216
2.3	Removing and installing mechanical switching valve .....	217
<b>3</b>	<b>Crankcase breather</b> .....	<b>218</b>
3.1	Assembly overview - crankcase breather system .....	218
3.2	Removing and installing oil separator .....	219
3.3	Removing and installing tank breather pressure sensor 1 G950 .....	220
<b>4</b>	<b>Oil filter/oil pressure switches</b> .....	<b>221</b>
4.1	Assembly overview - oil filter .....	221
4.2	Assembly overview - oil pressure switches/oil pressure control .....	222
4.3	Removing and installing oil pressure switch F22 .....	224
4.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	224
4.5	Removing and installing stage 3 oil pressure switch F447 .....	224
4.6	Removing and installing valve for oil pressure control N428 .....	226
4.7	Removing and installing piston cooling jet control valve N522 .....	227
4.8	Checking oil pressure .....	227
<b>19 - Cooling</b> .....		<b>230</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>230</b>
1.1	Connection diagram - coolant hoses .....	230
1.2	Checking cooling system for leaks .....	232
1.3	Draining and filling cooling system .....	236
<b>2</b>	<b>Coolant pump/thermostat assembly</b> .....	<b>244</b>
2.1	Assembly overview - coolant pump/thermostat .....	244
2.2	Assembly overview - electric coolant pump .....	246
2.3	Assembly overview - coolant temperature senders .....	247
2.4	Removing and installing electric coolant pump .....	249
2.5	Removing and installing coolant pump .....	251
2.6	Removing and installing toothed belt for coolant pump .....	253
2.7	Removing and installing actuator for engine temperature regulation N493 .....	255
2.8	Removing and installing coolant temperature sender G62 .....	257
2.9	Removing and installing radiator outlet coolant temperature sender G83 .....	258
<b>3</b>	<b>Coolant pipes</b> .....	<b>260</b>
3.1	Assembly overview - coolant pipes .....	260
3.2	Removing and installing coolant pipes .....	262
3.3	Removing and installing coolant pipes for gearbox .....	266
<b>4</b>	<b>Radiator/radiator fan</b> .....	<b>269</b>
4.1	Assembly overview - radiator/radiator fan .....	269
4.2	Assembly overview - radiator cowl and radiator fan .....	271
4.3	Assembly overview - radiator blind .....	273
4.4	Removing and installing radiator .....	275
4.5	Removing and installing radiator blind .....	283
4.6	Removing and installing radiator blind control motor V544 .....	285
4.7	Removing and installing radiator cowl .....	288
4.8	Removing and installing radiator fan VX57 .....	292
4.9	Removing and installing radiator fan 2 V177 .....	292
<b>21 - Turbocharging/supercharging</b> .....		<b>293</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>293</b>
1.1	Assembly overview - turbocharger .....	293
1.2	Removing and installing turbocharger .....	298
1.3	Removing and installing turbocharger air recirculation valve N249 .....	300



1.4	Removing and installing charge pressure control module GX34	301
<b>2</b>	<b>Charge air system</b>	<b>302</b>
2.1	Assembly overview - charge air system	302
2.2	Assembly overview - hose connections for charge air system	303
2.3	Removing and installing charge air cooler	304
2.4	Removing and installing charge pressure sender G31	306
2.5	Checking charge air system for leaks	306
<b>24</b>	<b>Mixture preparation - injection</b>	<b>311</b>
<b>1</b>	<b>Injection system</b>	<b>311</b>
1.1	Overview of fitting locations - injection system	311
<b>2</b>	<b>Air filter</b>	<b>321</b>
2.1	Assembly overview - air filter housing	321
2.2	Removing and installing air filter housing	325
<b>3</b>	<b>Intake manifold</b>	<b>327</b>
3.1	Assembly overview - intake manifold	327
3.2	Removing and installing intake manifold	329
3.3	Removing and installing throttle valve module GX3	333
3.4	Cleaning throttle valve module GX3	334
3.5	Removing and installing intake manifold flap valve N316	335
3.6	Checking intake manifold change-over function	335
<b>4</b>	<b>Injectors</b>	<b>337</b>
4.1	Assembly overview - fuel rail with injectors	337
4.2	Removing and installing fuel rail	338
4.3	Removing and installing injectors	338
4.4	Cleaning injectors	342
<b>5</b>	<b>Senders and sensors</b>	<b>344</b>
5.1	Removing and installing air mass meter G70	344
5.2	Removing and installing intake manifold pressure sender G71	344
5.3	Removing and installing fuel pressure sender G247	345
5.4	Checking fuel pressure sender G247	346
5.5	Removing and installing pressure differential sender for particulate filter G1037	348
<b>6</b>	<b>High-pressure pump</b>	<b>350</b>
6.1	Assembly overview - high-pressure pump	350
6.2	Removing and installing high-pressure pump	352
6.3	Removing and installing high-pressure pipe	354
<b>7</b>	<b>Lambda probe</b>	<b>356</b>
7.1	Assembly overview - Lambda probe	356
7.2	Removing and installing Lambda probe	358
<b>8</b>	<b>Engine control unit</b>	<b>360</b>
8.1	Assembly overview - engine control unit	360
8.2	Removing and installing engine control unit J623	361
<b>26</b>	<b>Exhaust system</b>	<b>363</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>363</b>
1.1	Assembly overview - silencers	363
1.2	Separating exhaust pipes/silencers	372
1.3	Removing and installing front silencer	374
1.4	Removing and installing silencer	377
1.5	Stress-free alignment of exhaust system	379
1.6	Checking exhaust system for leaks	380
<b>2</b>	<b>Emission control system</b>	<b>381</b>
2.1	Assembly overview - emission control system	381
2.2	Removing and installing catalytic converter	382

2.3	Removing and installing particulate filter .....	387
<b>3</b>	<b>Exhaust gas temperature regulation .....</b>	<b>388</b>
3.1	Assembly overview - exhaust gas temperature regulation .....	388
3.2	Removing and installing parts of exhaust gas temperature regulation .....	388
<b>28</b>	<b>Ignition system .....</b>	<b>390</b>
<b>1</b>	<b>Ignition system .....</b>	<b>390</b>
1.1	Assembly overview - ignition system .....	390
1.2	Removing and installing ignition coils .....	392
1.3	Removing and installing knock sensor 1 G61 .....	394
1.4	Removing and installing Hall senders .....	395
1.5	Removing and installing engine speed sender G28 .....	396