

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Securing engine to engine and gearbox support	23
1.3 Installing engine	23
2 Assembly mountings	31
2.1 Assembly overview - assembly mountings	31
2.2 Supporting engine in installation position	34
2.3 Removing and installing engine mountings	36
2.4 Removing and installing gearbox mounting	39
3 Engine cover panel	41
13 - Crankshaft group	42
1 Cylinder block (pulley end)	42
1.1 Assembly overview - cylinder block (pulley end)	42
1.2 Assembly overview - sealing flange (pulley end)	42
1.3 Removing and installing poly V-belt	42
1.4 Removing and installing poly V-belt tensioner	42
1.5 Removing and installing vibration damper	42
1.6 Removing and installing bracket for ancillaries	42
1.7 Removing and installing engine support	43
1.8 Removing and installing sealing flange (pulley end)	47
2 Cylinder block (gearbox end)	48
3 Crankshaft	49
4 Pistons and conrods	50
15 - Cylinder head, valve gear	51
1 Toothed belt drive	51
2 Cylinder head	52
3 Valve gear	53
3.1 Assembly overview - valve gear	53
3.2 Removing and installing camshaft oil seal	53
3.3 Removing and installing valve stem oil seals	53
4 Inlet and exhaust valves	54
17 - Lubrication	55
1 Sump/oil pump	55
1.1 Assembly overview - sump/oil pump	55
1.2 Engine oil	55
1.3 Removing and installing sump	55
1.4 Removing and installing oil pump	55
1.5 Removing and installing oil level and oil temperature sender G266	55
2 Engine oil cooler	56
3 Oil filter/oil pressure switches	57
19 - Cooling	58



1	Cooling system/coolant	58
1.1	Connection diagram - coolant hoses	58
1.2	Checking cooling system for leaks	62
1.3	Draining and filling cooling system	62
1.4	Checking filling quality of cooling system	70
2	Coolant pump/thermostat assembly	71
2.1	Assembly overview - coolant pump/thermostat	71
2.2	Assembly overview - electric coolant pump	71
2.3	Assembly overview - coolant temperature senders	72
2.4	Removing and installing electric coolant pump	72
2.5	Removing and installing coolant pump	76
2.6	Removing and installing thermostat	76
2.7	Checking thermostat	76
2.8	Removing and installing coolant valve for cylinder head N489	76
2.9	Removing and installing coolant temperature sender G62	77
3	Coolant pipes	78
3.1	Assembly overview - coolant pipes	78
3.2	Removing and installing coolant pipes	80
3.3	Removing and installing coolant pipes for gearbox	97
4	Radiator/radiator fan	99
4.1	Exploded view - radiators/radiator fan	99
4.2	Removing and installing radiator	104
4.3	Removing and installing radiator blind (top)	110
4.4	Removing and installing radiator blind (bottom)	111
4.5	Removing and installing radiator blind control motor (top)	111
4.6	Removing and installing radiator blind control motor (bottom)	113
4.7	Removing and installing water radiator for charge air cooling circuit	115
4.8	Removing and installing radiator cowl	117
4.9	Removing and installing radiator fan V7	120
21	- Turbocharging/supercharging	121
1	Turbocharger	121
2	Charge air system	122
23	- Mixture preparation - injection	123
1	Injection system	123
1.1	Overview - fuel system	123
1.2	Overview of fitting locations - injection system	123
1.3	Filling and bleeding fuel system	132
1.4	Checking fuel system for leaks	132
2	Vacuum system	133
2.1	Connection diagram - vacuum system	133
2.2	Checking vacuum system	133
3	Air filter	134
3.1	Assembly overview - air filter housing	134
3.2	Removing and installing air filter housing	136
4	Intake manifold	139
5	Injectors/high-pressure reservoir (rail)	140
6	High-pressure pump	141
7	Senders and sensors	142
7.1	Removing and installing air mass meter G70	142
7.2	Removing and installing fuel temperature sender G81	143
7.3	Removing and installing fuel pressure sender G247	143
7.4	Checking fuel pressure regulating valve N276	143

7.5	Removing and installing fuel pressure regulating valve N276	143
7.6	Removing and installing pressure differential sender G505	144
8	Lambda probe	145
9	Engine control unit	146
9.1	Assembly overview - engine/motor control unit	146
9.2	Removing and installing engine control unit J623	146
26 - Exhaust system		148
1	Exhaust pipes/silencers	148
1.1	Exploded view - silencers	148
1.2	Removing and installing front exhaust pipe	154
1.3	Separating exhaust pipes/silencers	158
1.4	Removing and installing silencers	159
1.5	Stress-free alignment of exhaust system	161
1.6	Checking exhaust system for leaks	162
2	Emission control system	163
3	SCR (selective catalytic reduction) system	164
3.1	Assembly overview - reducing agent tank	164
3.2	Draining reducing agent tank	166
3.3	Removing and installing reducing agent tank	170
3.4	Removing and installing injector for reducing agent N474	173
3.5	Removing and installing control unit for reducing agent metering system J880	173
3.6	Removing and installing reducing agent quality sensor G849	174
4	Exhaust gas temperature regulation	176
5	Exhaust gas recirculation	177
28 - Glow plug system		178
1	Glow plug system	178
1.1	Assembly overview - glow plug system	178
1.2	Removing and installing glow plug	178
1.3	Removing and installing automatic glow period control unit J179	178
1.4	Removing and installing Hall sender G40	179
1.5	Removing and installing engine speed sender G28	179