

Contents

00 - Technical data	1
1 Identification	1
2 Safety precautions	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	23
1.3 Securing engine to engine and gearbox support	33
1.4 Installing engine	36
2 Assembly mountings	41
2.1 Exploded view - assembly mountings	41
2.2 Supporting engine in installation position	43
2.3 Removing and installing engine mountings	47
2.4 Removing and installing gearbox mounting	51
3 Engine cover panel	53
13 - Crankshaft group	54
1 Cylinder block (pulley end)	54
1.1 Exploded view - cylinder block (pulley end)	54
1.2 Exploded view - sealing flange (pulley end)	54
1.3 Removing and installing poly V-belt	54
1.4 Removing and installing poly V-belt tensioner	54
1.5 Removing and installing vibration damper	54
1.6 Removing and installing bracket for ancillaries	55
1.7 Removing and installing engine support	55
1.8 Renewing crankshaft oil seal (pulley end)	57
1.9 Removing and installing sealing flange (pulley end)	57
2 Cylinder block (gearbox end)	59
3 Crankshaft	60
4 Balance shaft	61
5 Pistons and conrods	62
15 - Cylinder head, valve gear	63
1 Timing chain cover	63
1.1 Exploded view - timing chain cover	63
1.2 Removing and installing timing chain cover	63
2 Chain drive	65
3 Cylinder head	66
3.1 Exploded view - cylinder head	66
3.2 Exploded view - cylinder head cover	66
3.3 Removing and installing cylinder head	66
3.4 Removing and installing cylinder head cover	66
3.5 Removing and installing seals for injectors	68
3.6 Checking compression	69
4 Valve gear	70
5 Inlet and exhaust valves	71
17 - Lubrication	72
1 Sump/oil pump	72



1.1	Exploded view - sump/oil pump	72
1.2	Engine oil	72
1.3	Removing and installing sump (bottom section)	72
1.4	Removing and installing sump (top section)	72
1.5	Removing and installing oil pump	73
1.6	Removing and installing oil level and oil temperature sender G266	73
2	Engine oil cooler	74
3	Crankcase breather	75
4	Oil filter/oil pressure switches	76
4.1	Exploded view - oil filter	76
4.2	Exploded view - oil pressure switches/oil pressure control	76
4.3	Removing and installing oil filter housing	76
4.4	Removing and installing oil pressure switch F22	77
4.5	Removing and installing oil temperature sender G8	77
4.6	Removing and installing oil pressure sender G10	77
4.7	Checking oil pressure	78
4.8	Removing and installing valve for oil pressure control N428	78
4.9	Removing and installing oil temperature sender 2 G664	78
19 - Cooling		80
1	Cooling system/coolant	80
1.1	Connection diagram - coolant hoses	80
1.2	Checking cooling system for leaks	84
1.3	Draining and filling cooling system	84
2	Coolant pump/thermostat assembly	92
2.1	Exploded view - coolant pump	92
2.2	Exploded view - electric coolant pump	92
2.3	Exploded view - thermostat	94
2.4	Exploded view - coolant temperature senders	94
2.5	Removing and installing electric coolant pump	95
2.6	Removing and installing coolant pump	98
2.7	Removing and installing thermostat	98
2.8	Removing and installing coolant temperature sender G62	98
2.9	Removing and installing temperature sender for engine temperature regulation G694	98
2.10	Removing and installing coolant valves	99
3	Coolant pipes	100
3.1	Exploded view - coolant pipes	100
3.2	Removing and installing coolant pipes	104
4	Radiator/radiator fans	117
4.1	Exploded view - radiator/radiator fans	117
4.2	Removing and installing radiator	120
4.3	Removing and installing radiator cowl	125
4.4	Removing and installing radiator fan V7	128
21 - Turbocharging/supercharging		130
1	Turbocharger	130
1.1	Exploded view - turbocharger	130
1.2	Removing and installing turbocharger	130
2	Charge air system	132
2.1	Exploded view - charge air system	132
2.2	Exploded view - hose connections for charge air system	133
2.3	Removing and installing charge air cooler	134
2.4	Removing and installing charge pressure sender G31	135
2.5	Removing and installing charge air temperature sender after charge air cooler G811	135
2.6	Checking charge air system for leaks	136

23 - Mixture preparation - injection	137
1 Injection system	137
1.1 Overview - fuel system	137
1.2 Overview of fitting locations - injection system	138
1.3 Filling and bleeding fuel system	145
1.4 Checking fuel system for leaks	145
2 Vacuum system	146
3 Air cleaner	147
3.1 Exploded view - air cleaner housing	147
3.2 Removing and installing air cleaner housing	149
4 Intake manifold	151
4.1 Exploded view - intake manifold	151
4.2 Removing and installing intake manifold (top section)	151
4.3 Removing and installing intake manifold (bottom section)	152
4.4 Removing and installing intake manifold flap motor V157	152
4.5 Removing and installing throttle valve module J338	152
5 Injectors/high-pressure reservoir (rail)	154
5.1 Exploded view - injectors	154
5.2 Checking injectors	154
5.3 Performing adaption of correction values for injectors	154
5.4 Checking for injectors sticking open	154
5.5 Checking return flow rate of injectors with engine running	154
5.6 Checking return flow rate of injectors at starter cranking speed	154
5.7 Checking restrictor in fuel return line	154
5.8 Removing and installing injectors	155
5.9 Removing and installing high-pressure pipes	156
5.10 Removing and installing high-pressure reservoir (rail)	156
6 Senders and sensors	158
6.1 Removing and installing air mass meter G70	158
6.2 Removing and installing fuel temperature sender G81	159
6.3 Removing and installing fuel pressure sender G247	159
6.4 Removing and installing fuel pressure sender for low pressure G410	159
6.5 Checking fuel pressure regulating valve N276	160
6.6 Removing and installing fuel pressure regulating valve N276	162
6.7 Removing and installing pressure differential sender G505/pressure differential sender 2 G524	162
7 High-pressure pump	166
8 Lambda probe	167
8.1 Exploded view - Lambda probe	167
8.2 Removing and installing Lambda probe	169
8.3 Removing and installing NOx senders	170
8.4 Removing and installing particulate sensor G784	173
9 Engine control unit	176
9.1 Exploded view - engine control unit	176
9.2 Removing and installing engine/motor control unit J623	176
26 - Exhaust system	179
1 Exhaust pipes/silencers	179
1.1 Exploded view - silencers	179
1.2 Removing and installing front exhaust pipe	181
1.3 Separating exhaust pipes/silencers	184
1.4 Removing and installing silencers	185
1.5 Stress-free alignment of exhaust system	187
1.6 Checking exhaust system for leaks	188



2	Emission control system	189
2.1	Exploded view - emission control system	189
2.2	Removing and installing emission control module	189
2.3	Removing and installing trap catalytic converter	192
2.4	Removing and installing exhaust flap control unit J883	192
3	SCR (selective catalytic reduction) system	193
3.1	Exploded view - reducing agent tank	193
3.2	Exploded view - reducing agent supply line	195
3.3	Draining reducing agent tank	195
3.4	Removing and installing reducing agent tank	199
3.5	Removing and installing injector for reducing agent N474	202
3.6	Removing and installing reducing agent quality sensor G849	202
3.7	Removing and installing control unit for reducing agent metering system J880	202
4	Exhaust gas temperature control	204
4.1	Exploded view - exhaust gas temperature control	204
4.2	Removing and installing parts of exhaust gas temperature control	204
5	Exhaust gas recirculation	207
5.1	Exploded view - exhaust gas recirculation system	207
5.2	Removing and installing exhaust gas recirculation cooler	211
5.3	Removing and installing exhaust gas recirculation valve 2 GX6	215
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	215
6	Exhaust manifold	216
6.1	Exploded view - exhaust manifold	216
6.2	Removing and installing exhaust manifold	217
28	Glow plug system	221
1	Glow plug system	221