

Contents

00 - Technical data	1
1 Technical data	1
1.1 Brakes	1
1.2 Ceramic front brakes	2
2 Assessment of ceramic brake discs	3
2.1 Visual characteristics of ceramic brake discs	3
2.2 Superficial cracks in cooling channel lands	4
2.3 Cracks in area of bolt connection on ceramic brake discs	4
2.4 Edge fractures	5
2.5 Chipping on ceramic brake discs	5
2.6 Cracks extending into cooling channels	5
3 Assessment of wear on ceramic brake discs	6
3.1 Wear assessment by checking thickness of brake disc	8
3.2 Wear assessment by weighing brake disc	8
3.3 Wear assessment according to wear indicators	10
4 Brake test	11
4.1 General notes	11
4.2 Vehicles with front-wheel drive	11
4.3 Vehicles with four-wheel drive	11
5 Brake fluid	12
5.1 General notes	12
45 - Anti-lock brake system	13
1 General information on the anti-lock brake system	13
1.1 Notes for repair work on the ABS	13
2 Exploded view - ABS/ESP components	14
2.1 Connecting vehicle diagnostic, testing and information system VAS 5051A and selecting functions	16
3 Anti-lock brake system (ABS) Bosch 5.7	18
3.1 Hydraulic unit and brake lines	18
3.2 Removing and installing hydraulic control unit	19
3.3 Renewing ABS control unit J104	21
4 Anti-lock brake system (ABS) Bosch 8.0	24
4.1 ABS Bosch 8.0	24
5 Removing and installing parts of ABS system on front axle	31
5.1 Removing and installing front wheel speed sensor	31
6 Removing and installing parts of ABS system on rear axle (vehicles with front-wheel drive)	33
6.1 Removing and installing rear wheel speed sensor	34
7 Removing and installing parts of ABS system on rear axle (vehicles with four-wheel drive)	36
7.1 Removing and installing rear wheel speed sensor	37
8 Removing and installing parts of ABS/ESP system	39
8.1 Removing and installing brake light switch	39
8.2 Removing and installing lateral acceleration sender G200 and yaw rate sender G202 ..	40
9 Removing and installing brake pressure sender 1 G201	41
46 - Brakes - mechanism	42
1 Front brakes C54 (PR 1LZ)	42
1.1 Servicing front brakes (PR 1LZ)	42
1.2 Removing and installing brake pads	45



1.3	Removing and installing brake caliper with brake carrier	47
2	Front brakes FN3 (PR 1LB / 1LE / 1LT / 1LF)	49
2.1	Servicing front brakes (PR 1LB / 1LE / 1LT / 1LF)	49
2.2	Removing and installing brake pads	51
2.3	Removing and installing brake caliper with brake carrier	54
3	Front brakes FNR-G60 (PR 1LA / 1LC / 1LJ / S4)	56
3.1	Servicing front brakes (PR 1LA / 1LC / 1LJ / S4)	56
3.2	Removing and installing brake pads	58
3.3	Removing and installing brake caliper with brake carrier	61
4	Front brakes Brembo 18" (PR 1LP)	63
4.1	Servicing front brakes (PR 1LP)	63
4.2	Removing and installing brake pads	65
4.3	Detaching and attaching brake caliper	68
4.4	Renewing brake caliper	69
4.5	Removing and installing brake disc	70
4.6	Removing and installing splash plate	71
5	Ceramic front brakes (PR 1LU)	72
5.1	Servicing ceramic brakes (PR 1LU)	72
5.2	Attaching and detaching damper spring	75
5.3	Removing and installing brake pads (ceramic brakes)	75
5.4	Removing and installing brake caliper (ceramic brakes)	79
5.5	Renewing brake caliper (ceramic brakes)	80
5.6	Detaching and attaching front brake disc (ceramic brakes)	81
5.7	Renewing front brake disc (ceramic brakes)	82
5.8	Removing and installing splash plate	84
6	Rear brakes C38	86
6.1	Servicing brake calipers	86
6.2	Removing and installing brake pads	88
7	Rear brakes C41/ C43	91
7.1	Servicing brake calipers	91
7.2	Removing and installing brake pads	93
8	Rear brakes for RS 4 (type No. 8EC)/ C43	97
8.1	Servicing brake calipers	97
9	Removing and installing handbrake cables - front-wheel drive vehicles	99
10	Removing and installing handbrake cables - four-wheel drive vehicles	102
11	Removing and installing handbrake lever with undertray	105
11.1	Adjusting handbrake	107
12	Removing and installing handbrake lever	109
13	Removing and installing contact switch for handbrake	111
14	Exploded view - brake pedal (LHD vehicles)	112
15	Removing and installing mounting bracket for brake pedal	114
16	Exploded view - brake pedal (RHD vehicles)	116
47 - Brakes - hydraulics		118
1	Pressurised leak test	118
1.1	Pressurised leak test	118
1.2	High-pressure and low-pressure tests	118
1.3	Residual pressure test	119
2	Brake caliper C54	121
2.1	Servicing brake calipers	121
2.2	Removing and installing piston for front brake caliper	121
3	Brake caliper FN3	124
3.1	Servicing brake calipers	124

3.2	Removing and installing piston for front brake caliper	125
4	Brake caliper FNR-G60	127
4.1	Servicing brake calipers	127
4.2	Removing and installing piston for front brake caliper	128
5	Brembo brake calipers (18")	131
5.1	Servicing brake calipers	131
5.2	Removing and installing pistons for front brake caliper	132
6	Brake caliper (ceramic brakes)	134
6.1	Servicing brake caliper (ceramic brakes)	134
6.2	Removing and installing pistons for front brake caliper	136
7	Rear brake caliper	139
7.1	Servicing brake calipers	139
7.2	Removing and installing piston for rear brake caliper	140
8	Bleeding brake system	143
8.1	Bleeding sequence for vehicles with Electronic Stabilisation Program (ESP)	143
8.2	Changing brake fluid	144
9	Exploded view - tandem brake servo / brake master cylinder (LHD vehicles)	145
9.1	Adjusting ball head (LHD vehicles)	147
10	Removing and installing brake master cylinder with brake servo	148
11	Exploded view - tandem brake servo / brake master cylinder (RHD vehicles)	151
11.1	Adjusting ball head on RHD vehicles	153
12	Exploded view - vacuum pump for brake servo	154
12.1	Removing and installing vacuum pump	154
13	Vacuum pump for brakes V192	156
13.1	Exploded view	156
13.2	Removing and installing vacuum pump for brakes V192	156
13.3	Checking vacuum pump for brakes V192	157
13.4	Removing and installing brake servo pressure sensor G294	159
13.5	Checking non-return valve	160
14	Electric vacuum pump	161
14.1	Description and function	161
14.2	Connecting vehicle diagnostic, testing and information system V.A.S 5051 or fault reader V.A.G 1551	161
14.3	Selecting functions	163
14.4	Basic setting (performing short test)	163
14.5	Performing final control diagnosis	164
14.6	Reading measured value block	164
14.7	Fault table	165
15	Brake hoses and brake lines	166
15.1	Routing of brake hoses/lines	166
15.2	Tightening torques	166