

Contents

00	Technical data	1
1	Technical data	1
1.1	Running gear	1
1.2	Steering	2
2	Proper disposal of fluid-filled components	3
2.1	Releasing gas and draining gas-filled shock absorbers (front)	3
2.2	Releasing gas in gas-filled shock absorbers (rear)	4
2.3	Draining power steering rack	5
3	Checking shock absorbers	6
3.1	Leaks at shock absorbers	6
3.2	Noises from shock absorbers	6
3.3	Checking shock absorbers when removed	6
3.4	Checking shock absorbers on shock tester	7
4	Subframe/body mountings	10
4.1	Repairing damaged threads	10
4.2	Servicing threads in longitudinal member	10
40	Front suspension	11
1	Servicing front suspension	11
1.1	General notes:	11
1.2	Lifting suspension to unladen position	11
1.3	Exploded view	13
2	Suspension strut	17
2.1	Removing and installing suspension strut	17
2.2	Servicing suspension strut	20
3	Wheel bearing housing	27
3.1	Removing and installing wheel bearing housing	27
3.2	Servicing wheel bearing housing with bolted wheel bearing	31
4	Lightweight wheel hub	37
4.1	Distinguishing features	37
4.2	Removing and installing deflector ring	37
5	Mounting bracket and upper links	39
5.1	Removing and installing mounting bracket	39
5.2	Removing and installing upper links	39
5.3	Renewing bushes for front and rear upper links	40
6	Subframe	42
6.1	Removing and installing subframe	42
6.2	Renewing subframe bushes	48
6.3	Removing and installing stop wedges in bonded rubber bushes	51
7	Tunnel cross member	52
7.1	Removing and installing tunnel cross member	52
8	Vehicle level sender for vehicles with automatic headlight range control	54
8.1	General notes	54
8.2	Exploded view of components	54
9	Track control link	57
9.1	Removing and installing track control link (all engine versions except 3.0 ltr. TDI and 3.2 ltr. FSI)	57
9.2	Removing and installing track control link (vehicles with 3.0 ltr. TDI and 3.2 ltr. FSI engines)	58
9.3	Renewing bush for track control link	61
10	Guide link	64

10.1	Removing and installing guide link	64
10.2	Renewing guide link bush	65
11	Anti-roll bar	68
11.1	Removing and installing anti-roll bar	68
12	Cross piece	70
12.1	Removing and installing cross piece	70
13	Removing and installing diagonal struts (front)	71
14	Servicing front drive shafts	72
14.1	Removing and installing drive shaft	72
15	Servicing drive shaft with triple roller joint AAR 2000	74
15.1	Tools	74
15.2	Exploded view of components	75
15.3	Dismantling triple roller joint	77
15.4	Assembling triple roller joint	78
15.5	Servicing outer constant velocity joint	79
15.6	Checking outer constant velocity joint	80
16	Dismantling and assembling peened triple roller joint AAR 2600 i or 3300 i	82
16.1	Tools	82
16.2	Exploded view of components	84
16.3	Dismantling triple roller joint AAR 2600 i or 3300 i	87
16.4	Assembling triple roller joint AAR 2600 i or 3300 i	89
17	Servicing drive shafts with triple roller joint AAR 2900	93
17.1	Exploded view	93
17.2	Servicing outer constant velocity joint	95
17.3	Dismantling and assembling triple roller joint AAR 2900	96
18	Servicing drive shaft (with 100 mm dia. inner constant velocity joint)	103
18.1	Tools	103
18.2	Exploded view of components	105
18.3	Servicing inner constant velocity joint	106
18.4	Servicing outer constant velocity joint	110
18.5	Checking outer constant velocity joint	111
18.6	Checking inner constant velocity joint	112
19	Servicing drive shaft (with 108 mm dia. inner constant velocity joint)	114
19.1	Tools	114
19.2	Exploded view of components	114
19.3	Servicing inner constant velocity joint	117
19.4	Servicing outer constant velocity joint	119
19.5	Checking outer constant velocity joint	119
19.6	Checking inner constant velocity joint	120
42 - Rear suspension		123
1	Layout of rear suspension components	123
1.1	General notes	123
1.2	Lifting suspension to unladen position	124
1.3	Component groups	125
1.4	Part I: Subframe - front-wheel drive	127
1.5	Part II: Subframe - four-wheel drive	128
1.6	Part III: Trapezium link, transverse link, track rod	129
1.7	Part IV: Hub carrier - front-wheel drive	131
1.8	Part V: Wheel bearing housing (steel) - four-wheel drive	133
1.9	Part VI: Anti-roll bar	135
1.10	Part VII: Wheel bearing housing (aluminium) - four-wheel drive	136
2	Vehicle level sender for vehicles with automatic headlight range control	138
2.1	Vehicle level sender - exploded view	138

2.2	Renewing vehicle level sender in vehicle	139
3	Coil spring (rear)	140
3.1	Removing and installing coil spring	140
4	Shock absorbers	142
4.1	Removing and installing shock absorber	142
4.2	Servicing shock absorber	143
5	Hub carrier/wheel bearing housing and wheel bearing unit	145
5.1	Removing and installing hub carrier/wheel bearing housing (steel)	145
5.2	Servicing hub carrier (front-wheel drive)	149
5.3	Servicing wheel bearing housing (steel) - four-wheel drive	150
5.4	Removing and installing wheel bearing with wheel bearing housing (steel) installed - four-wheel drive	152
5.5	Removing and installing wheel bearing unit (bolted version)	155
5.6	Removing and installing wheel bearing housing (aluminium) - four-wheel drive	159
6	Lightweight wheel hub	161
6.1	Distinguishing features	161
6.2	Removing and installing deflector ring	161
7	Transverse link	163
7.1	Removing and installing transverse link	163
7.2	Renewing bush for transverse link	164
7.3	Renewing nut securing transverse link to subframe	164
8	Trapezium link	166
8.1	General notes	166
8.2	Removing and installing trapezium link	166
9	Rear subframe	170
9.1	Removing and installing subframe	170
9.2	Renewing subframe bushes	175
9.3	Assembly mountings - exploded view	179
9.4	Renewing rear differential bushes	180
10	Track rod	183
10.1	General notes	183
10.2	Removing and installing track rod	183
10.3	Removing and installing stone deflector 8E0 501 561 (old version) for track rod (three-piece version)	184
10.4	Removing and installing stone deflector (new version) for track rod (one-piece version)	185
11	Anti-roll bar	188
11.1	Removing and installing anti-roll bar	188
11.2	Renewing anti-roll bar bushes	189
11.3	Removing and installing coupling rod for anti-roll bar	189
12	Diagonal struts	191
12.1	Removing and installing diagonal struts (front/rear)	191
13	Servicing rear drive shaft	195
13.1	Removing and installing drive shafts	195
13.2	Servicing drive shaft (with 100 mm dia. inner constant velocity joint)	197
13.3	Servicing drive shaft (with 108 mm dia. inner constant velocity joint)	203
13.4	Checking outer constant velocity joint	206
13.5	Checking inner constant velocity joint	207
43	Self-levelling suspension	210
1	Dynamic Ride Control (DRC II)	210
1.1	General notes	210
1.2	Fitting locations	211
1.3	Central valve and pipe connections for suspension struts	212
1.4	Fault-finding for DRC II	213



1.5	System pressure test for DRC II	214
1.6	Dynamic Ride Control (DRC II) - discharging and charging	217
1.7	Removing and installing central valve	226
44	- Wheels, tyres, vehicle geometry	228
1	Wheels, tyres	228
2	Tyre Pressure Monitoring System	229
2.1	General notes	229
2.2	Tyre Pressure Monitoring System - overview of components	229
2.3	Wheel electronics - exploded view	231
2.4	Changing a tyre	231
2.5	Removing and installing metal valve body	232
2.6	Removing and installing Tyre Pressure Monitoring System control unit J502	233
2.7	Removing and installing rear Tyre Pressure Monitoring System aerial	233
2.8	Operation of Tyre Pressure Monitoring System	234
3	Wheel alignment	236
3.1	General notes	236
3.2	Test requirements:	236
3.3	Wheel alignment specifications	238
3.4	Preparations for measurement	240
3.5	Assignment of adapters to running gear versions (for wheel alignment)	241
3.6	Checking centre position of steering rack (mechanical method)	242
3.7	Checking camber at front wheels and centralising if necessary	242
3.8	Adjusting camber at rear wheels	243
3.9	Adjusting toe setting at rear wheels	243
3.10	Adjusting toe-in curve at front wheels	244
3.11	Setting vehicle to initial position for wheel alignment	245
3.12	Lifting vehicle with running gear types 1BA, 1BB, 1BR, 1BE, 1BV, 1BD, 2MC, 2ME	246
3.13	Adjusting toe-constant "S"	247
3.14	Adjusting toe setting at front wheels	247
48	- Steering	249
1	Airbag steering wheel	249
1.1	Airbag steering wheel - exploded view	249
1.2	Removing and installing airbag steering wheel	249
2	Steering column	251
2.1	Steering column - exploded view	251
2.2	Transport lock	252
2.3	Checking steering column for damage	252
2.4	Removing and installing steering column	253
2.5	Removing and installing steering lock with ignition/starter switch (without lock cylinder)	255
3	Power steering rack	257
3.1	Power steering rack - exploded view	257
3.2	Removing and installing power steering rack (LHD vehicles)	259
3.3	Removing and installing power steering rack (RHD vehicles)	267
3.4	Servicing power steering rack	274
3.5	Removing and installing heat shields	276
4	Adjusting power steering rack	277
5	Servotronic steering rack	278
5.1	Servotronic steering rack - exploded view	278
5.2	Servicing Servotronic steering rack	279
5.3	Checking voltage supply for Servotronic	279
5.4	Checking vehicle speed signal	279
5.5	Checking Servotronic solenoid valve	280
6	Track rod ball joint and track rod	281

6.1	Removing and installing track rod ball joint	281
6.2	Removing and installing track rods	282
7	Checking fluid level, bleeding steering system and checking for leaks	285
7.1	Checking fluid level of power steering	285
7.2	Bleeding steering system after repairs	285
7.3	Checking steering system for leaks	286
8	Power steering pump, reservoir and hydraulic pipes - exploded view	287
8.1	Exploded view for vehicles with 4-cyl. engine, 6-cyl. petrol engine (FSI) and 6-cyl. diesel engine	287
8.2	Exploded view for 6-cyl. petrol engine (MPI)	290
8.3	Exploded view for 8-cyl. petrol engine with timing chain	292
9	Checking delivery pressure of power steering pump	294
9.1	Vehicles with 4-cyl. engine, 6-cyl. petrol engine (FSI) and 6-cyl. diesel engine	294
9.2	Vehicles with 6-cyl. petrol engine (MPI)	296
9.3	Vehicles with 8-cylinder petrol engine (versions with timing chain)	297
10	Removing and installing power steering pump	301
10.1	General notes	301
10.2	Removing and installing power steering pump (vehicles with 4-cyl. engine)	301
10.3	Removing and installing power steering pump (vehicles with 6-cyl. petrol engine) (MPI)	304
10.4	Removing and installing power steering pump (vehicles with 6-cyl. petrol engine) (FSI)	306
10.5	Removing and installing power steering pump (vehicles with 6-cyl. 2.5 ltr. TDI engine)	309
10.6	Removing and installing power steering pump (vehicles with 6-cyl. 2.7 ltr. and 3.0 ltr. TDI common rail engine)	314
10.7	Removing and installing power steering pump (vehicles with 8-cyl. petrol engine with timing chain)	317
11	Installation position of suction hose	324
11.1	Installation position of suction hose on power steering pump	324
11.2	Installation position of suction hose on reservoir (all engines)	324