

Contents

00 - Technical data	1
1 Routing and attachment of pipes and wiring	1
2 Contact corrosion	2
50 - Body - front	3
1 Body - front	3
1.1 Exploded view of lock carrier with attachments	3
1.2 Removing and installing lock carrier with attachments	4
1.3 Lock carrier service position	6
1.4 Removing and installing scuttle panel trim	8
1.5 Removing and installing cross brace (dome brace)	9
1.6 Engine compartment covers	9
1.7 Exploded view of front wing	10
1.8 Exploded view of noise insulation	12
55 - Bonnet, rear lid	14
1 Bonnet	14
1.1 Removing, installing and adjusting bonnet	14
1.2 Removing, installing and adjusting bonnet	15
1.3 Removing and installing gas-filled strut	16
1.4 Removing radiator grille	17
1.5 Removing and installing catch	17
1.6 Removing and installing bottom part of bonnet lock	18
1.7 Exploded view of bonnet seal up to Model Year 2005	18
1.8 Exploded view of bonnet seal as of Model Year 2006	19
1.9 Removing bonnet lining	19
1.10 Removing and installing cable for bonnet	20
2 Convertible top compartment lid	21
2.1 Removing and installing convertible top compartment lid	21
2.2 Removing and installing cover for convertible top compartment lid	23
3 Rear lid	25
3.1 Removing, installing and adjusting rear lid	25
3.2 Removing and installing rear lid lock and handle mechanism	26
3.3 Removing and installing gas-filled strut	28
3.4 Removing and installing rear lid hinge	29
3.5 Installing rear lid seal	29
3.6 Adjusting buffer stops	30
4 Filler neck compartment lid	31
4.1 Removing and installing filler neck compartment lid	31
57 - Front doors, door components, central locking	33
1 Front door	33
1.1 Removing and installing door	33
1.2 Exploded view of window lifter	34
1.3 Removing and installing window lifter	35
1.4 Removing and installing impact strip	35
1.5 Window lifter basic setting	35
1.6 Removing and installing window lifter motor	37
1.7 Exploded view of door window	37
1.8 Removing and installing door window	38
1.9 Adjusting door window	39
1.10 Exploded view of door hinge	40



1.11	Adjusting front door	42
1.12	Exploded view of door handle and door lock	42
1.13	Exploded view of lock cylinder	43
1.14	Removing and installing lock cylinder	44
1.15	Removing and installing lock cylinder cap	45
1.16	Removing and installing door handle	46
1.17	Removing and installing door handle trim	47
1.18	Exploded view of door lock up to Model Year 2005	47
1.19	Removing and installing door lock up to Model Year 2005	48
1.20	Exploded view of door lock as of Model Year 2006	49
1.21	Removing and installing door lock as of Model Year 2006	50
1.22	Adjusting door lock operating rod as of Model Year 2006	51
2	Rear window lifter	52
2.1	Exploded view of rear window lifter	52
2.2	Removing and installing rear window lifter	52
2.3	Exploded view of side window	54
2.4	Removing and installing side window	55
2.5	Removing and installing window lifter motor	57
2.6	Adjusting side window	58
3	Convenience system	61
3.1	Fitting locations	61
3.2	Removing and installing tank filler flap locking motor V155	65
61	Convertible soft top, hardtop, canopy	66
1	Servicing convertible top	66
1.1	Safety precautions	66
1.2	Unfastening riveted joints	66
1.3	Exploded view of convertible top	66
1.4	Removing and installing convertible top	68
1.5	Removing and installing convertible top lock	70
1.6	Checking and adjusting convertible top locks	71
1.7	Adjusting side windows	71
1.8	Exploded view of seals for convertible top structure	73
1.9	Removing and installing front roof frame seal	74
1.10	Removing and installing bow / rear roof frame seal or centre roof frame seal	74
1.11	Removing and installing front bracing hoop trim	74
1.12	Convertible top component designations	74
1.13	Exploded view of convertible top headliner	76
1.14	Removing and installing convertible top headliner	77
1.15	Exploded view of convertible top cover	80
1.16	Removing and installing convertible top cover	82
1.17	Exploded view of convertible top padding	85
1.18	Removing and installing convertible top padding	86
1.19	Servicing inner headliner	87
1.20	Convertible top emergency release	89
2	Convertible top structure	95
2.1	Safety precautions	95
2.2	Exploded view of attachments	95
2.3	Removing and installing attachments	96
3	Hydraulic system for convertible top	101
3.1	General information on hydraulic system	101
3.2	Rules for cleanliness	101
3.3	Exploded view of hydraulic system	102
3.4	Block diagram of hydraulic system operation	103
3.5	Filling and bleeding hydraulic system	111

3.6	Removing and installing hydraulic unit (hydraulic pump)	112
3.7	Removing and installing hydraulic pump housing	112
3.8	Removing and installing pump impeller	113
3.9	Removing and installing solenoid valve	113
3.10	Removing and installing hydraulic pipes	113
3.11	Removing and installing hydraulic pipes at connection plate	114
3.12	Removing and installing hydraulic cylinders	116
4	Convertible top compartment lid locking system	117
4.1	Safety precautions	117
4.2	Exploded view of convertible top compartment lid locking system	117
4.3	Removing left and right convertible top compartment lid locks	118
4.4	Adjusting link plates of convertible top compartment lid	119
4.5	Removing and installing convertible top compartment lid lock	120
4.6	Adjusting convertible top compartment lid drive	120
5	Electrical components of convertible top actuator mechanism	122
5.1	Safety precautions	122
5.2	Exploded view of electrical components of convertible top actuator mechanism	122
5.3	Removing and installing convertible top lock motor V223 / convertible top lock open switch F294 / convertible top lock closed switch F295	125
5.4	Removing convertible top position switch (convertible top stowed switch F171 / convertible top front switch F202)	126
5.5	Removing convertible top tensioner position sender G356	126
5.6	Removing convertible top box lid, top switch F201	127
5.7	Removing convertible top operation control unit J256	127
5.8	Removing left convertible top box lid switch F290 and right convertible top box lid latched switch 1 F200	128
5.9	Removing convertible top front latch switch F172	128
5.10	Removing convertible top operating switch E137	129
63 - Bumpers		130
1	Front bumper	130
1.1	Exploded view of front bumper up to Model Year 2005	130
1.2	Removing and installing front bumper up to Model Year 2005	132
1.3	Exploded view of front bumper as of Model Year 2006	134
1.4	Exploded view of front bumper, RS4	137
1.5	Removing and installing front bumper as of Model Year 2006	139
1.6	Exploded view of radiator grille as of Model Year 2006	142
1.7	Adjusting bumper cover with respect to bonnet - vehicles up to Model Year 2005	144
1.8	Removing and installing bumper cross member up to Model Year 2005	144
1.9	Removing bumper cross member from cover/installing	146
1.10	Attaching bumper cross member to impact absorber	146
1.11	Removing and installing impact absorber	148
2	Rear bumper	149
2.1	Removing and installing bumper cover	149
2.2	Removing and installing bumper cross member	150
64 - Glazing		152
1	Windows bonded flush with bodywork	152
1.1	General information on removing and installing windows bonded flush with bodywork	152
1.2	Window repair using repair resin, Talon VAS 1993/2	153
1.3	Materials	153
1.4	Minimum setting times	154
1.5	Cleaning off adhesive sealing material	154
2	Windscreen	155
2.1	Removing trim strips	155
2.2	Exploded view of windscreen	156



2.3	Removing and installing rain sensor	157
2.4	Removing windscreen	160
2.5	Preparation for windscreen installation	162
2.6	Installing windscreen	163
66	- Exterior equipment	166
1	Exterior equipment	166
1.1	Removing A-pillar and roof frame trim strip	166
2	Protective mouldings	168
2.1	Replacing protective side mouldings	168
2.2	Window slot trim strips	168
2.3	Removing and installing trim cover for sill panel	168
3	Outer sill moulding	170
3.1	Replacing outer sill moulding	170
4	Exploded view of sill panel trim	171
5	Removing and installing rear wheel spoiler	172
6	Rear view mirror	173
6.1	Exploded view of rear view mirror	173
6.2	Removing and installing rear view mirror	174
6.3	Installing mirror glass	174
6.4	Removing and installing mirror adjustment motor	175
6.5	Removing and installing mirror housing	175
7	Wheel housing liner	177
7.1	Removing and installing front wheel housing liner	177
7.2	Removing and installing rear wheel housing liner	178
8	Decorative fittings	179
8.1	Rear lid model emblem	179
8.2	Removing and installing window slot trim strips	180