

Contents

00 - Technical data	1
1 Routing and attaching lines and wiring	1
2 Contact corrosion	2
68 - Interior equipment	3
1 Storage compartments/covers/trim panels	3
1.1 Removing and installing glove box	3
1.2 Removing and installing handle for glove box lock	4
1.3 Removing and installing cushioning mechanism for glove box lid	5
1.4 Removing and installing glove box - vehicles with knee bolster / knee airbag (country-specific version)	5
1.5 Removing and installing handle for glove box lock - vehicles with knee bolster / knee airbag (country-specific version)	7
1.6 Removing and installing cushioning mechanism of glove box lid - vehicles with knee bolster / knee airbag (country-specific version)	8
1.7 Removing and installing insulation box	8
1.8 Removing and installing storage compartment (driver side) without knee bolster	10
1.9 Exploded view - storage compartment (driver side) with knee bolster / knee airbag	11
1.10 Removing and installing storage compartment (driver side) with knee bolster / knee airbag (country-specific version)	12
1.11 Removing dash panel cover (left-side)	14
1.12 Removing additional loudspeaker - equipment version	14
1.13 Removing cover for instrument cluster	15
1.14 Removing and installing centre armrest and ashtray (rear)	15
1.15 Removing and installing support bracket for centre armrest	16
1.16 Removing and installing centre console	16
1.17 Insulation for centre console	19
1.18 Removing and installing cassette holder	20
1.19 Removing and installing connector mounting	21
1.20 Removing and installing gearshift cover and gear lever boot	22
1.21 Removing and installing navigation system operating unit in centre console	23
1.22 Removing and installing footwell trim	23
1.23 Removing and installing handbrake lever trim	24
1.24 Removing handbrake lever grip	25
1.25 Removing and installing mobile phone carrier in centre console	25
1.26 Making openings for mobile phone carrier in centre console	26
1.27 Removing and installing cradle for telephone handset in centre console	26
1.28 Making openings for telephone handset cradle in centre console	27
1.29 Removing and installing centre section of dash panel	28
1.30 Removing and installing storage compartment, cup holder and switch mounting	31
1.31 Removing and installing cover panel and trim for radio	32
1.32 Removing and installing ashtray (front)	34
2 Interior mirror	35
2.1 Safety regulations for interior mirror	35
2.2 General notes on interior mirror	35
2.3 Switching automatic anti-dazzle function on and off	36
2.4 Switching compass display on and off	36
2.5 Setting magnetic deflection zone	36
2.6 Calibrating digital compass	37
2.7 Adjusting automatic anti-dazzle interior mirror Y7 for vehicles with left-hand drive or right-hand drive	38
2.8 Selecting the applicable deflection zone from the map	38
2.9 Checking operation of automatic anti-dazzle interior mirror	44
2.10 Removing and installing interior mirror with rigid base	45



2.11	Removing and installing automatic anti-dazzle interior mirror Y7	46
2.12	Removing and installing rain and light sensor G397	47
2.13	Bonding in retaining plate for interior mirror	48
69	Passenger protection	50
1	Seat belts	50
1.1	Safety requirements for handling pyrotechnic belt tensioners	50
1.2	Disposal of pyrotechnic belt tensioners	51
1.3	Overview - seat belt anchorage points	51
1.4	Removing and installing three-point seat belt with belt tensioner (front)	53
1.5	Removing and installing three-point seat belt with belt tensioner (rear)	54
1.6	Anchorage points for centre floor panel	55
1.7	Outer floor panel anchorage point (front)	56
1.8	Removing and installing belt buckle (standard seat and seat with seat memory)	56
1.9	Removing and installing belt buckle for seat-occupied sensor controlling deactivation of front passenger's airbag (country-specific version)	59
1.10	Removing and installing belt buckle (RS bucket seat)	60
2	Removing and installing ISOFIX retainers	62
2.1	Removing and installing ISOFIX retainer (front)	62
3	Checking seat belts	63
3.1	Seat belts	63
3.2	Checking locking function of retractor mechanism for securing child safety seats (does not apply to driver's seat belt)	65
3.3	Checking belt-fastened sensor for three-point seat belts with belt tensioners (rear)	66
4	Safety requirements for airbags	67
4.1	General safety regulations for working on the airbag system	67
4.2	Additional safety regulations for side airbags	68
4.3	Additional safety precautions for Automatic Rollover Support System	68
4.4	Additional safety regulations for working on seat occupied sensor for front passenger's airbag deactivation (country-specific version)	69
4.5	Procedure for dealing with seat occupied sensor controlling deactivation of front passenger's airbag (country-specific version) following a crash	70
4.6	Renewing airbag units following an accident	70
4.7	Checking mounting components following an accident	72
4.8	Accident in which airbag was not triggered	73
4.9	Disposal of pyrotechnic airbag units	73
5	Servicing airbags	74
5.1	Overview of fitting locations	74
5.2	Removing and installing airbag control unit -J 234-	75
5.3	Removing and installing battery isolation igniter N253 (equipment version)	76
6	Servicing airbag (driver side)	79
6.1	Removing and installing airbag unit (standard steering wheel)	79
6.2	Removing and installing airbag unit (sports steering wheel)	80
6.3	Removing and installing airbag unit (multi-function steering wheel)	82
6.4	Exploded view - airbag unit on driver side (RS 4)	84
6.5	Removing and installing airbag unit (RS 4)	84
6.6	Removing and installing return ring with slip ring (coil connector / ESP sensor)	87
7	Servicing airbag (front passenger side)	89
7.1	Removing and installing airbag (front passenger side)	89
7.2	Removing and installing key-operated switch to deactivate airbag on front passenger side	91
7.3	Removing warning lamp for airbag deactivated on front passenger side	91
8	Servicing side airbags	93
8.1	Tools	93
8.2	Removing and installing side airbag (sports seat, standard seat)	93
8.3	Removing and installing side airbag (seat with electrical adjustment)	95

9	Servicing crash sensors for airbags	98
9.1	Removing and installing crash sensor for front airbags	98
9.2	Removing and installing crash sensor for side airbag (front)	99
10	Knee airbag - country-specific version	100
10.1	Exploded view - knee airbag (driver side)	100
10.2	Removing and installing knee airbag (driver side)	100
10.3	Exploded view - knee airbag (front passenger side)	101
10.4	Removing and installing knee airbag (front passenger side)	102
11	Servicing seat occupied recognition system for front passenger airbag (country-specific version)	104
11.1	Removing and installing seat occupied sensor	104
12	Automatic Rollover Support System	109
12.1	Removing and installing rollover bar	109
12.2	Removing and installing impact absorber for rollover bar	114
70 - Trim, insulation		115
1	Door trim (front)	115
1.1	Overview of fitting locations	115
1.2	Removing and installing door trim	116
1.3	Removing and installing trim panel	117
1.4	Removing and installing insulation	117
1.5	Removing and installing armrest	118
1.6	Removing and installing interior door handle	119
1.7	Removing and installing treble loudspeaker	119
1.8	Removing and installing trim for bass loudspeaker	119
1.9	Removing and installing slider (country-specific version)	120
2	Side trim (rear)	121
2.1	Removing and installing rear side trim	121
2.2	Removing and installing trim panel	122
2.3	Removing and installing insulation panels	122
3	Dash panel	123
3.1	Overview of fitting locations	123
3.2	Removing dash panel	125
3.3	Removing dash panel air duct (left-side/right-side)	133
4	Removing and installing central tube	134
4.1	Overview of fitting locations	134
4.2	Removing and installing central tube for dash panel	136
5	Trim panels	141
5.1	Removing and installing A-pillar trim (top)	141
5.2	Removing and installing A-pillar trim (bottom)	142
5.3	Removing and installing floor covering	143
5.4	Removing and installing sill panel trim	143
5.5	Removing and installing foot rest	144
5.6	Removing and installing foot rest bracket	144
5.7	Removing and installing sun visor	145
5.8	Removing and installing sun visor bracket	145
5.9	Removing and installing sun visor (centre)	145
5.10	Removing and installing wind deflector trim	145
5.11	Removing and installing vanity mirror light	146
5.12	Removing and installing interior light/reading light	146
6	Luggage compartment trim	148
6.1	Exploded view - rear lid trim	148
6.2	Removing and installing rear lid trim	149
6.3	Removing and installing manual release handle (country-specific version)	150



6.4	Installing/retrofitting bracket for warning triangle (country-specific version)	150
6.5	Removing and installing luggage compartment light	151
6.6	Removing and installing rear cross panel trim	151
6.7	Removing and installing side trim (right-side)	152
6.8	Removing and installing side trim (left-side)	153
6.9	Removing and installing back panel trim	154
6.10	Removing and installing retainer for floor covering	155
7	Convertible roof compartment trim panels	156
7.1	Removing and installing rear trim	156
7.2	Removing and installing side trim	157
8	Variable convertible roof compartment	158
8.1	Removing variable convertible roof compartment	158
8.2	Removing flap for convertible roof compartment	160
8.3	Removing trim for handle mounting	161
8.4	Removing handle for variable convertible roof compartment	161
8.5	Removing microswitch for variable convertible roof compartment	162
8.6	Removing toothed segment for variable convertible roof compartment	163
8.7	Removing rack for variable convertible roof compartment	166
8.8	Removing slider for variable convertible roof compartment	167
8.9	Removing bracket for variable convertible roof compartment	169
72	Seat frames	170
1	Front seats	170
1.1	Tools	170
1.2	Removing and installing seat	171
1.3	Connecting airbag adapter VAS 6036	176
1.4	Exploded view - modular wire routing, vehicles from 06.06 onwards	177
1.5	Modular wire routing versions	178
1.6	Modular wire routing with corrugated tube at front seat	178
1.7	Removing and installing front seat backrest	182
1.8	Removing and installing side trim (sill side)	185
1.9	Removing and installing seat height adjuster	186
1.10	Removing and installing backrest adjuster	187
1.11	Removing and installing side trim (tunnel side)	187
1.12	Removing and installing seat height adjustment unit	189
1.13	Tools	189
1.14	Removing and installing Bowden cable of seat height adjuster unit	190
1.15	Removing and installing manual Easy Entry system	191
1.16	Removing and installing drawer (storage compartment)	192
1.17	Removing and installing backrest cover panel	193
1.18	Removing and installing outer frame	194
1.19	Removing and installing manual Easy Entry handle	194
1.20	Removing and installing trim for manual Easy Entry system	195
1.21	Removing and installing Bowden cable for locking backrest	195
1.22	Removing and installing guide for side airbag	197
1.23	Removing and installing head restraint with slide-in locking mechanism	197
1.24	Removing footwell light (rear)	198
1.25	Exploded view - seat pan, vehicles up to 04.03	198
1.26	Dismantling and assembling seat pan	199
1.27	Exploded view - seat pan, vehicles from 04.03 onwards	201
1.28	Dismantling and assembling seat pan	202
2	Front seats (with seat memory and electric adjustment)	205
2.1	Basic setting after renewing seat control unit/motor	205
2.2	Tools	205
2.3	Removing and installing seat	205

2.4	Removing seat if seat longitudinal adjustment motor / control unit is defective - vehicles up to 04.03	207
2.5	Removing front seat if seat longitudinal adjustment motor / control unit is defective - vehicles from 04.03 onwards	208
2.6	Removing and installing seat rail cover (front) - vehicles up to 10.02	211
2.7	Removing and installing seat rail cover (rear) - vehicles up to 10.02	212
2.8	Removing and installing seat rail covers - vehicles from 10.02 onwards	213
2.9	Unplugging connectors	213
2.10	Connecting airbag adapter VAS 6036	215
2.11	Connector assignment at connector point	216
2.12	Unplugging connector for side airbag	217
2.13	Exploded view - modular wire routing, vehicles from 04.06 onwards	217
2.14	Modular wire routing versions	217
2.15	Modular wire routing with corrugated tube at front seat	217
2.16	Removing and installing front seat backrest	217
2.17	Removing and installing side trim (sill side)	222
2.18	Removing and installing side trim (tunnel side)	223
2.19	Removing and installing Easy Entry system	223
2.20	Removing and installing Bowden cable for locking backrest	224
2.21	Removing and installing backrest release microswitch	226
2.22	Adjusting backrest release microswitch	227
2.23	Removing and installing head restraint microswitch	228
2.24	Adjusting head restraint microswitch	228
2.25	Renewing backrest (standard seat)	229
2.26	Renewing seat pan (standard seat)	230
2.27	Removing and installing guide for side airbag	232
2.28	Removing and installing seat adjustment switch	232
2.29	Removing and installing four-way lumbar support switch	233
2.30	Removing and installing control unit	233
2.31	Removing and installing seat longitudinal adjustment motor	234
2.32	Removing and installing seat height adjustment motor	235
2.33	Removing and installing seat rake adjustment motor	236
2.34	Removing and installing seat cushion extension (sports seat)	237
2.35	Removing and installing motor for backrest rake adjustment	238
2.36	Renewing electric height adjuster for seats bolted onto seat rails (old version)	241
2.37	Renewing electric height adjuster on seats with upper section laser-welded to seat rail (new version)	243
2.38	Removing and installing backrest cover panel	243
2.39	Removing and installing outer backrest frame	245
2.40	Removing and installing four-way lumbar support - vehicles up to model year 2005	246
2.41	Removing and installing lumbar support adjustment motors - vehicles up to model year 2005	247
2.42	Removing and installing four-way lumbar support - vehicles from model year 2006 onwards	247
2.43	Removing and installing control motors for lumbar support adjustment - vehicles from model year 2006 onwards	250
2.44	Removing and installing head restraint (with electrical adjustment)	251
2.45	Removing footwell light (rear)	252
2.46	Exploded view - seat pan, vehicles up to 04.03	252
2.47	Dismantling and assembling seat pan	253
2.48	Exploded view - seat pan, vehicles from 04.03 onwards	255
2.49	Dismantling and assembling seat pan	257
2.50	Removing and installing spring mat with wiring harness for seat pan	259
2.51	Wiring assignment for seat	261
2.52	Wiring assignment for backrest	262
2.53	Removing and installing wiring harness for backrest	263
3	RS bucket seat (front)	264

3.1	Removing and installing seat	264
3.2	Removing and installing seat rail cover	265
3.3	Unplugging electrical connectors	266
3.4	Removing and installing side trim panels	266
3.5	Removing and installing backrest adjuster knob	270
3.6	Removing and installing seat height adjuster	270
3.7	Removing and installing lumbar support adjustment switch	271
3.8	Removing and installing button for backrest bolster adjustment and button for seat bolster adjustment	272
3.9	Removing and installing control unit	273
3.10	Removing and installing backrest and seat pan (front)	273
3.11	Removing and installing operating cable for seat longitudinal adjustment	277
3.12	Removing and installing seat height adjustment unit	279
3.13	Removing and installing backrest cover panels	281
3.14	Pneumatic block - allocation of components	282
3.15	Exploded view - operating cable for locking backrest	284
3.16	Removing and installing operating cable for locking backrest	285
3.17	Adjusting operating cables for locking backrest	288
4	Rear seats	289
4.1	Removing and installing rear seat bench	289
4.2	Removing and installing rear seat backrest	290
4.3	Removing and installing head restraints	291
4.4	Removing and installing piping	291
74	Seat - padding, covers	292
1	Seat covers and padding for front seats	292
1.1	Removing and installing seat pan cover and padding (standard seat)	292
1.2	Removing and installing backrest cover and padding (sports seat, standard seat)	294
1.3	Removing head restraint guides	296
1.4	Removing and installing seat heating element (standard seat)	296
1.5	Removing and installing backrest heating element	296
1.6	Removing and installing cover and padding for head restraint with slide-in locking mechanism	297
2	Covers and padding on front seats (with seat memory, with electric adjustment)	298
2.1	Removing and installing seat pan cover and padding (standard seat)	298
2.2	Removing and installing seat pan cover and padding (sports seat)	300
2.3	Removing and installing backrest cover and padding (sports seat, standard seat)	304
2.4	Removing head restraint guides	306
2.5	Removing and installing seat heating element (standard seat)	307
2.6	Removing and installing seat heating element (sports seat)	307
2.7	Removing and installing backrest heating element	307
2.8	Removing and installing cover and padding for head restraint with slide-in locking mechanism	308
3	Covers and padding for RS bucket seat (front)	309
3.1	Removing and installing seat pan cover and padding	309
3.2	Removing and installing backrest cover and padding	310
3.3	Removing and installing seat heating elements	313
3.4	Removing and installing backrest heating element	314
4	Covers and padding on rear seats	315
4.1	Removing and installing cover and padding for rear seat bench	315
4.2	Removing and installing heating element for rear seat bench	315
4.3	Removing and installing cover and padding for rear seat backrest	316
4.4	Removing and installing heating element for rear seat backrest	316
4.5	Removing and installing head restraint guides	317
4.6	Removing and installing cover and padding for centre armrest	317
4.7	Removing and installing trim for load-through hatch	318

4.8 Removing and installing load-through hatch 318