

## Contents

<b>00</b>	<b>Technical data</b> .....	<b>1</b>
1	<b>Gearbox identification</b> .....	1
1.1	Location on gearbox .....	1
1.2	Code letters, allocation, transmission ratios, capacities .....	2
2	<b>Transmission layout</b> .....	10
2.1	Calculating ratio "i" .....	10
3	<b>Repair instructions</b> .....	12
3.1	Contact corrosion! .....	12
3.2	General repair instructions .....	12
<b>30</b>	<b>Clutch</b> .....	<b>18</b>
1	<b>Servicing clutch mechanism</b> .....	<b>18</b>
1.1	Exploded view - pedal cluster (LHD vehicles) .....	19
1.2	Removing and installing clutch pedal switch F36 .....	20
1.3	Removing and installing clutch pedal switch for engine start F194 .....	21
1.4	Removing and installing over-centre spring .....	22
1.5	Exploded view - pedal cluster (RHD vehicles) .....	23
1.6	Exploded view - hydraulic system .....	25
1.7	Notes on removing and installing master cylinder and slave cylinder .....	27
1.8	Function check for master and slave cylinders .....	27
1.9	Removing and installing clutch master cylinder .....	28
1.10	Bleeding clutch system .....	35
2	<b>Servicing clutch release mechanism</b> .....	<b>37</b>
2.1	Exploded view - clutch release mechanism .....	37
2.2	Removing and installing clutch slave cylinder .....	39
3	<b>Servicing clutch</b> .....	<b>43</b>
3.1	Fault-finding on power transmission - complaints regarding defects on the clutch and clutch mechanism .....	43
3.2	Exploded view - servicing conventional clutch .....	48
3.3	Removing and installing conventional clutch .....	51
3.4	Exploded view - servicing self-adjusting clutch (Sachs version) .....	52
3.5	Removing and installing self-adjusting clutch (Sachs version) .....	55
3.6	Exploded view - clutch with SAC pressure plate .....	57
3.7	Removing and installing clutch with SAC pressure plate .....	58
3.8	Resetting adjuster ring in SAC clutch pressure plate .....	60
<b>34</b>	<b>Controls, housing</b> .....	<b>63</b>
1	<b>Servicing selector mechanism</b> .....	<b>63</b>
1.1	Installation position of selector mechanism .....	63
1.2	Removing and installing gear knob and boot .....	65
1.3	Servicing gear lever and gear lever bearing .....	65
1.4	Servicing selector rod and push rod .....	67
1.5	Removing and installing gear lever with gear lever bearing .....	68
1.6	Removing and installing selector mechanism .....	70
1.7	Adjusting selector mechanism .....	75
2	<b>Removing and installing gearbox</b> .....	<b>79</b>
2.1	Removing gearbox - vehicles with 4-cylinder engine .....	79
2.2	Removing gearbox - vehicles with 6-cylinder petrol engine .....	87
2.3	Installing gearbox - vehicles with 4-cylinder or 6-cylinder engine .....	96
2.4	Transporting gearbox .....	101
2.5	Exploded view - tunnel cross member, gearbox mounting and gearbox support .....	102
2.6	Removing and installing tunnel cross member .....	103



2.7	Removing and installing gearbox support with gearbox mounting	104
<b>3</b>	<b>Checking oil level in manual gearbox</b>	<b>105</b>
<b>4</b>	<b>Dismantling and assembling gearbox</b>	<b>106</b>
4.1	General layout of gearbox	106
4.2	Exploded view	107
4.3	Removing and installing input shaft ball bearing and multi-function sender	107
4.4	Removing and installing input shaft, pinion shaft, selector rods and gearbox cover	109
4.5	Assembly sequence - dismantling and assembling gearbox	112
4.6	Dismantling and assembling selector mechanism in gearbox	119
<b>35 - Gears, shafts</b>		<b>126</b>
<b>1</b>	<b>Input shaft</b>	<b>126</b>
1.1	Dismantling and assembling input shaft	126
1.2	Modified 3rd and 4th gear synchromesh from 05.03 onwards	136
1.3	Adjusting input shaft	136
<b>2</b>	<b>Pinion shaft (output shaft)</b>	<b>139</b>
2.1	Dismantling and assembling pinion shaft up to 05.03	139
2.2	Dismantling and assembling pinion shaft from 05.03 onwards	152
<b>3</b>	<b>Removing and installing reverse gear wheel</b>	<b>168</b>
<b>4</b>	<b>Renewing gearbox cover (with gearbox installed)</b>	<b>170</b>
<b>39 - Final drive - differential</b>		<b>181</b>
<b>1</b>	<b>Renewing flange shaft oil seals (left and right)</b>	<b>181</b>
1.1	Renewing oil seal for flange shaft (left-side)	181
1.2	Renewing oil seal for flange shaft (right-side)	184
<b>2</b>	<b>Removing and installing speedometer sender G22</b>	<b>188</b>
<b>3</b>	<b>Removing and installing drive wheel for speedometer sender</b>	<b>189</b>
<b>4</b>	<b>Dismantling and assembling differential</b>	<b>193</b>
4.1	Removing and installing differential	193
4.2	Dismantling and assembling differential	196
<b>5</b>	<b>Adjusting pinion shaft and crown wheel</b>	<b>205</b>
5.1	Adjustment and marking of final drive gear set	205
5.2	Position of shims	206
5.3	Table of adjustments	206
5.4	Re-adjustment sequence for final drive gear set	207
5.5	Adjusting pinion shaft	207
5.6	Adjusting crown wheel	216