

Contents

00	Technical data	1
1	Gearbox identification	1
1.1	Code letters, allocation, transmission ratios, capacities	1
2	Rear final drive identification	5
2.1	Rear final drive identification	5
3	Transmission layout	6
3.1	Calculating ratio "i"	6
4	General repair instructions	8
4.1	Special tools	8
4.2	Components	8
30	Clutch	14
1	Servicing clutch mechanism	14
1.1	Pedal cluster (LHD vehicles) - exploded view	15
1.2	Removing and installing clutch pedal switch F36	16
1.3	Removing and installing clutch pedal switch for engine start F194	17
1.4	Removing and installing over-centre spring	17
1.5	Pedal cluster (RHD vehicles) - exploded view	18
1.6	Hydraulics - exploded view	20
1.7	Notes on removing and installing clutch master cylinder and slave cylinder	22
1.8	Function check for clutch master cylinder and slave cylinder	22
1.9	Removing and installing clutch master cylinder	23
1.10	Bleeding clutch system	29
2	Servicing clutch release mechanism	32
2.1	Removing and installing clutch slave cylinder	34
3	Servicing clutch	42
3.1	Servicing conventional clutch	42
3.2	Removing and installing conventional clutch	44
3.3	Clutch with SAC pressure plate - exploded view	46
3.4	Removing and installing clutch with SAC pressure plate	47
3.5	Resetting adjuster ring in SAC clutch pressure plate	49
34	Controls, housing	52
1	Servicing selector mechanism	52
1.1	Installation position of selector mechanism	52
1.2	Selector mechanism - exploded view	53
1.3	Removing and installing gear knob with boot	55
1.4	Removing and installing selector mechanism	56
1.5	Adjusting selector mechanism	60
1.6	Checking gear lever adjustment	62
2	Removing and installing gearbox	63
2.1	Removing gearbox - vehicles with 4-cyl. petrol engine	63
2.2	Removing gearbox - vehicles with 4-cyl. TDI engine	72
2.3	Removing gearbox - vehicles with V6 petrol engine	83
2.4	Removing gearbox - vehicles with V6 TDI engine	95
2.5	Installing gearbox	105
3	Oil level in manual gearbox	111
3.1	Checking oil level in manual gearbox	111
3.2	Oil pipes on vehicles with V6 TDI engine (132 kW) - exploded view	111
3.3	Removing and installing oil pump	112
3.4	Removing and installing gearbox mounting	113
4	Dismantling and assembling gearbox	116



4.1	Bearing housing, Torsen differential and end cover - exploded view	117
4.2	Manual gearbox and selector shaft - exploded view	118
4.3	5th and 6th gear - exploded view	119
4.4	Input shaft, pinion shaft, hollow shaft and internal selector mechanism - exploded view	120
4.5	Removing and installing bearing housing, Torsen differential, end cover, internal selector mechanism, input shaft, pinion shaft and hollow shaft	121
4.6	Dismantling and assembling bearing housing	140
4.7	Servicing bearings for Torsen differential	145
4.8	Servicing end cover	150
4.9	Servicing intermediate housing	154
4.10	Re-determining thickness of shim "S4"	158
4.11	Servicing gearbox housing	162
4.12	Servicing selector shaft with selector cylinder	170
35	- Gears, shafts	173
1	Dismantling and assembling input shaft	173
2	Dismantling and assembling pinion shaft and hollow shaft	179
39	- Final drive - rear differential	189
39	- Final drive - front differential	190
1	Servicing front final drive	190
1.1	Removing and installing flange shaft (left-side)	190
1.2	Removing and installing flange shaft (right-side)	194
1.3	Renewing oil seal for flange shaft	198
1.4	Removing and installing speedometer sender G22	200
1.5	Removing and installing drive wheel for speedometer sender G22	200
1.6	Renewing oil seal and grooved ball bearing for flange for propshaft on gearbox	201
2	Dismantling and assembling front final drive	209
2.1	Removing and installing differential	209
2.2	Dismantling and assembling differential	210
2.3	Adjusting pinion shaft and crown wheel	218
2.4	Adjusting pinion shaft	221
2.5	Adjusting crown wheel	228