

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Gearbox identification</b> .....	<b>1</b>
1.1 Gearbox identification .....	1
1.2 Code letters, allocation, transmission ratios, capacities .....	1
<b>2 Transmission layout</b> .....	<b>4</b>
2.1 Calculating ratio "i" .....	4
<b>3 General repair instructions</b> .....	<b>6</b>
3.1 Special tools .....	6
3.2 Components .....	6
<b>30 - Clutch</b> .....	<b>12</b>
<b>1 Servicing clutch mechanism</b> .....	<b>12</b>
1.1 Pedal cluster (LHD vehicles) - exploded view of components .....	13
1.2 Removing and installing clutch pedal switch F36 .....	14
1.3 Removing and installing clutch pedal switch for engine start F194 .....	15
1.4 Removing and installing over-centre spring .....	15
1.5 Pedal cluster (RHD vehicles) - exploded view of components .....	16
1.6 Hydraulics - exploded view of components .....	18
1.7 Notes on removing and installing clutch master cylinder and slave cylinder .....	20
1.8 Removing and installing clutch master cylinder .....	21
1.9 Bleeding clutch system .....	27
<b>2 Servicing clutch release mechanism</b> .....	<b>30</b>
2.1 Clutch release mechanism - exploded view of components .....	30
2.2 Removing and installing clutch slave cylinder .....	33
<b>3 Servicing clutch</b> .....	<b>38</b>
3.1 Servicing conventional clutch .....	38
3.2 Removing and installing conventional clutch .....	40
3.3 Clutch with SAC pressure plate - exploded view of components .....	42
3.4 Removing and installing clutch with SAC pressure plate .....	44
3.5 Resetting adjuster ring in SAC clutch pressure plate .....	45
<b>34 - Controls, housing</b> .....	<b>48</b>
<b>1 Servicing selector mechanism</b> .....	<b>48</b>
1.1 Installation position of selector mechanism .....	48
1.2 Selector mechanism - exploded view of components .....	49
1.3 Removing and installing gear lever knob with boot .....	51
1.4 Removing and installing selector mechanism .....	52
1.5 Adjusting selector mechanism .....	54
1.6 Checking gear lever adjustment .....	56
<b>2 Removing and installing gearbox</b> .....	<b>57</b>
2.1 Removing gearbox on vehicles with 1.8 ltr. turbocharged engine .....	57
2.2 Removing gearbox on vehicles with 4-cyl. TDI engine .....	64
2.3 Removing gearbox on vehicles with V6 TDI engine .....	73
2.4 Installing gearbox .....	81
<b>3 Checking oil level in manual gearbox</b> .....	<b>86</b>
<b>4 Dismantling and assembling gearbox</b> .....	<b>87</b>
4.1 Gear cluster/bearing plate and end cover - exploded view of components .....	88
4.2 5th and 6th gear - exploded view of components .....	89
4.3 Input shaft, pinion shaft and internal selector mechanism - exploded view of components .....	90
4.4 Removing and installing end cover, 5th and 6th gear, bearing plate, input shaft, pinion shaft and selector rods .....	91



4.5	Servicing end cover .....	107
4.6	Servicing bearing plate .....	112
4.7	Re-determining thickness of shim "S4" .....	117
4.8	Servicing gearbox housing .....	119
4.9	Dismantling and assembling selector shaft assembly .....	127
<b>35</b>	<b>- Gears, shafts .....</b>	<b>130</b>
1	Dismantling and assembling input shaft .....	130
2	Dismantling and assembling pinion shaft .....	136
<b>39</b>	<b>- Final drive - differential .....</b>	<b>146</b>
1	<b>Servicing final drive .....</b>	<b>146</b>
1.1	Renewing flange shaft oil seal (left and right) .....	146
1.2	Removing and installing speedometer sender G22 .....	151
1.3	Removing and installing drive wheel for speedometer sender .....	152
2	<b>Dismantling and assembling differential .....</b>	<b>156</b>
2.1	Removing and installing differential .....	156
2.2	Dismantling and assembling differential .....	157
2.3	Adjusting pinion shaft and crown wheel .....	165
2.4	Adjusting pinion shaft .....	168
2.5	Adjusting crown wheel .....	176