

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Code letters, allocation, transmission ratios, capacities	1
2 Transmission layout	4
2.1 Calculating ratio „i“	5
3 General repair instructions	6
3.1 Components	6
3.2 Special tools	8
3.3 Contact corrosion!	8
30 - Clutch	10
1 Servicing clutch mechanism	10
1.1 Exploded view - pedal cluster (LHD vehicles)	11
1.2 Removing and installing clutch pedal switch F36	12
1.3 Removing and installing clutch pedal switch for engine start F194	12
1.4 Removing and installing over-centre spring	13
1.5 Exploded view - pedal cluster (RHD vehicles)	14
1.6 Exploded view - hydraulic system	16
1.7 Notes on removing and installing clutch master cylinder and slave cylinder	18
1.8 Function check for clutch master cylinder and slave cylinder	18
1.9 Removing and installing clutch master cylinder	19
1.10 Bleeding clutch system	27
2 Exploded view - servicing clutch release mechanism	29
2.1 Removing and installing clutch slave cylinder	33
3 Servicing clutch	38
3.1 Exploded view - servicing clutch with SAC pressure plate (LuK version)	38
3.2 Removing and installing clutch with SAC pressure plate	41
3.3 Resetting adjuster ring in SAC clutch pressure plate	43
34 - Controls, housing	46
1 Servicing selector mechanism	46
1.1 Installation position of selector mechanism	46
1.2 Exploded view - selector mechanism	48
1.3 Servicing gear lever and gear lever bearing	49
1.4 Servicing selector rod, connecting rod and push rod	50
1.5 Removing and installing gear knob with boot	51
1.6 Removing and installing selector mechanism	52
1.7 Adjusting selector mechanism	57
2 Removing and installing gearbox	60
2.1 Removing gearbox - vehicles with 2.5 ltr. TDI engine	60
2.2 Installing gearbox - vehicles with 2.5 ltr. TDI engine	69
2.3 Removing gearbox - vehicles with 2.7 ltr. TDI engine	75
2.4 Installing gearbox in vehicles with 2.7 ltr. TDI engine	84
3 Transporting gearbox	89
4 Mounting gearbox on assembly stand	90
5 Exploded view - gearbox mounting and tunnel cross member	92
5.1 Removing and installing gearbox mounting and tunnel cross member	92
6 Checking oil level in manual gearbox	95
7 Removing and installing reversing light switch F4	96
8 Renewing oil seal for selector shaft with gearbox installed	97
9 Removing and installing selector shaft	100



10	Removing and installing selector shaft locking bushes (with gearbox installed in vehicle)	101
11	Dismantling and assembling gearbox	104
35	Gears, shafts	105
1	Input shaft	105
2	Pinion shaft	106
39	Final drive - differential	107
1	Renewing flange shaft oil seals (left and right)	107
1.1	Renewing flange shaft oil seal (left-side) with gearbox installed in vehicle	107
1.2	Renewing flange shaft oil seal (right-side) with gearbox installed in vehicle	110
2	Differential	114
2.1	Removing and installing differential	114
2.2	Dismantling and assembling differential	114
3	Adjusting pinion shaft and crown wheel	115