

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location of code letters on gearbox	1
2 Notes on the automatic 6-speed gearbox 09L	2
3 Code letters, gearbox allocation, ratios, equipment	3
4 Rear final drive identification	7
5 Capacities	8
5.1 Capacity of planetary gearbox	8
5.2 Capacity of front final drive	8
5.3 Capacity of transfer box	9
5.4 Capacity of rear final drive	9
6 Notes on tow-starting and towing	10
7 Repair instructions	11
7.1 General repair instructions	11
8 Rules for cleanliness when working on the automatic gearbox	14
32 - Torque converter	15
1 Torque converter	15
1.1 Identification of torque converter	15
1.2 Draining torque converter	15
1.3 Renewing oil seal for torque converter	16
1.4 Checking torque converter	17
1.5 Installing torque converter	17
37 - Controls, housing	19
1	19
2 Servicing selector mechanism	22
2.1 Checking selector mechanism	22
2.2 Exploded view - selector mechanism cover, selector lever handle	24
2.3 Removing and installing selector lever handle	25
2.4 Removing and installing selector mechanism cover	26
2.5 Removing and installing tiptronic switch F189	27
3 Exploded view - dismantling and assembling selector mechanism on vehicles with vehicle ID No. up to 8E_8A 002699	29
3.1 Removing and installing shift unit on vehicles with vehicle ID No. up to 8E_8A 002700 ..	30
3.2 Dismantling and assembling selector mechanism on vehicles with vehicle ID No. up to 8E_8A 002700	33
3.3 Removing and installing selector lever lock solenoid N110 on vehicles with vehicle ID No. up to 8E_8A 002700	36
4 Exploded view - dismantling and assembling selector mechanism on vehicles with vehicle ID No. from 8E_8A 002700 onwards	37
4.1 Removing and installing selector mechanism on vehicles with vehicle ID No. from 8E_8A 002700 onwards	38
4.2 Removing and installing selector lever lock solenoid N110 on vehicles with vehicle ID No. from 8E_8A 002700 onwards	41
5 Exploded view - selector lever cable and locking cable on vehicles with vehicle ID No. up to 8E_8A 002699	42
5.1 Removing and installing selector lever cable on vehicles with 2.0 ltr. TFSI engine with vehicle ID No. up to 8E_8A 002699	43
5.2 Removing and installing selector lever cable on vehicles with 3.2 ltr. FSI engine with vehicle ID No. up to 8E_8A 002699	46
5.3 Removing and installing selector lever cable on vehicles with 4.2 ltr. MPI engine with vehicle ID No. up to 8E_8A 002699	51



5.4	Removing and installing selector lever cable on vehicles with 3.0 ltr. TDI engine with vehicle ID No. up to 8E_8A 002699	55
5.5	Checking and adjusting selector lever cable on vehicles with vehicle ID No. up to 8E_8A 002699	58
5.6	Adjusting selector lever cable to basic setting on vehicles with vehicle ID No. up to 8E_8A 002699	60
5.7	Removing and installing locking cable on vehicles with vehicle ID No. up to 8E_8A 002699	61
5.8	Adjusting locking cable on vehicles with vehicle ID No. up to 8E_8A 002699	63
6	Exploded view - selector lever cable and locking cable on vehicles with vehicle ID No. from 8E_8A 002700 onwards	66
6.1	Removing and installing selector lever cable on vehicles with 2.0 ltr. TFSI engine with vehicle ID No. from 8E_8A 002700 onwards	67
6.2	Removing and installing selector lever cable on vehicles with 3.2 ltr. FSI engine with vehicle ID No. from 8E_8A 002700 onwards	70
6.3	Removing and installing selector lever cable on vehicles with 4.2 ltr. MPI engine with vehicle ID No. from 8E_8A 002700 onwards	75
6.4	Removing and installing selector lever cable on vehicles with 3.0 ltr. TDI engine with vehicle ID No. from 8E_8A 002700 onwards	79
6.5	Checking and adjusting selector lever cable on vehicles with vehicle ID No. from 8E_8A 002700 onwards	83
6.6	Adjusting selector lever cable to basic setting on vehicles with vehicle ID No. from 8E_8A 002700 onwards	84
6.7	Removing and installing locking cable on vehicles with vehicle ID No. from 8E_8A 002700 onwards	86
6.8	Adjusting locking cable on vehicles with vehicle ID No. from 8E_8A 002700 onwards	88
7	Removing and installing gearbox	90
7.1	Removing gearbox - vehicles with 2.0 ltr. TFSI engine	90
7.2	Installing gearbox - vehicles with 2.0 ltr. TFSI engine	99
7.3	Removing gearbox on vehicles with 3.2 ltr. FSI engine	101
7.4	Installing gearbox on vehicles with 3.2 ltr. FSI engine	111
7.5	Removing gearbox on vehicles with 4.2 ltr. MPI engine	114
7.6	Installing gearbox on vehicles with 4.2 ltr. MPI engine	129
7.7	Removing gearbox on vehicles with 3.0 ltr. TDI engine	134
7.8	Installing gearbox on vehicles with 3.0 ltr. TDI engine	144
7.9	Removing and installing gearbox support and gearbox mounting (left and right)	147
7.10	Transporting the automatic gearbox	151
7.11	Securing gearbox to assembly stand	151
8	ATF level in planetary gearbox	153
8.1	Checking and correcting ATF level	153
8.2	Draining ATF and filling up after repairs	157
9	ATF pipes and ATF cooler	160
9.1	Exploded view - ATF cooling pipes on vehicles with 2.0 ltr. TFSI engine	160
9.2	Exploded view - ATF pipes and ATF cooler on vehicles with 3.2 ltr. FSI engine	162
9.3	Exploded view - ATF cooling pipes on vehicles with 4.2 ltr. MPI engine	164
9.4	Exploded view - ATF cooling pipes on vehicles with 3.0 ltr. TDI engine	165
9.5	Removing and installing ATF cooling pipes	166
9.6	Cleaning ATF cooling pipes and ATF cooler	166
38 - Gears, control		168
1	Removing and installing oil pan, ATF strainer and mechatronic unit	168
1.1	Removing and installing oil pan	168
1.2	Removing and installing ATF strainer	169
1.3	Removing and installing mechatronic unit	171
1.4	Removing and installing wiring harness in gearbox	173
39 - Final drive - front differential		175
1	Gear oil level in front final drive	175

1.1	Checking gear oil level in front final drive	175
1.2	Filling up gear oil in front final drive after repairs	176
2	Servicing front final drive	177
2.1	Front final drive - exploded view	177
2.2	Removing and installing flange shaft (left-side)	178
2.3	Removing and installing flange shaft (right-side)	180
2.4	Renewing oil seal for flange shaft (right-side)	181
2.5	Renewing O-ring on cover for final drive	183
2.6	Renewing oil seal for final drive/gearbox housing	184
2.7	Renewing oil seal for selector shaft	187
3	Gear oil level in transfer box	190
3.1	Checking gear oil level in transfer box	190
3.2	Filling up gear oil in transfer box after repairs	190
4	Servicing transfer box	192
4.1	Removing and installing cover for self-locking centre differential	192
4.2	Renewing oil seal for flange shaft (rear)	195