

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on CVT gearbox type "multitronic 01J (front-wheel drive)"	2
3 Code letters, gearbox allocation, ratios, equipment	3
4 Gearbox fluid capacities	8
5 Safety precautions	9
6 Notes on tow-starting and towing	10
7 Repair instructions	11
8 Contact corrosion!	13
9 Rules for cleanliness when working on the gearbox	14
10 Common faults	15
13 - Crankshaft group	16
1 Removing and installing damper unit	16
1.1 Removing and installing damper unit	16
37 - Controls, housing	18
1 Electrical/electronic components and fitting locations	18
2 Servicing selector mechanism (vehicles up to VIN 8E_6A156499)	23
2.1 Checking selector mechanism (vehicles up to VIN 8E_6A156499)	23
2.2 Removing and installing selector mechanism (vehicles up to VIN 8E_6A156499)	25
2.3 Exploded view - Selector lever handle, selector mechanism cover (vehicles up to VIN 8E_6A156499)	28
2.4 Removing and installing selector lever handle (vehicles up to VIN 8E_6A156499)	30
2.5 Removing and installing selector mechanism cover (vehicles up to VIN 8E_6A156499) ..	31
2.6 Removing and installing tiptronic switch F189 (vehicles up to VIN 8E_6A156499)	31
2.7 Exploded view - Dismantling and assembling selector mechanism (vehicles up to VIN 8E_6A156499)	32
2.8 Dismantling and assembling selector mechanism (vehicles up to VIN 8E_6A156499)	34
2.9 Removing and installing selector lever lock solenoid N110 (vehicles up to VIN 8E_6A156499)	36
2.10 Exploded view - Selector lever cable and locking cable (vehicles up to VIN 8E_6A156499)	36
2.11 Removing and installing selector lever cable (vehicles up to VIN 8E_6A156499)	38
2.12 Adjusting selector lever cable (vehicles up to VIN 8E_6A156499)	43
2.13 Adjusting selector lever cable to basic setting (vehicles up to VIN 8E_6A156499)	45
2.14 Removing and installing locking cable (vehicles up to VIN 8E_6A156499)	48
2.15 Adjusting locking cable (vehicles up to VIN 8E_6A156499)	49
3 Servicing selector mechanism (vehicles from VIN 8E_6A156500 onwards)	51
3.1 Checking selector mechanism (vehicles from VIN 8E_6A156500 onwards)	51
3.2 Exploded view - Selector lever handle, selector mechanism cover (vehicles from VIN 8E_6A156500 onwards)	53
3.3 Removing and installing selector lever handle (vehicles from VIN 8E_6A156500 onwards)	54
3.4 Removing and installing selector mechanism cover (vehicles from VIN 8E_6A156500 onwards)	55
3.5 Removing and installing tiptronic switch F189 (vehicles from VIN 8E_6A156500 onwards)	55
3.6 Exploded view - Selector mechanism (vehicles from VIN 8E_6A156500 onwards)	56
3.7 Removing and installing selector mechanism (vehicles from VIN 8E_6A156500 onwards)	57
3.8 Removing and installing selector lever lock solenoid N110 (vehicles from VIN 8E_6A156500 onwards)	60



3.9	Exploded view - Selector lever cable and locking cable (vehicles from VIN 8E_6A156500 onwards)	61
3.10	Removing and installing selector lever cable (vehicles from VIN 8E_6A156500 onwards)	62
3.11	Adjusting selector lever cable (vehicles from VIN 8E_6A156500 onwards)	66
3.12	Adjusting selector lever cable to basic setting (vehicles from VIN 8E_6A156500 onwards)	67
3.13	Removing and installing locking cable (vehicles from VIN 8E_6A156500 onwards)	70
3.14	Adjusting locking cable (vehicles from VIN 8E_6A156500 onwards)	71
4	Removing and installing gearbox	73
4.1	Removing gearbox on vehicles with 1.8 ltr. turbo engine (also for Audi Cabriolet)	73
4.2	Removing gearbox on vehicles with 2.0 ltr. normally aspirated engine (also for Audi Cabriolet)	83
4.3	Removing gearbox on vehicles with 2.0 ltr. TFSI engine (also for Audi Cabriolet)	91
4.4	Removing gearbox - vehicles with 6-cyl. 2.4 ltr. or 3.0 ltr. petrol engine (also for Audi Cabriolet)	101
4.5	Removing gearbox - vehicles with 6-cyl. 3.2 ltr. FSI petrol engine (also for Audi Cabriolet)	114
4.6	Removing gearbox on vehicles with 4-cyl. TDI engine (also for Audi Cabriolet)	123
4.7	Removing gearbox on vehicles with 6-cyl. TDI engine (also for Audi Cabriolet)	132
4.8	Installing gearbox	142
4.9	Transporting gearbox	147
4.10	Securing gearbox to engine and gearbox support	148
4.11	Removing and installing gearbox mounting, gearbox support and tunnel cross member	148
5	ATF in gearbox	151
5.1	Checking and correcting ATF level	151
5.2	Changing ATF or filling up after performing repairs	157
6	Servicing ATF pipes, ATF cooler and additional ATF filter	160
6.1	ATF pipes, ATF cooler and additional ATF filter on vehicles with 1.8 ltr. turbo engine	160
6.2	ATF pipes, ATF cooler and additional ATF filter on vehicles with 2.0 ltr. normally aspirated engine	163
6.3	ATF pipes, ATF cooler and additional ATF filter on vehicles with 2.0 ltr. TFSI engine	164
6.4	ATF pipes, ATF cooler and additional ATF filter on vehicles with 6-cyl. petrol engine	165
6.5	ATF pipes, ATF cooler and additional ATF filter on vehicles with 4-cyl. TDI engine	166
6.6	ATF pipes, ATF cooler and additional ATF filter on vehicles with 6-cyl. TDI engine	168
6.7	Cleaning ATF pipes and ATF cooler	169
6.8	Additional ATF filter	170
6.9	Removing and installing additional ATF filter on vehicles with 1.8 ltr. turbo engine, 2.0 ltr. TFSI engine and 4-cyl. TDI engine	170
6.10	Removing and installing additional ATF filter on vehicles with 2.0 ltr. normally aspirated engine and 6-cyl. petrol engine	172
6.11	Removing and installing additional ATF filter on vehicles with 6-cyl. TDI engine	175
6.12	Removing and installing ATF breather pipe	177
6.13	Renewing oil seal for selector shaft	177
38	Gears, control	178
1	Dismantling and assembling gearbox	178
1.1	Removing and installing end cover	178
1.2	Removing and installing automatic gearbox control unit J217	183
1.3	Cleaning selector shaft	183
1.4	Removing and installing hydraulic control unit	184
1.5	Removing and installing input shaft	184
1.6	Renewing oil seal for input shaft	184
39	Final drive - differential	185
1	Gear oil in front final drive	185
1.1	Checking gear oil level in front final drive	185

2	Servicing front final drive	187
2.1	Removing and installing flange shaft (left-side)	187
2.2	Removing and installing flange shaft (right-side)	189
2.3	Removing and installing cover for front final drive	191
2.4	Renewing oil seal for flange shaft (left-side)	192
2.5	Renewing oil seal for flange shaft (right-side) and grooved ball bearing	192
2.6	Renewing oil seal for pinion shaft	192