

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 General repair instructions	1
1.2 Special tools	3
2 Rules for cleanliness when working on the automatic gearbox	12
3 Frequently occurring faults	13
3.1 No power transmitted in any gear	13
3.2 Gearshift jolts; individual gears slipping; gearshifts take too long	14
3.3 Gearshift jolts, power transmission problems in 4th and 5th gear	15
3.4 ATF leaks between engine and gearbox	15
3.5 Noise while driving (changes with road speed)	16
32 - Torque converter	17
1 Torque converter	17
1.1 Checking torque converter lock-up clutch	17
1.2 Draining torque converter	19
1.3 Checking torque converter	19
37 - Controls, housing	21
1 Securing gearbox to assembly stand	21
2 Dismantling and assembling planetary gearbox	22
2.1 Planetary gearbox - exploded view of components	22
2.2 Dismantling and assembling planetary gearbox	24
3 Dismantling and assembling body "I"	55
3.1 Body "I" - exploded view of components	55
3.2 Dismantling body "I"	56
3.3 Clutch "F" - exploded view of components	57
3.4 Dismantling and assembling clutch "F"	58
3.5 Clutch "D/G" with freewheel - exploded view of components	61
3.6 Dismantling and assembling clutch "D/G" with freewheel	63
3.7 Planetary drive "III" - exploded view of components	72
3.8 Dismantling and assembling planetary drive "III"	74
3.9 Assembling body "I"	74
4 Dismantling and assembling body "II"	76
4.1 Body "II" - exploded view of components	76
4.2 Dismantling body "II"	77
4.3 Clutch "B" - exploded view of components	78
4.4 Dismantling and assembling clutch "B"	79
4.5 Clutch "A" - exploded view of components	83
4.6 Dismantling and assembling clutch "A"	84
4.7 Clutch "E" - exploded view of components	89
4.8 Dismantling and assembling clutch "E"	90
4.9 Assembling body "II"	95
5 Dismantling and assembling clutch "C"	97
5.1 Clutch "C" - exploded view of components	97
5.2 Dismantling and assembling clutch "C"	98
38 - Gears, control	103
1 Dismantling and assembling ATF supply unit	103
1.1 ATF supply unit - exploded view of components	103
1.2 Removing and installing complete ATF supply unit (gearbox not dismantled)	104
1.3 Removing and installing ATF pump in housing of ATF supply unit	119



1.4	Removing and installing housing for ATF supply unit and stator shaft	123
1.5	Removing and installing stator shaft	127
1.6	Renewing oil seal for ATF pump	128
2	Performing servicing work with gearbox installed	129
2.1	Removing and installing valve body	129
2.2	Removing and installing internal oil pipe	132
2.3	Removing and installing gearbox speed sender G38 / gearbox output speed sender G195	133
2.4	Removing and installing gearbox input speed sender G182 - gearbox with hydraulic control type "E17"	134
2.5	Removing and installing gearbox input speed sender G182 - gearbox with hydraulic control type "E18/2"	135
2.6	Removing and installing wiring harness in gearbox	136
3	Assessment of wear on gearbox components	138
3.1	Assessment of wear by checking ATF for colour and contamination	138
3.2	Clutch "F"	138
3.3	Clutch "D/G" with freewheel	140
3.4	Planetary drive "III"	143
3.5	Clutch "B"	145
3.6	Clutch "A"	147
3.7	Clutch "E"	149
3.8	Clutch "C"	152
3.9	ATF supply unit	154
39	Final drive - front differential	158
1	Servicing front axle drive and transfer box	158
1.1	Removing and installing transfer box with Torsen differential	158
1.2	Front axle drive and transfer box - exploded view of components	158
1.3	Renewing oil seal for output flange for propshaft	162
1.4	Renewing oil seal in intermediate flange for front axle drive	162
1.5	Renewing oil seal in input pinion	163
1.6	Renewing needle bearing for spur gear 2	164