

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Technical data</b> .....	<b>1</b>
1.1 Engine number .....	1
1.2 Engine data .....	1
<b>2 Safety precautions</b> .....	<b>3</b>
2.1 Working on the fuel system .....	3
2.2 Procedure before opening high-pressure section of injection system .....	3
2.3 Working on the cooling system .....	4
2.4 Using testers and measuring instruments during a road test .....	4
2.5 Working on the exhaust system .....	4
<b>3 General repair instructions</b> .....	<b>5</b>
3.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger .....	5
3.2 Checking fuel system for leaks .....	5
3.3 Foreign particles in engine .....	5
3.4 Contact corrosion! .....	5
3.5 Routing and attachment of pipes, hoses and wiring .....	6
3.6 Checking vacuum system .....	6
3.7 Installing radiators, condensers and charge air coolers .....	6
<b>10 - Removing and installing engine</b> .....	<b>8</b>
<b>1 Removing and installing engine</b> .....	<b>8</b>
1.1 Removing engine .....	8
1.2 Securing engine to assembly stand .....	21
1.3 Installing engine .....	22
<b>2 Overview of fitting locations</b> .....	<b>27</b>
<b>13 - Crankshaft group</b> .....	<b>35</b>
<b>1 Dismantling and assembling engine</b> .....	<b>35</b>
1.1 Moving lock carrier to service position .....	35
1.2 Poly V-belt - exploded view .....	37
1.3 Routing of poly V-belt .....	39
1.4 Removing and installing poly V-belt .....	39
1.5 Removing and installing crankshaft pulley .....	40
1.6 Removing and installing bracket for ancillaries .....	41
<b>2 Removing and installing sealing flanges and flywheel/drive plate</b> .....	<b>46</b>
2.1 Renewing crankshaft oil seal - pulley end .....	47
2.2 Removing and installing sealing flange (front) .....	50
2.3 Removing and installing dual mass flywheel/ drive plate .....	54
<b>3 Removing and installing crankshaft</b> .....	<b>58</b>
3.1 Extracting and driving in needle bearing for crankshaft .....	60
3.2 Crankshaft dimensions .....	61
3.3 Removing and installing chain sprocket .....	62
<b>4 Dismantling and assembling pistons and conrods</b> .....	<b>64</b>
4.1 Piston and cylinder dimensions .....	66
<b>15 - Cylinder head, valve gear</b> .....	<b>67</b>
<b>1 Toothed belt drive</b> .....	<b>67</b>
1.1 Toothed belt drive - exploded view .....	67
1.2 Removing and installing toothed belt .....	69
<b>2 Removing and installing cylinder head</b> .....	<b>75</b>
2.1 Cylinder head - exploded view .....	75



2.2	Removing and installing camshaft control valve 1 N205	77
2.3	Removing and installing cylinder head cover	79
2.4	Removing cylinder head	81
2.5	Checking compression	90
<b>3</b>	<b>Servicing valve gear</b>	<b>93</b>
3.1	Valve gear - exploded view	93
3.2	Removing and installing camshaft adjuster	95
3.3	Removing and installing camshafts	99
3.4	Renewing valve stem oil seals with cylinder head installed	101
3.5	Renewing valve stem oil seals with cylinder head removed	105
3.6	Checking valve guides	109
3.7	Renewing exhaust camshaft oil seal	110
<b>17</b>	<b>- Lubrication</b>	<b>115</b>
<b>1</b>	<b>Removing and installing parts of lubrication system</b>	<b>115</b>
1.1	Part I: Sump, balance shaft assembly - exploded view	115
1.2	Part II: Balance shaft assembly with oil pump - exploded view	117
1.3	Removing and installing sump	119
1.4	Removing and installing balance shaft assembly with oil pump	127
<b>2</b>	<b>Oil filter bracket - exploded view</b>	<b>132</b>
2.1	Draining oil filter housing	133
2.2	Checking oil pressure and oil pressure switch	134
2.3	Removing and installing engine oil cooler	136
2.4	Removing and installing oil filter bracket	138
<b>19</b>	<b>- Cooling</b>	<b>143</b>
<b>1</b>	<b>Removing and installing parts of cooling system</b>	<b>143</b>
1.1	Diagram of coolant hose connections	143
1.2	Draining and filling cooling system	145
1.3	Thermostat - exploded view	149
1.4	Removing and installing thermostat	150
1.5	Removing and installing coolant pump	153
1.6	Removing and installing coolant pipes (at side)	156
1.7	Removing and installing radiator	158
1.8	Removing and installing radiator cowl	163
1.9	Removing and installing radiator fan	164
1.10	Renewing radiator fan motor	164
1.11	Checking cooling system for leaks	165
<b>21</b>	<b>- Turbocharging/supercharging</b>	<b>168</b>
<b>1</b>	<b>Turbocharger</b>	<b>168</b>
1.1	Fitting hose connections with plug-in connectors	168
1.2	Turbocharger - exploded view	169
1.3	Removing and installing turbocharger	173
1.4	Checking vacuum unit for turbocharger	177
1.5	Removing and installing vacuum unit for turbocharger	179
1.6	Adjusting vacuum unit for turbocharger	180
1.7	Charge air cooling - exploded view	184
1.8	Removing and installing charge air coolers (left and right)	185
1.9	Removing and installing charge pressure sender G31	186
<b>26</b>	<b>- Exhaust system</b>	<b>187</b>
<b>1</b>	<b>Removing and installing parts of exhaust system</b>	<b>187</b>
1.1	Silencers - exploded view	187
1.2	Separating centre and rear silencers	189
1.3	Removing and installing front exhaust pipe	191

1.4	Removing and installing catalytic converter .....	191
1.5	Stress-free alignment of exhaust system .....	193
1.6	Checking exhaust system for leaks .....	195