

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
4 General repair instructions	5
4.1 Rules for cleanliness	5
4.2 Checking for leaks in the fuel system	5
4.3 Contact corrosion!	5
10 - Removing and installing engine	6
1 Removing engine - vehicles with manual gearbox	6
1.1 Removing engine	6
1.2 Separating engine and gearbox	27
1.3 Securing engine to engine and gearbox stand	31
1.4 Installing engine	34
2 Removing and installing engine - vehicles with automatic gearbox	42
2.1 Removing engine - vehicles with automatic gearbox	42
2.2 Separating engine and gearbox	63
2.3 Securing engine to engine and gearbox stand	70
2.4 Installing engine	72
13 - Crankshaft group	79
1 Dismantling and assembling engine	79
1.1 Lock carrier in service position - exploded view of components	79
1.2 Moving lock carrier into service position	79
2 Servicing work on pulley end	83
2.1 Poly V-belt drive for alternator - exploded view of components	83
2.2 Removing and installing poly V-belt	83
2.3 Removing and installing vibration damper	85
2.4 Renewing crankshaft oil seal (pulley end)	86
3 Servicing work on timing chain end	89
3.1 Dual-mass flywheel - exploded view of components	89
3.2 Removing and installing dual-mass flywheel	89
3.3 Extracting and driving in needle bearing for dual-mass flywheel	91
3.4 Drive plate - exploded view of components	92
3.5 Removing and installing drive plate	93
3.6 Renewing crankshaft oil seal (timing chain end)	94
3.7 Timing chain covers - exploded view of components	95
3.8 Removing and installing all timing chain covers	97
3.9 Camshaft timing chains - exploded view of components	108
3.10 Removing and installing camshaft timing chains	112
3.11 Detaching camshaft timing chains from camshafts	122
3.12 Drive chain for valve gear - exploded view of components	140
3.13 Removing and installing drive chain for valve gear	141
3.14 Chain for auxiliary drives - exploded view of components	143
3.15 Removing and installing chain for auxiliary drives	143
3.16 Auxiliary drives - exploded view of components	144
3.17 Renewing oil seals for auxiliary drives	146
3.18 Removing and installing spur gear drive	147
4 Removing and installing crankshaft	153
4.1 Crankshaft - exploded view of components	153
4.2 Allocation of main bearing shells for new crankshafts	156



4.3	Allocation of main bearing shells on used and machined crankshafts	157
4.4	Crankshaft dimensions	158
4.5	Measuring axial clearance	158
4.6	Measuring radial clearance	159
5	Dismantling and assembling pistons and conrods	160
5.1	Pistons and conrods - exploded view of components	160
5.2	Piston and cylinder dimensions	163
5.3	Measuring radial clearance of conrods	163
15	Cylinder head, valve gear	164
1	Removing and installing cylinder head	164
1.1	Cylinder head - exploded view of components	164
1.2	Removing and installing cylinder head cover (left-side)	165
1.3	Removing and installing cylinder head cover (right-side)	168
1.4	Removing and installing cylinder head	171
2	Removing and installing intake manifold	176
2.1	Intake manifold (vehicles with fuel return line) - exploded view of components	176
2.2	Intake manifold (vehicles without fuel return line) - exploded view of components	177
2.3	Removing and installing intake manifold	178
2.4	Checking compression	182
3	Servicing valve gear	188
3.1	Valve gear - exploded view of components	188
3.2	Removing and installing camshafts	189
3.3	Checking axial clearance of camshafts	191
3.4	Removing and installing roller rocker fingers	192
3.5	Renewing valve stem oil seals	192
3.6	Checking valve guides	195
3.7	Checking valves	196
3.8	Valve dimensions	197
3.9	Machining valve seats	197
17	Lubrication	200
1	Removing and installing parts of lubrication system	200
1.1	Oil pump, sump (bottom section) - exploded view of components	200
1.2	Removing and installing sump (bottom section)	201
1.3	Removing and installing oil pump	205
1.4	Sump (top section) - exploded view of components	208
1.5	Removing and installing sump (top section)	209
1.6	Oil retention valve and spray nozzle valve - exploded view of components	216
1.7	Removing and installing oil retention valves and spray nozzle valve	216
1.8	Oil filter housing - exploded view of components	217
1.9	Removing and installing oil filter housing	218
1.10	Removing and installing oil cooler	219
1.11	Removing and installing oil pressure switch F1	220
1.12	Checking oil pressure and oil pressure switch	221
1.13	Engine oil	222
1.14	Checking oil level	222
19	Cooling	224
1	Removing and installing parts of cooling system	224
1.1	Diagram of coolant hose connections	224
1.2	Draining and filling cooling system	226
1.3	Coolant pump and thermostat - exploded view of components	230
1.4	Removing and installing coolant pump	232
1.5	Removing and installing thermostat	233

1.6	Checking thermostat	234
1.7	Coolant pipes - exploded view of components	235
1.8	Removing and installing coolant pipe (front)	236
1.9	Removing and installing coolant pipe (rear)	237
1.10	Removing and installing coolant pipe (left-side)	240
1.11	Removing and installing coolant pipe (right-side)	242
1.12	Removing and installing radiator	248
1.13	Removing and installing auxiliary radiator (left-side)	252
1.14	Removing and installing auxiliary radiator (right-side)	253
1.15	Checking cooling system for leaks	255
1.16	Removing and installing radiator fan V7 (left side)	257
1.17	Removing and installing radiator fan 2 V177 (right side)	258
26 - Exhaust system		260
1	Removing and installing parts of exhaust system	260
1.1	Exhaust system - exploded view of components	260
1.2	Separating centre and rear silencers	263
1.3	Removing and installing front exhaust pipe (left-side) with starter catalytic converter and main catalytic converter (vehicles with manual gearbox)	264
1.4	Removing and installing front exhaust pipe (right-side) with starter catalytic converter and main catalytic converter (vehicles with manual gearbox)	269
1.5	Removing and installing front exhaust pipe (left-side) with starter catalytic converter and main catalytic converter (vehicles with automatic gearbox)	274
1.6	Removing and installing front exhaust pipe (right-side) with starter catalytic converter and main catalytic converter (vehicles with automatic gearbox)	279
1.7	Removing and installing exhaust manifold (left-side)	284
1.8	Removing and installing exhaust manifold (right-side)	287
1.9	Stress-free alignment of exhaust system	288
1.10	Checking exhaust system for leaks	290
2	Servicing secondary air system	291
2.1	Principle and function	291
2.2	Secondary air system - overview	292
2.3	Removing and installing secondary air pump	293
2.4	Checking combination valve for secondary air system for proper operation and leakage ..	294
2.5	Removing and installing combination valve for secondary air system (left-side)	296
2.6	Removing and installing combination valve for secondary air system (right-side)	298
3	Exhaust flap	300
3.1	Checking exhaust flap	300
3.2	Checking vacuum unit for exhaust flap	301